

avenlur

Sensory Glide by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM

WARNING

Adult assembly required.

WARNING

Maximum user weight: 110 lbs (50kg) per child.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY. SAVE THIS SHEET FOR FUTURE REFERENCE.

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.
2. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment (examples: ropes, clothesline, pet leashes, cables and chain, etc) as they may cause a strangulation hazard or any other hazard.
3. Never allow children to use the equipment in a manner other than intended.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:


1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

CONTACT US BEFORE ASSEMBLY IF:


- You need assistance with assembly
- You need a replacement part due to a missing part or defective part

Call us at 888-697-3931 M-F 9AM-5PM PT


or email us at info@avenlur.com

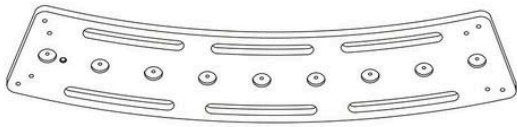


① ×2 39.5in

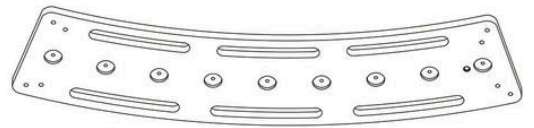

② ×2 39.5in

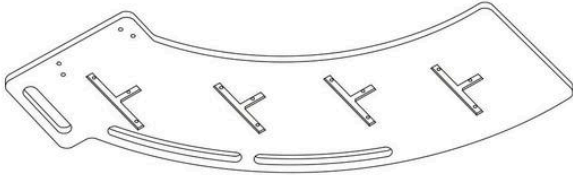

③ ×1 44in

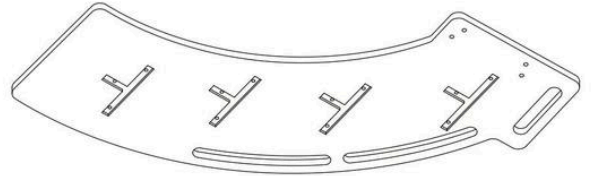

④ ×1 44in



⑤ ×3 21.1in



 
⑥ ×1 21.1in



⑦ ×18 19.7in



⑧ ×4 21.1in



⑨ ×2



⑩ ×18 19in



M7*40

Ⓐ ×60



M6*30

Ⓑ ×4





M6*20 M6*30

Ⓒ ×24



4mm

Ⓓ ×2

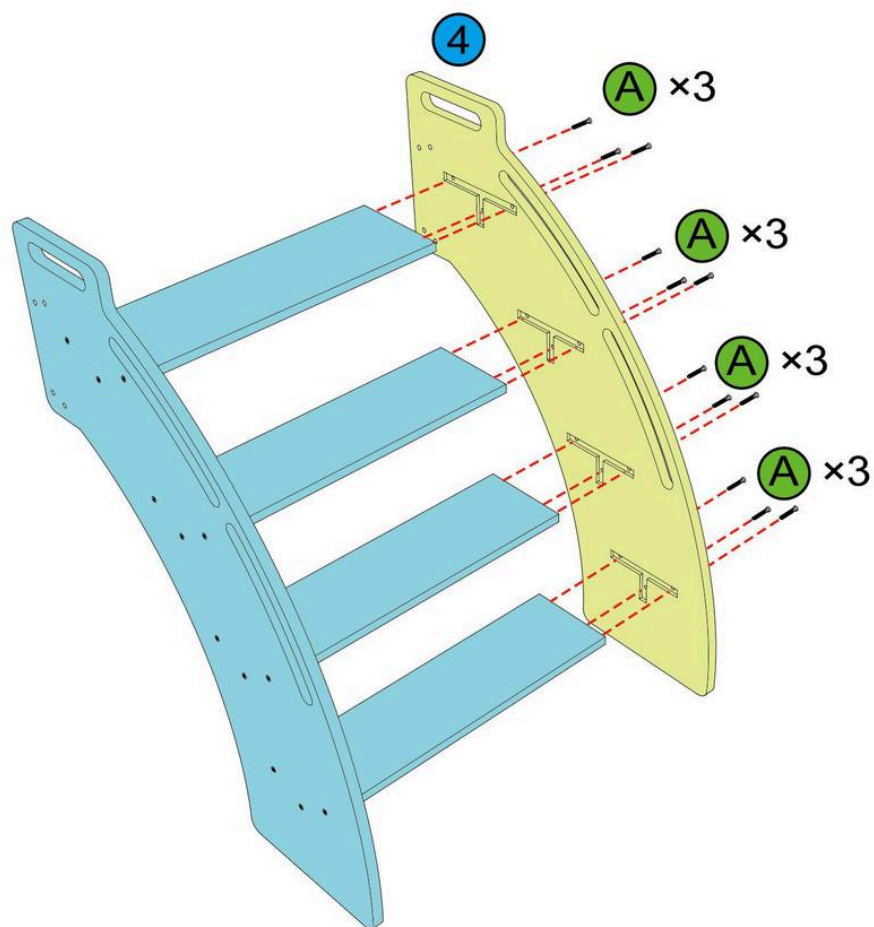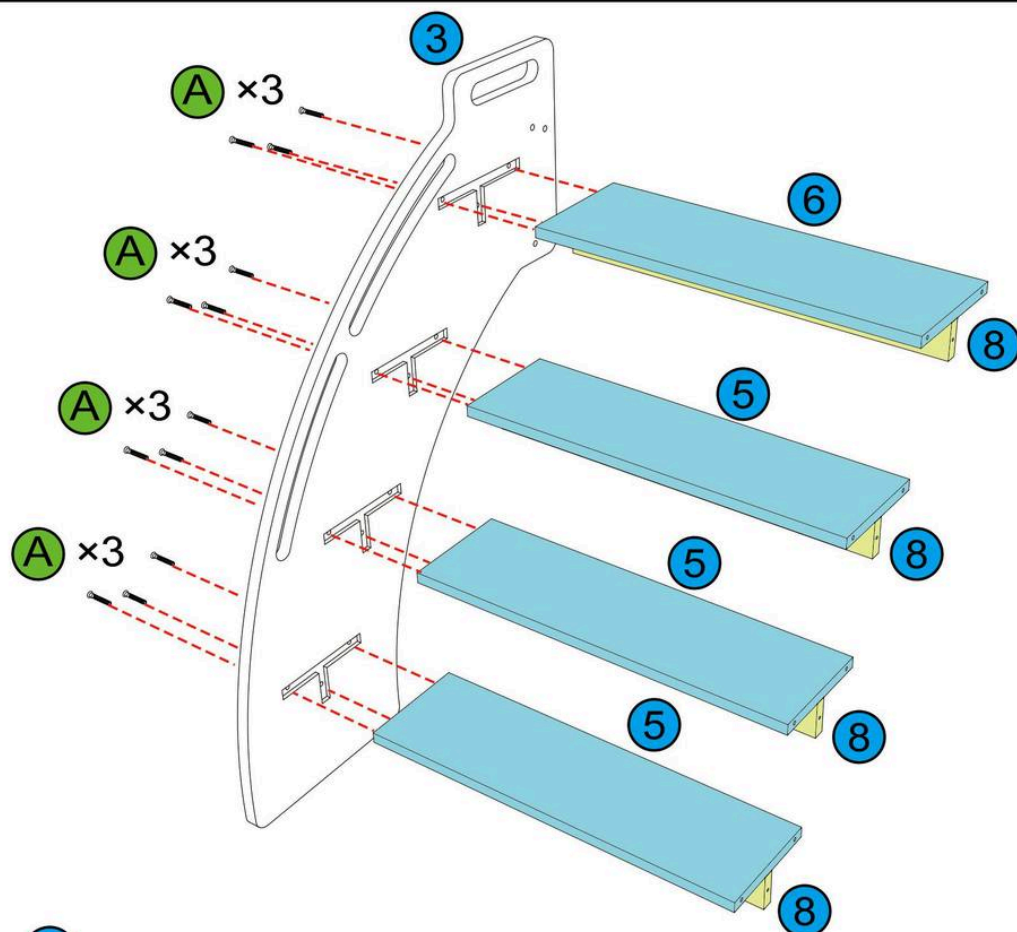


Insert screws and tighten, but do not tighten all the way until you have done the same on the other side.


A		24
	M7*40	
D		1
	4mm	

Once both sides are in, tighten all screws

02-1

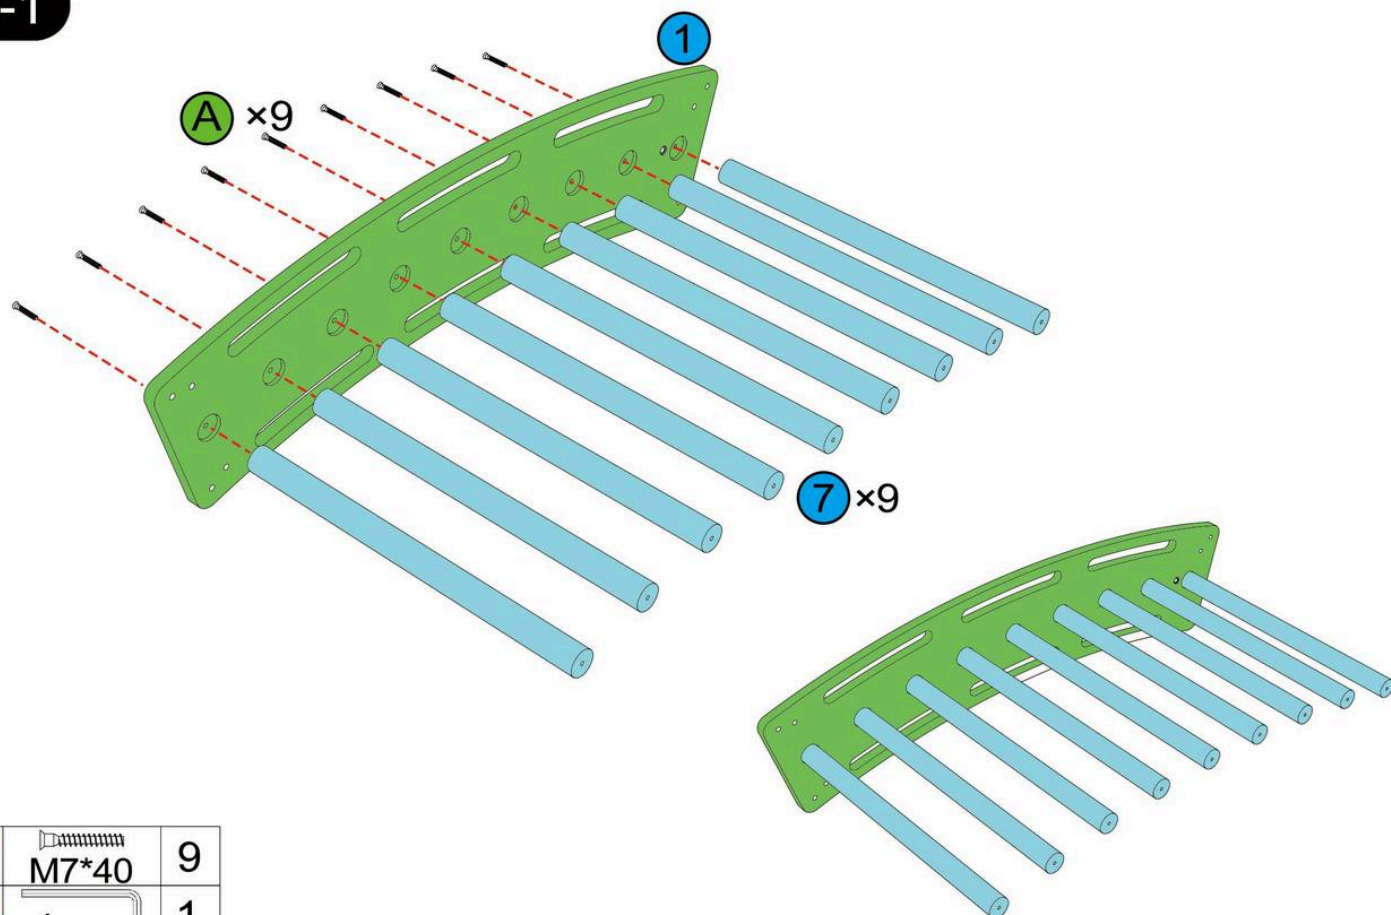



02-2

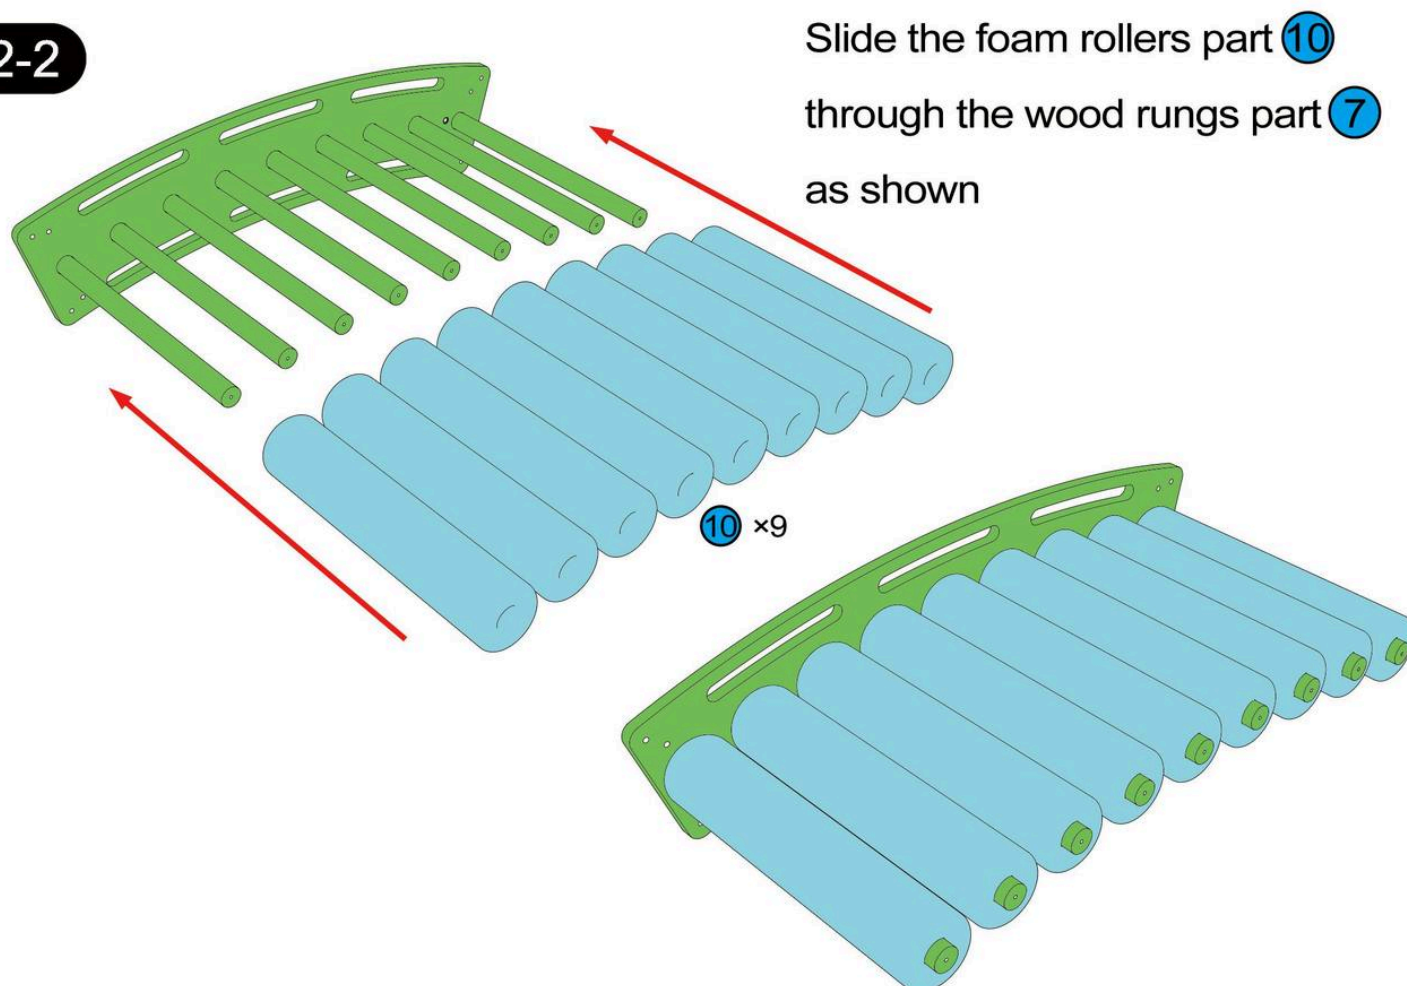

02-3

 02-2

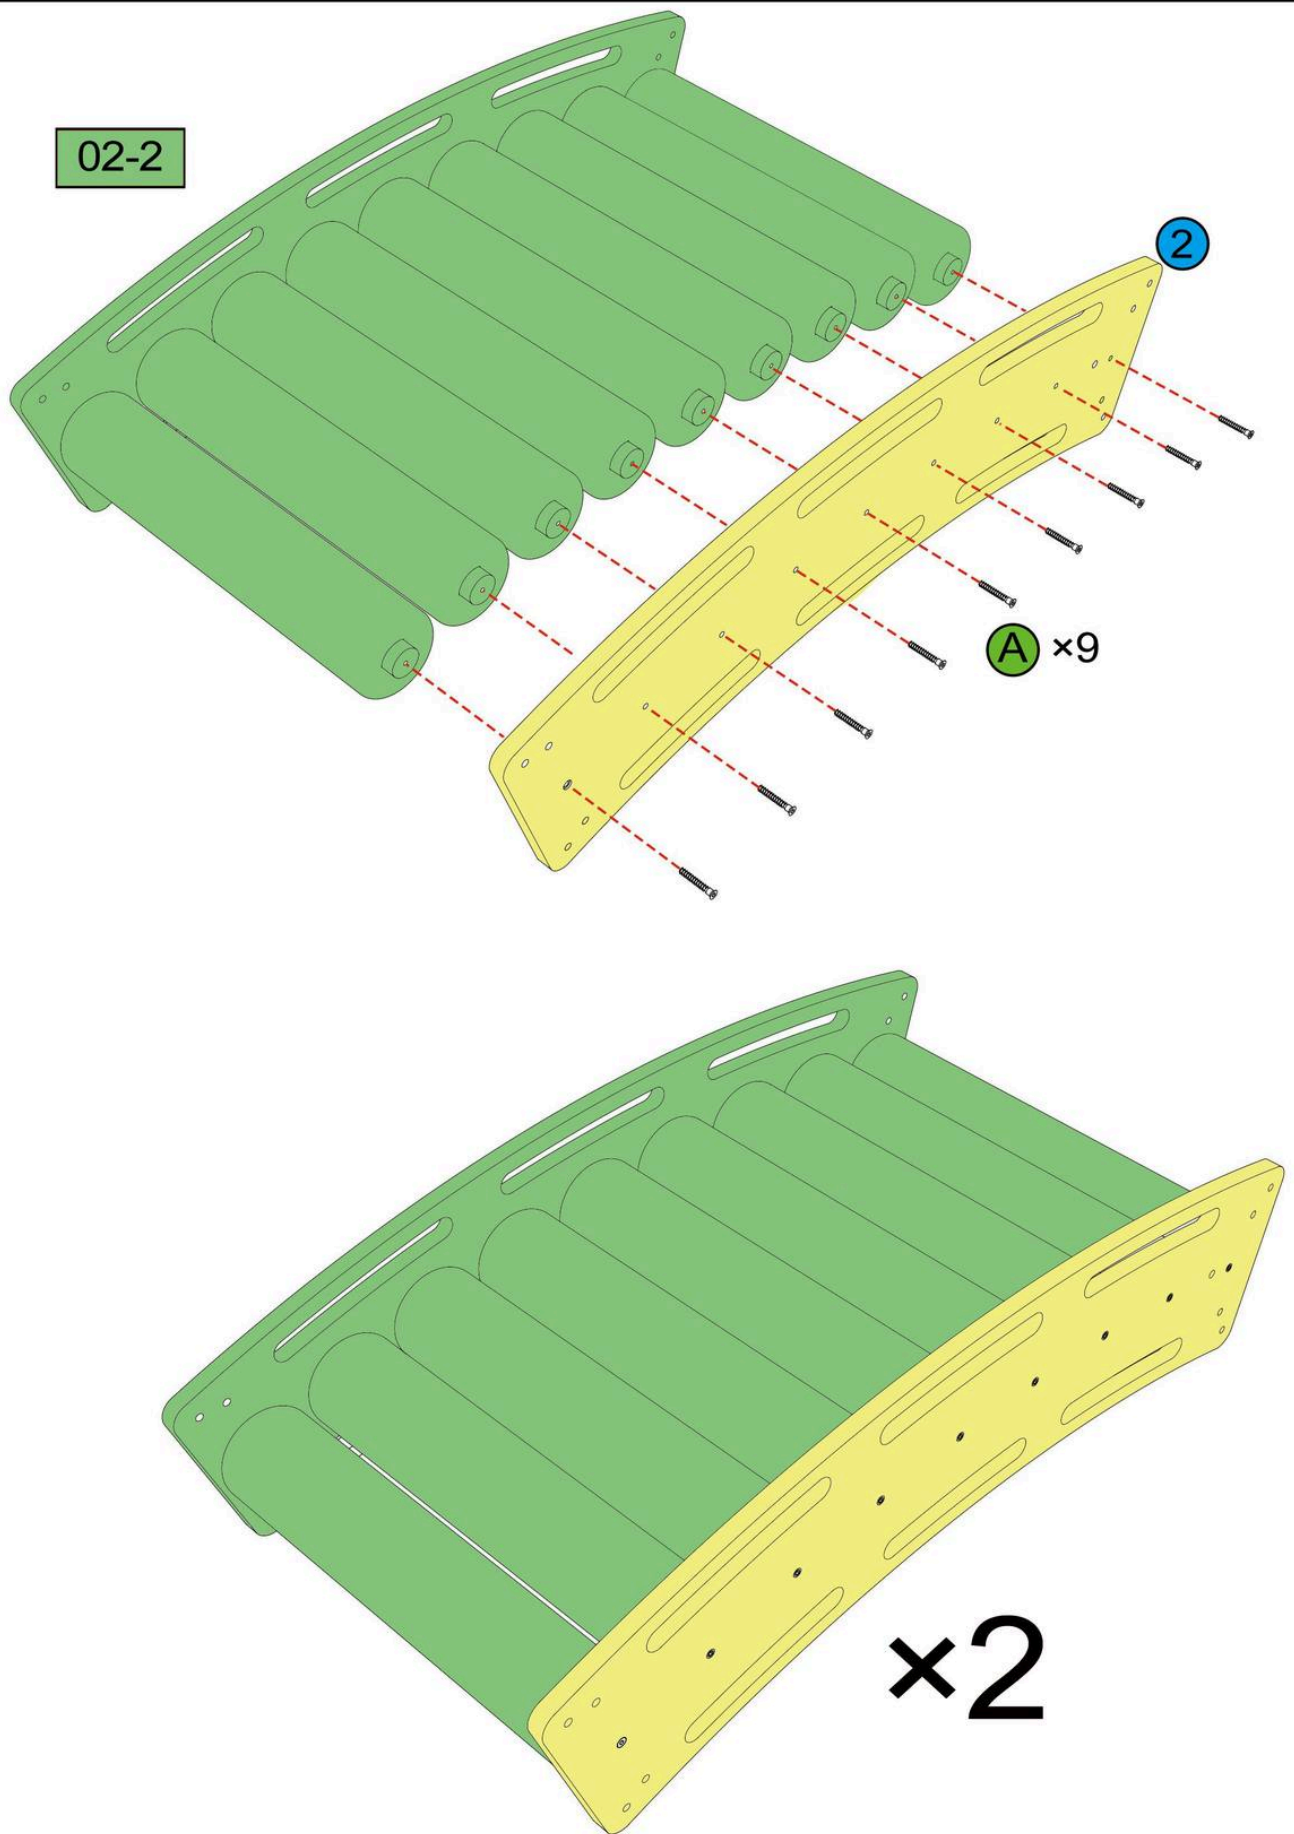

A		9
D		1
	M7*40	
	4mm	





Once you've completed 02-1, 02-2, 02-3 - repeat the same steps for the second half of the slide

03-1

Screw **C** screws through part **9** and into the bolts on the other side

Screw **B** screws on both sides of part **9**


Do not tighten any screws until all are in place

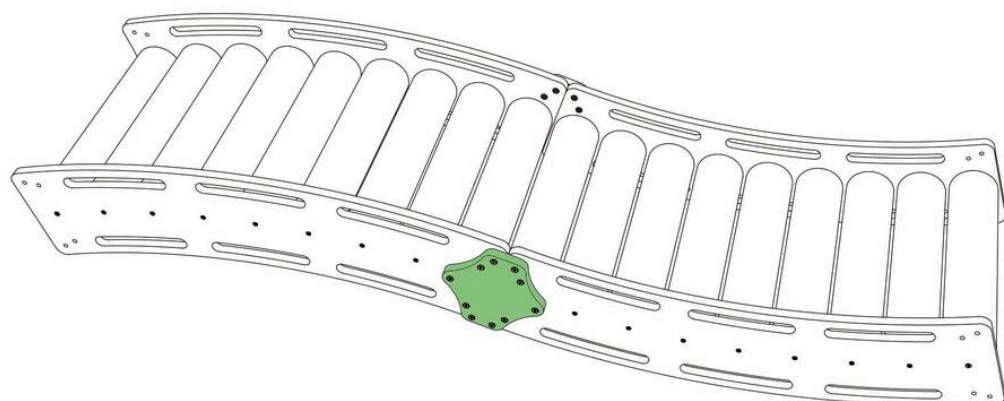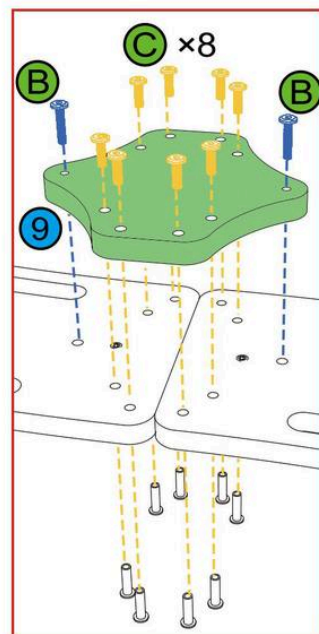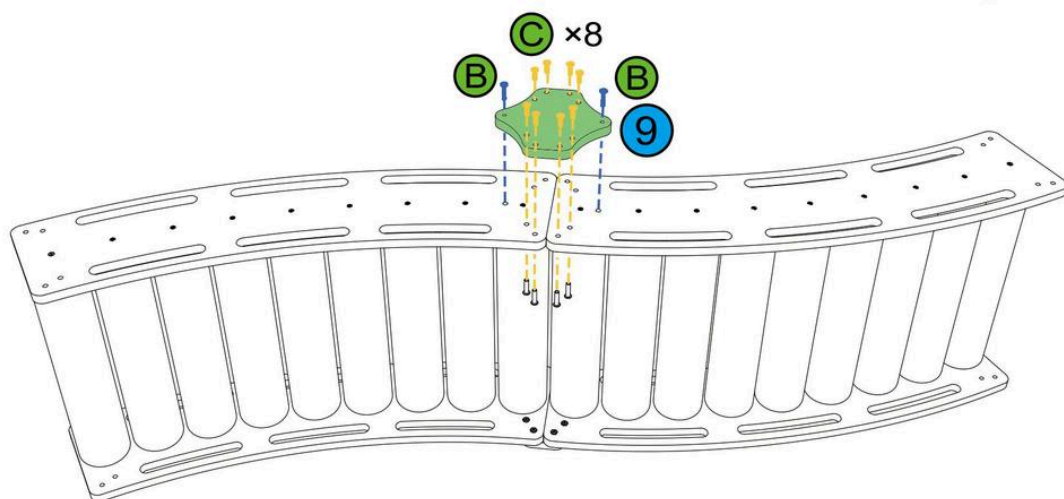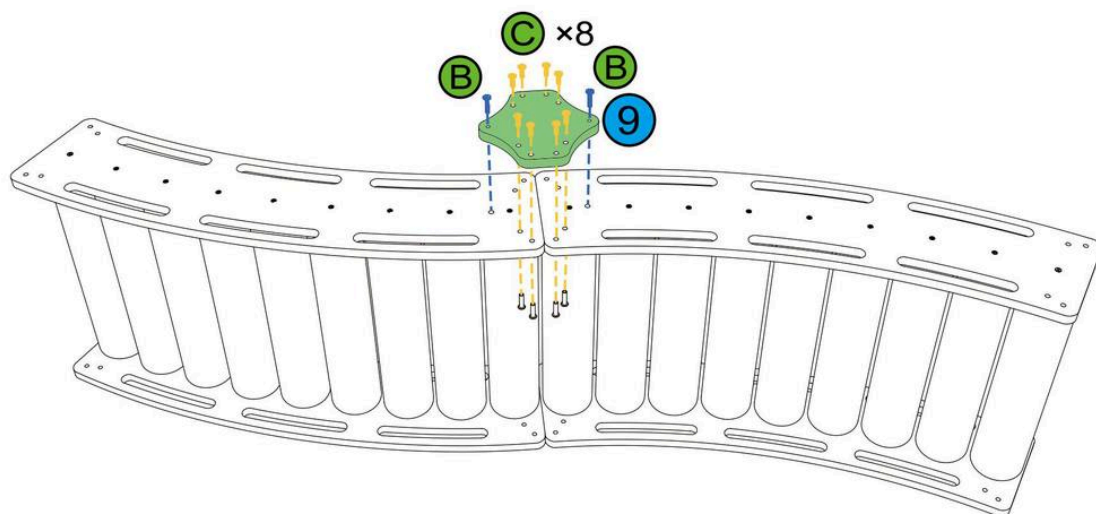



B		4
C		16
D		2

04-1

Note: Do not tighten screws until all screws are in place.

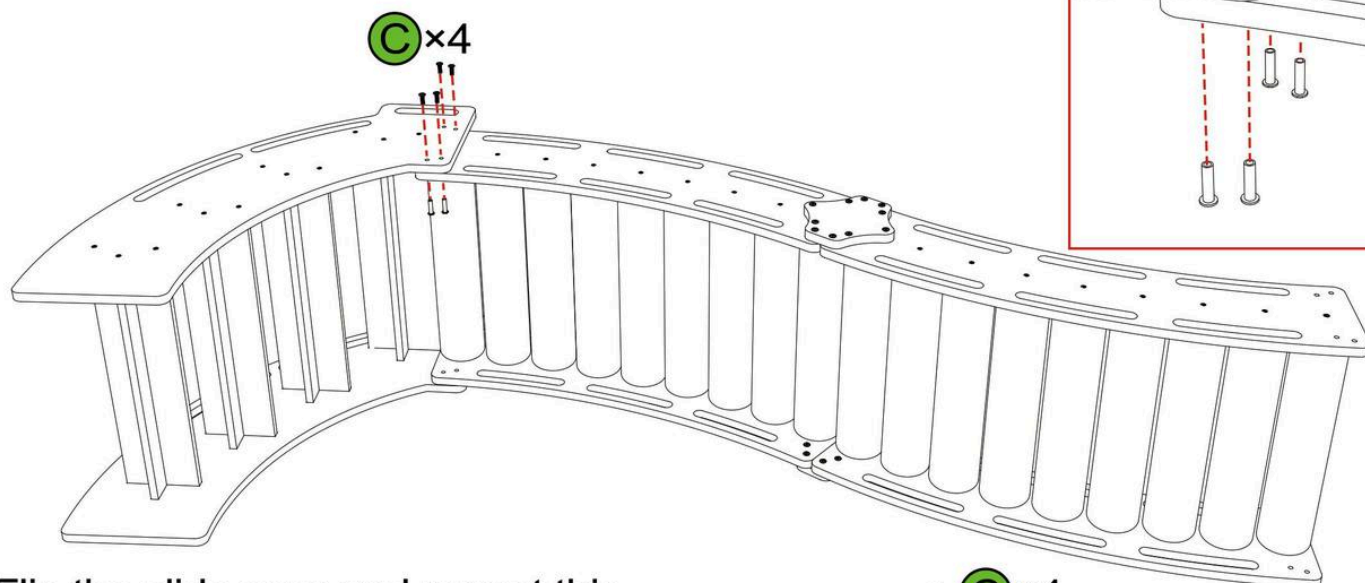


Flip the slide over and repeat this process on the other side of the slide

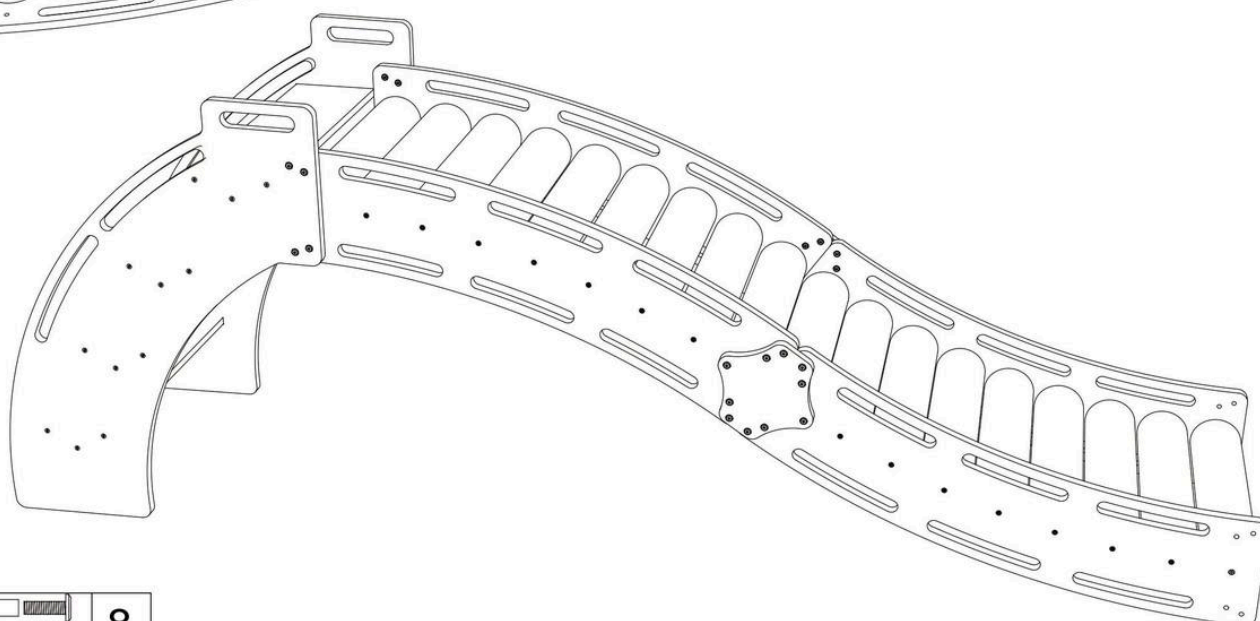
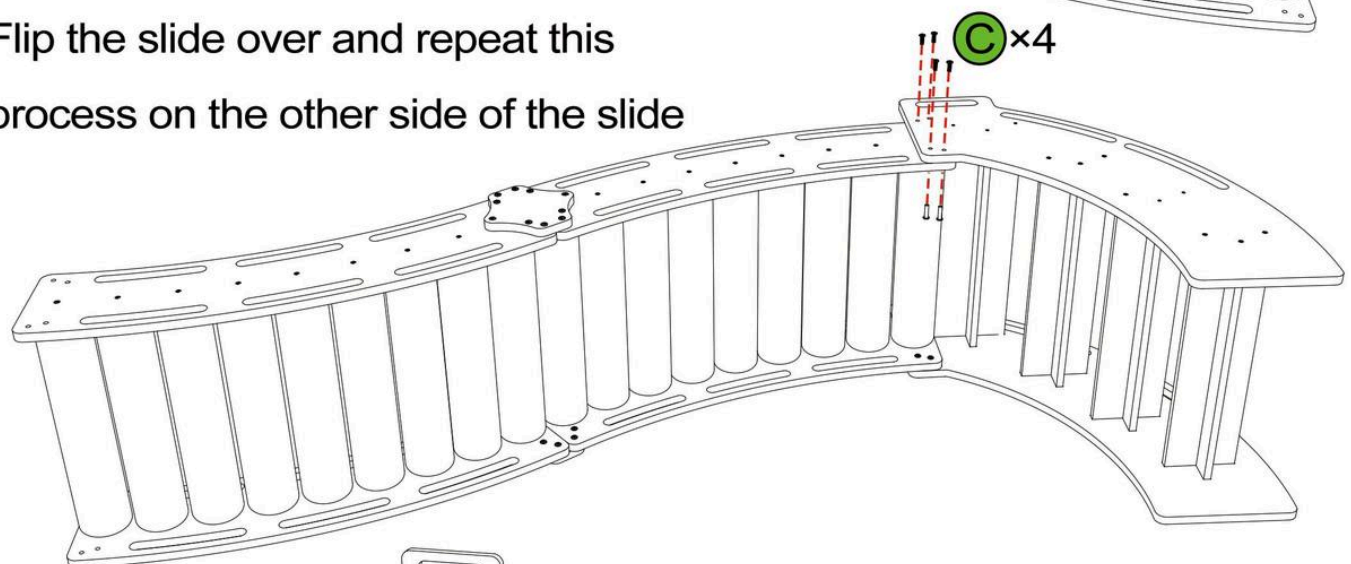



C		8
	M6*20 M6*30	
D		2
	4mm	

Convert Slide to Rocker

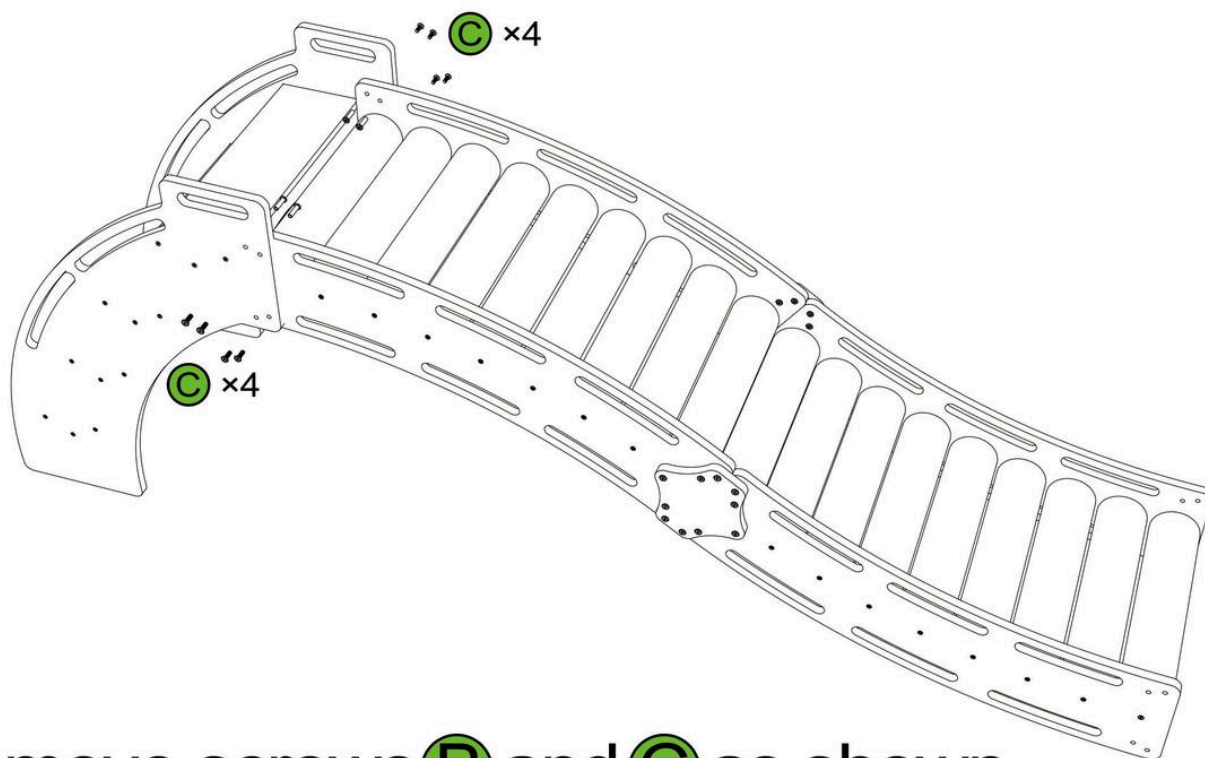


Remove screws **B** and **C** as shown.

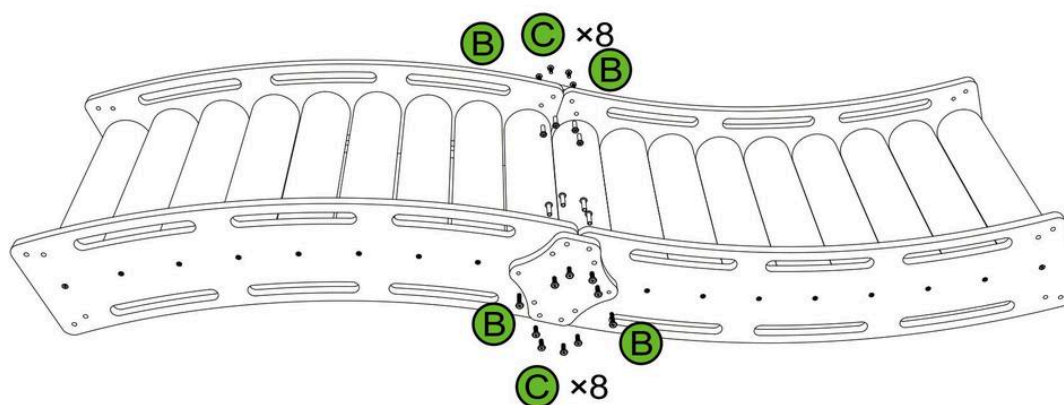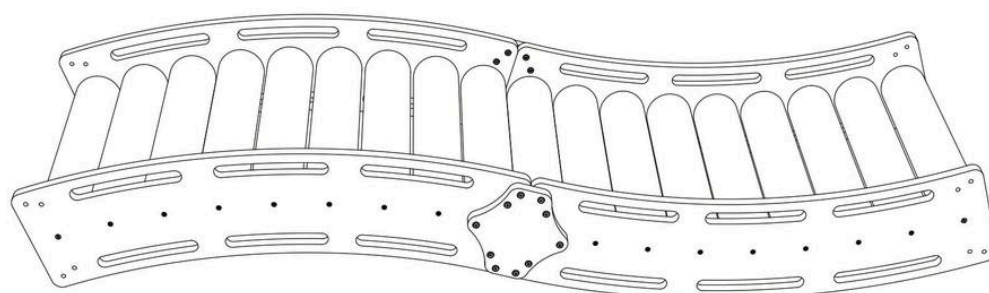

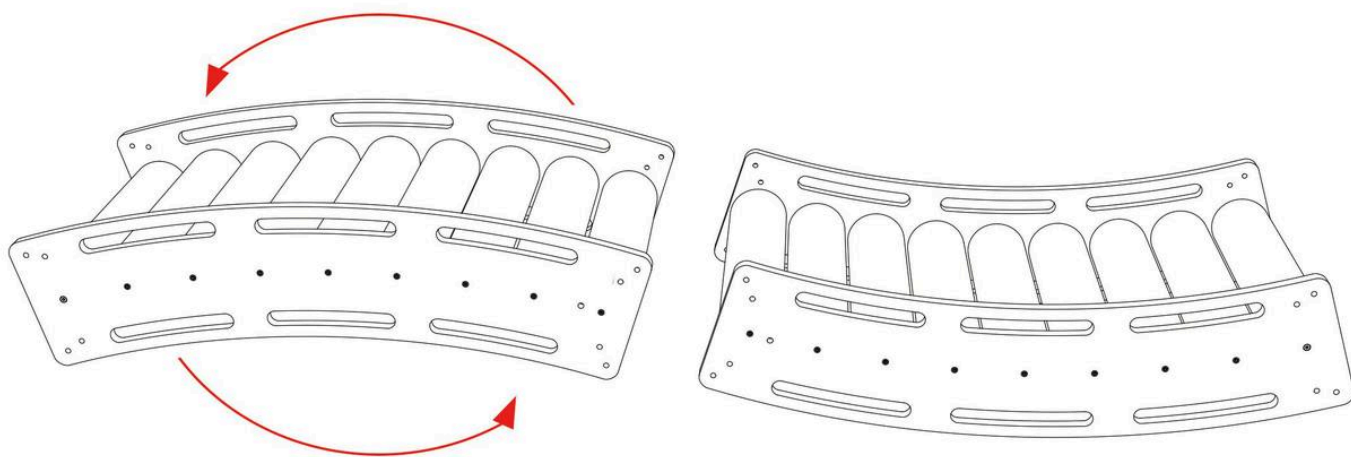

Flip over the slide and lay on its other side as a rocker



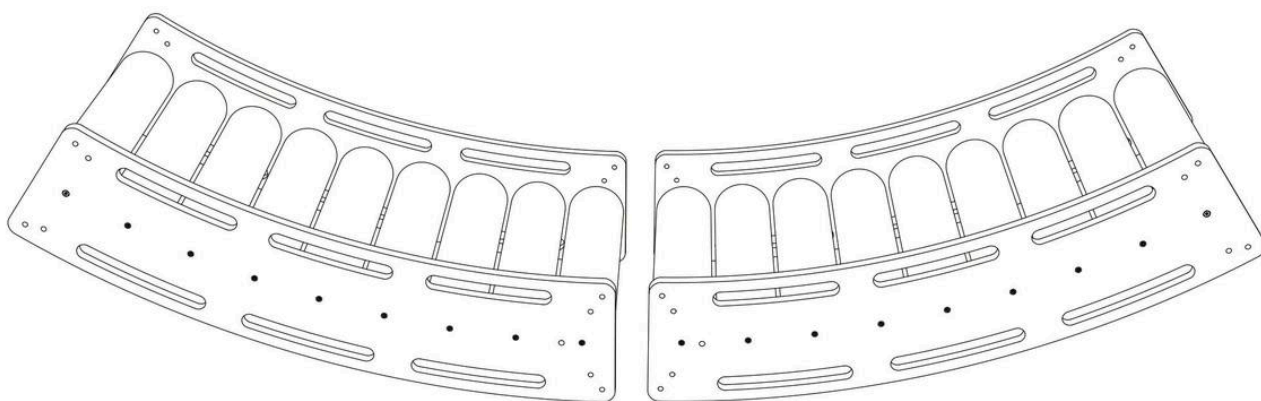


07-1

Screw **C** screws through part **9** and into the bolts on the other side

Screw **B** screws on both sides of part **9**

Do not tighten any screws until all are in place

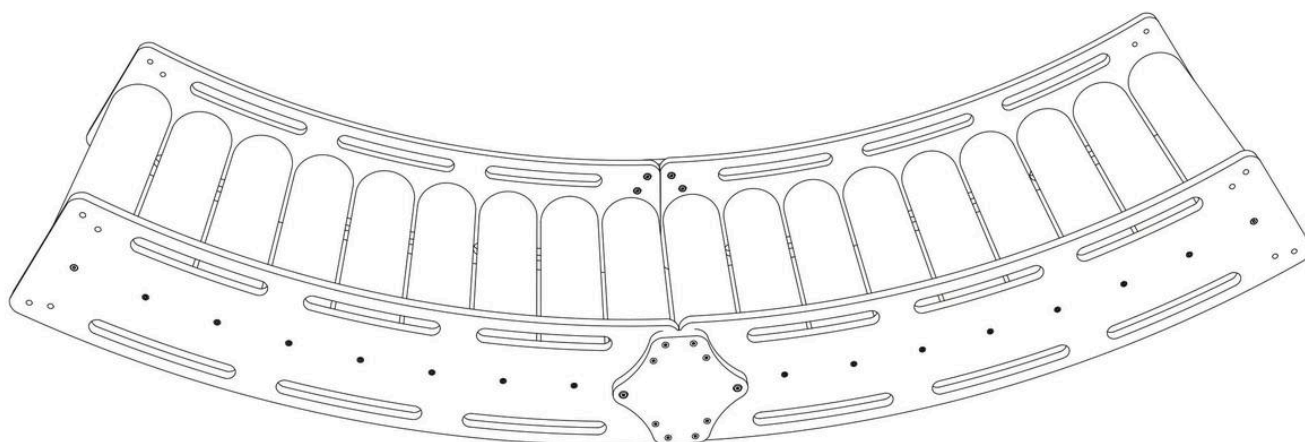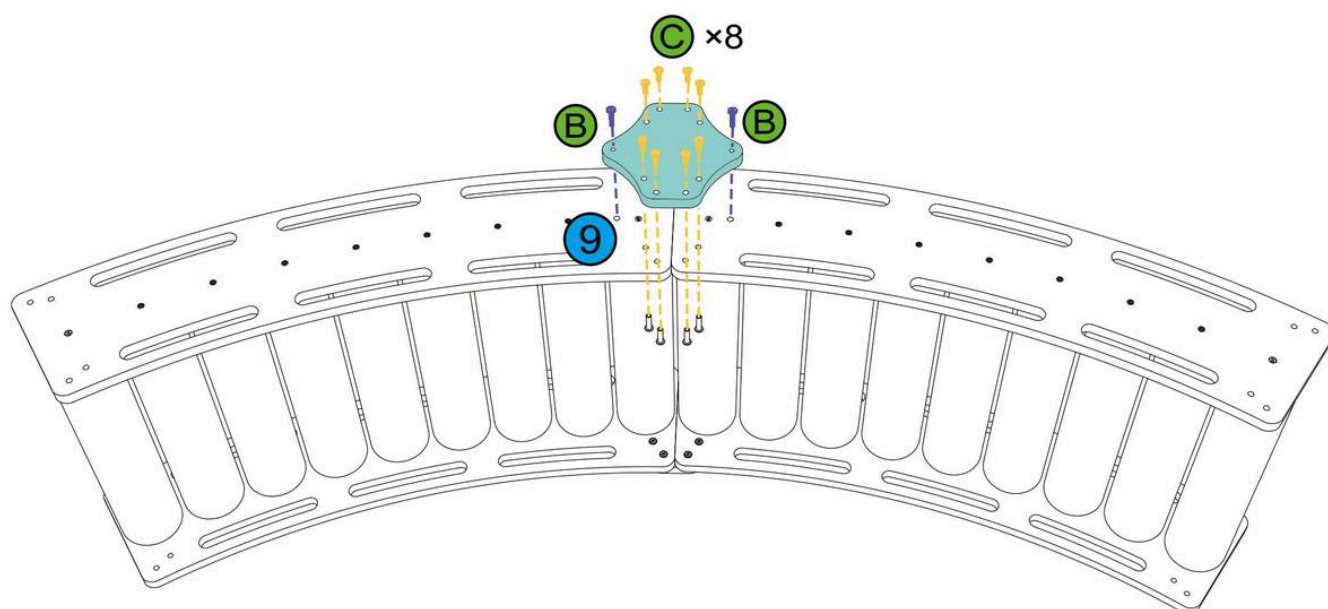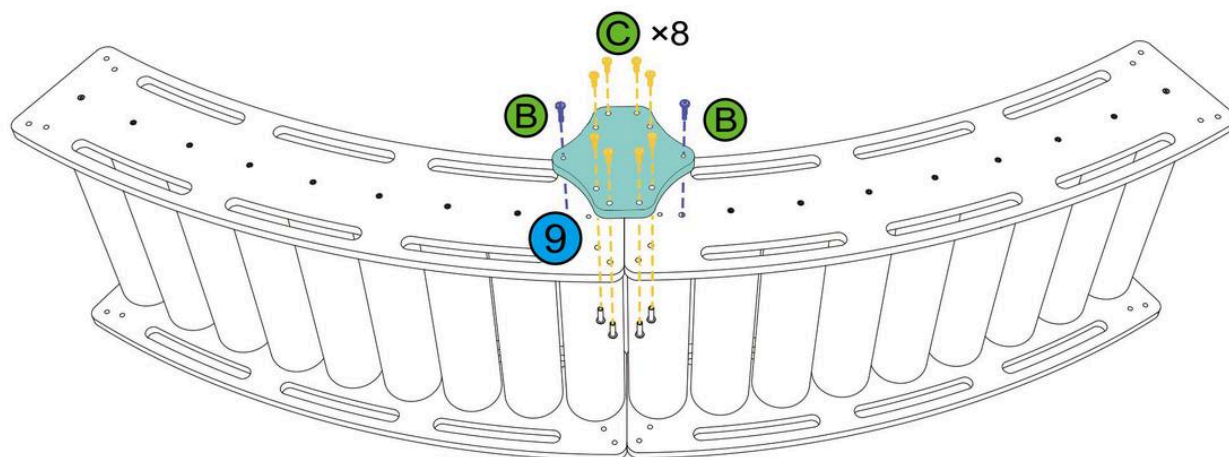

B	 M6*30	4
C	 M6*20 M6*30	16
D	 4mm	2

