

avenlur

Oakling by Avenlur

WARNING

- Read all instructions before use of the infant bouncer seat.
 - Keep instructions for future use.
 - Do not use this infant bouncer seat if it is damaged or broken.
- Maximum user weight: 20 lbs (9.1kg)

Fall hazard: Babies have suffered skull fractures falling while in and from recliners.

- Use recliner **ONLY** on floor.
- **ALWAYS** use restraints and adjust to fit snugly.
- **NEVER** lift or carry baby in recliner.


Suffocation hazard: Babies have suffocated when recliners tipped over on soft surfaces and/or when bouncers have been used as a sleep product.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

To prevent **falls** and **suffocation**:


- **ALWAYS** use restraints and adjust to fit snugly.
- **STOP** using recliner when baby starts trying to sit up or has reached 20 lbs, whichever comes first.

Folding Steps


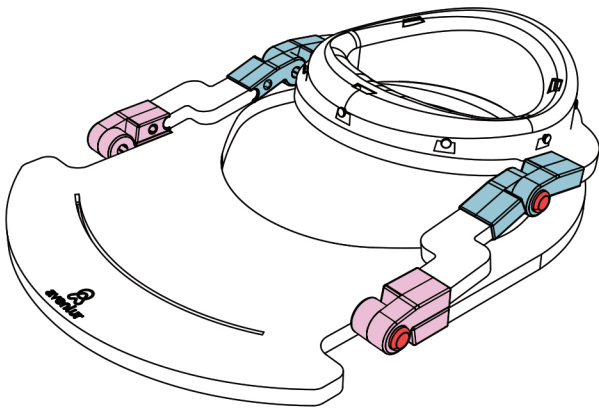


To better demonstrate how to unfold the product, the cloth cover has been omitted from the diagram. In actual use, there is no need to remove the cloth cover when folding.

It is recommended that two adults operate the folding steps.

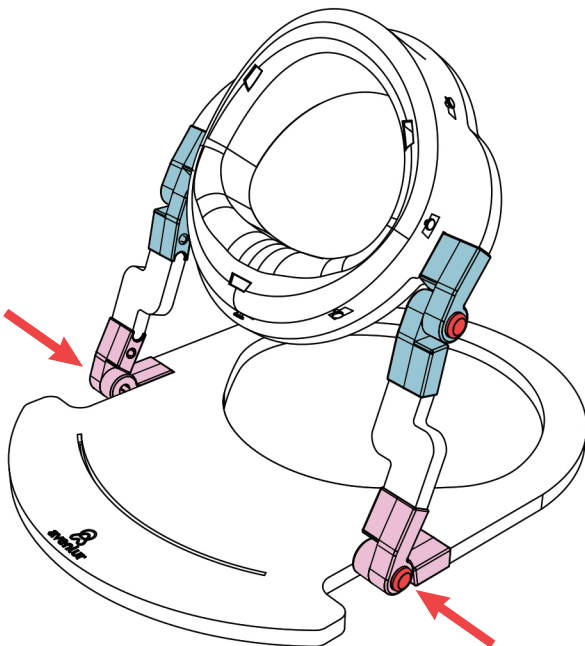

Step 1: Press the buttons on the pink plastic parts on both sides inward at the same time, and fold them to 60°. Once the adjustment is successfully completed, the buttons should protrude from the surface.

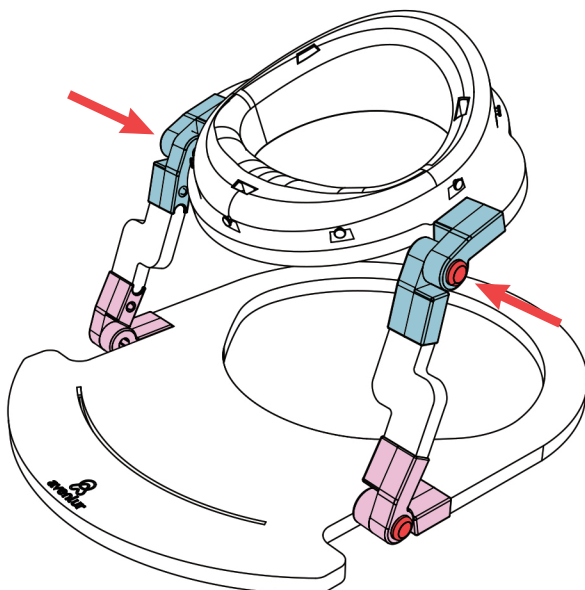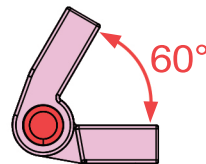

Step 2: Press the buttons on the blue plastic parts on both sides inward at the same time, and fold them to 120°. Once the adjustment is successfully completed, the buttons should protrude from the surface.

