


avenlur

Alpine by Avenlur

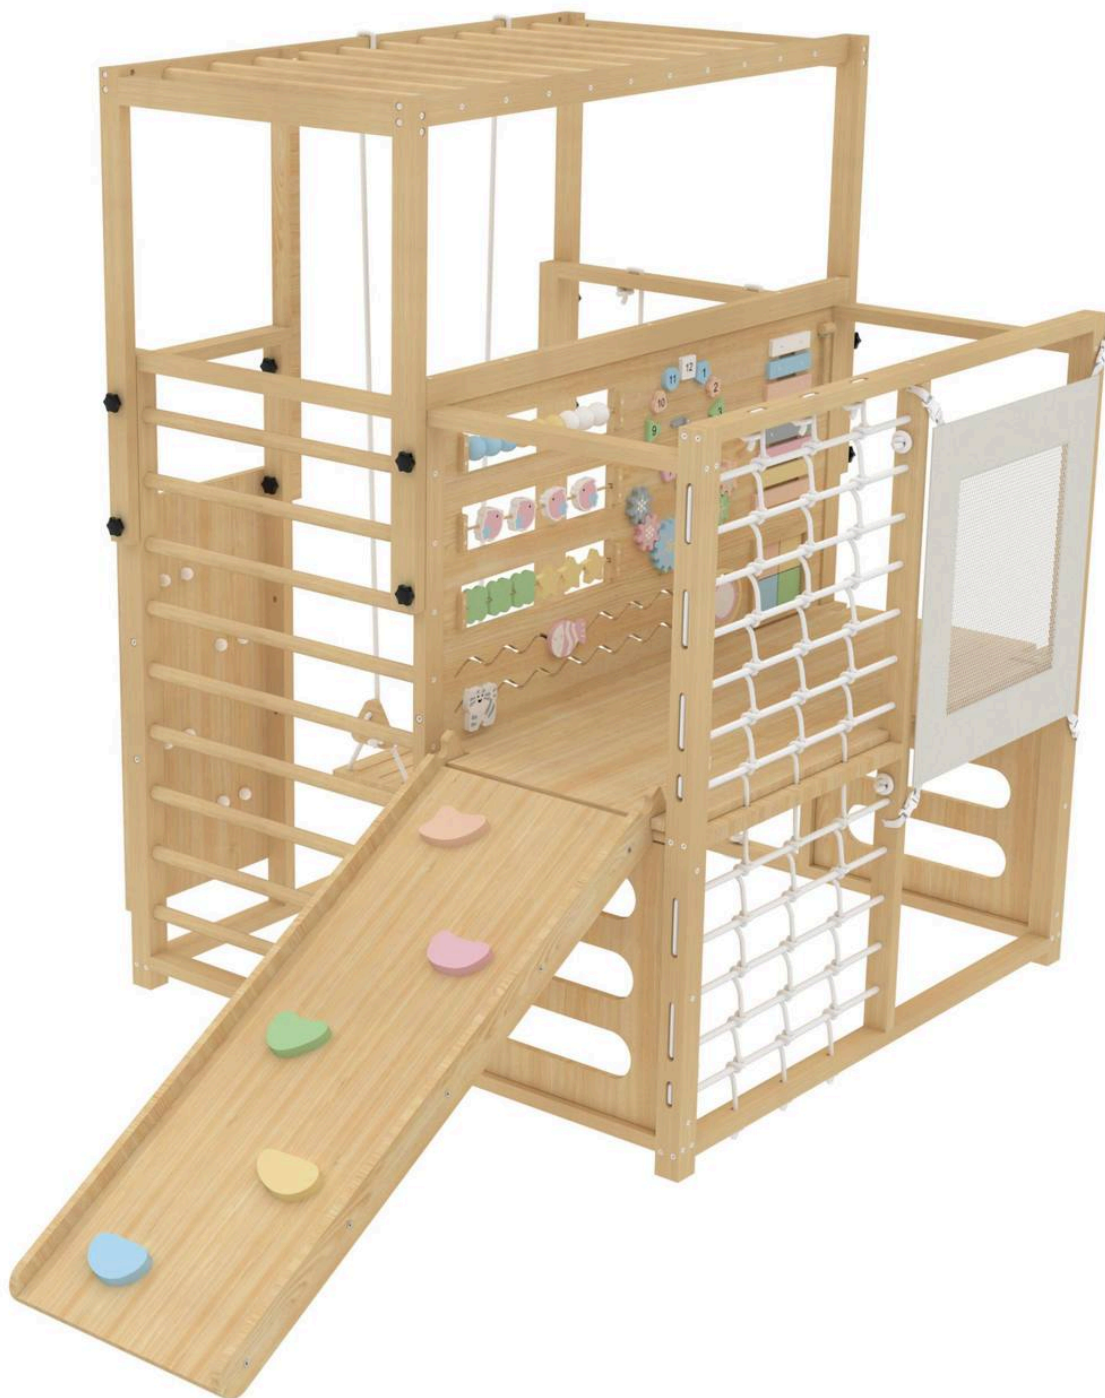

Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM

V3

WARNING

Adult assembly required.

WARNING

Maximum user weight: 110 lbs (50kg) per child.

WARNING

CHOKING HAZARD:

Adult assembly required. Keep small assembly parts out of reach of children.

 Use under adult supervision.

**OBSERVE ALL STATEMENTS AND WARNINGS TO REDUCE THE LIKELIHOOD OF SERIOUS OR FATAL INJURY.
SAVE THIS SHEET FOR FUTURE REFERENCE.**

OPERATION INSTRUCTIONS

1. An adult should always supervise use of this product by children of all ages.
2. Instruct children not to attach items to the playground equipment that are not specifically designed for use with the equipment (examples: ropes, clothesline, pet leashes, cables and chain, etc) as they may cause a strangulation hazard or any other hazard.
3. Never allow children to use the equipment in a manner other than intended.

MAINTENANCE INSTRUCTIONS

1. Inspect the product periodically for loose or damaged components. **Tighten bolts if need.**
2. Check all connections and bolts for tightness at least twice monthly during the usage.
3. Check all coverings and bolts for sharp edges.

INSTALLATION INSTRUCTIONS

Please have an electrical drill available for assembly if possible.

If you have difficulty in installation, please contact us for help and get installation video for reference.

Please Ensure:

1. You are assembling with at least two people to ensure that all sides and parts are leveled.
2. You don't screw the parts in too hard or it will splinter the wood.
3. You follow the directions carefully.

CONTACT US BEFORE ASSEMBLY IF:

- You need assistance with assembly
- You need a replacement part due to a missing part or defective part

Call us at 888-697-3931 M-F 9AM-5PM PT

or email us at info@avenlur.com




① ×9 24.6in




③ ×1 47.3in



⑤ ×2 23in



⑦ ×1 47.2in



⑨ ×1 43.7in



⑪ ×1 21.9in



⑬ ×1 41.9in



⑮ ×1 13.4in



⑰ ×1 43.7in



⑲ ×1 43.7in



⑳ ×1 41.9in



㉓ ×1 47.2in



㉕ ×1 31.5in



㉗ ×1 31.5in




㉙ ×2 19.1in




② ×12 24.4in



④ ×1 47.3in



⑥ ×1 47.2in



⑧ ×1 43.7in



⑩ ×1 44.1in



⑫ ×1 45.5in



⑭ ×1 45.5in



⑯ ×1 43.7in



⑰ ×1 43.7in



⑲ ×1 43.7in



㉒ ×1 41.9in



㉔ ×1 31.5in




㉖ ×1 31.5in



㉘ ×1 43.7in




㉚ ×1 20.8in

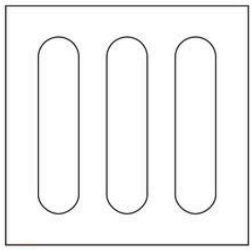


31 ×2 18.8in




32 ×1 31.5in

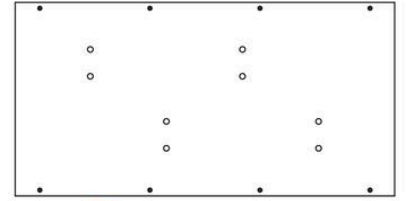


33 ×1 29.4in

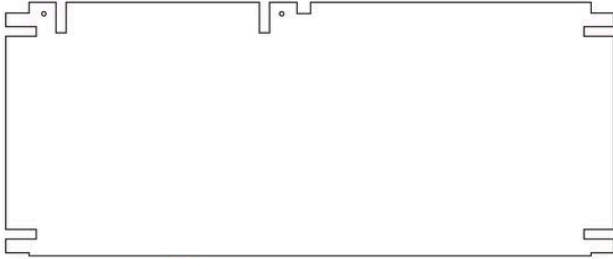


34 ×1 47.2in

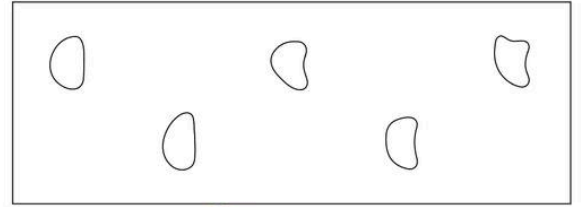


35 ×1 43.3in




36 ×2 45.5in

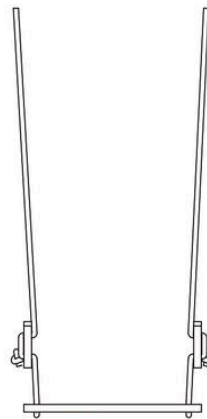


38 ×1

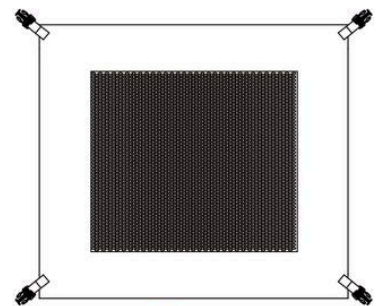


39 ×1

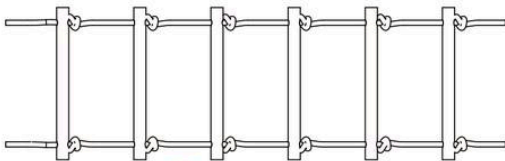


37 ×1

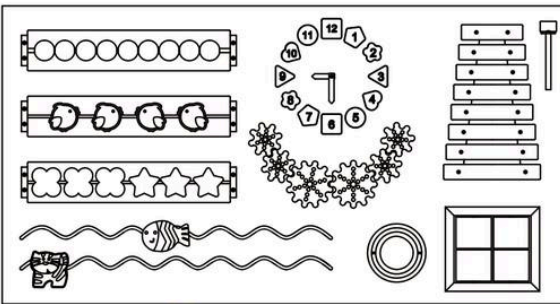

40 ×1 43.7in



41 ×4




157.5in
42 ×1




208.7in
43 ×1



106.3in
44 ×3



M4×40
A ×8



M4×70
B ×8




M7×40
C ×10




M7×50
D ×57




M7×70
E ×51



M8×45
F ×10




M6×60 M6×13
G ×8



M6×80 M6×13
H ×8



M6×40 M6×20
I ×1



M6×30 M6×20
J ×2



4mm
K ×2




M10×35
L ×8



M10×17×20
M ×8




8mm
N ×1



17mm
O ×1

01-1


Note: Ensure that when assembling, the left side of parts 18 and 19 are the sides that measure 24.5 inches, whereas the right sides measure 19 inches

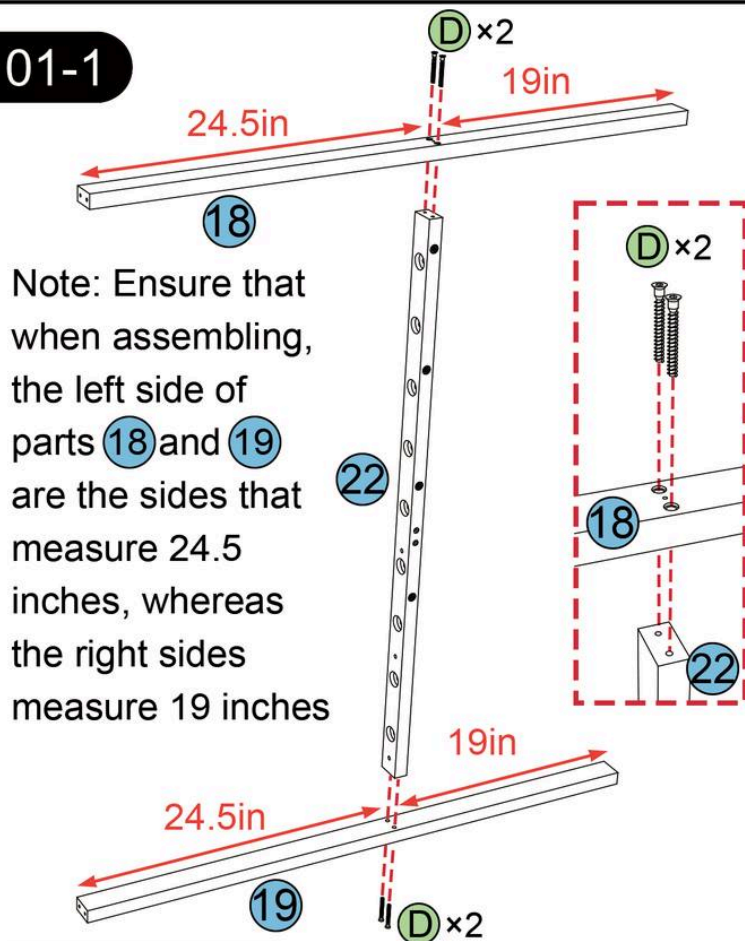

D M7x50 4


Note: Pay attention to all the black bubbled section markers. The manual may refer back to those later.

Note: When assembling Part 18 & 19, the countersinks should face outward.

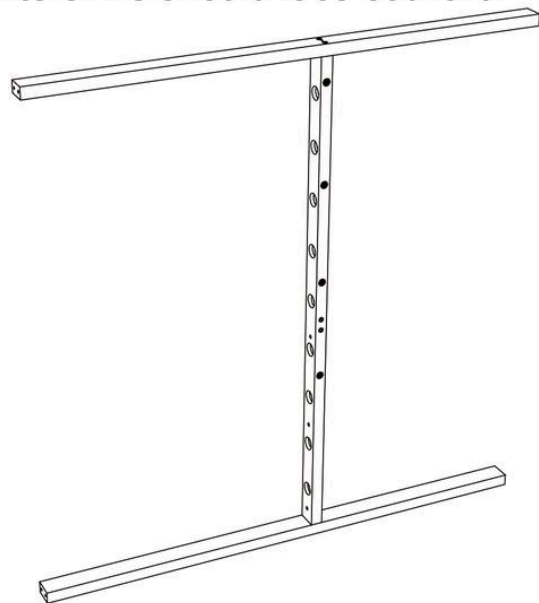


01-2



The protruding end of part 1 should correspond and fit into the groove holes of part 12 when installed. Install that side first and then install all the other sides of the rungs part 1

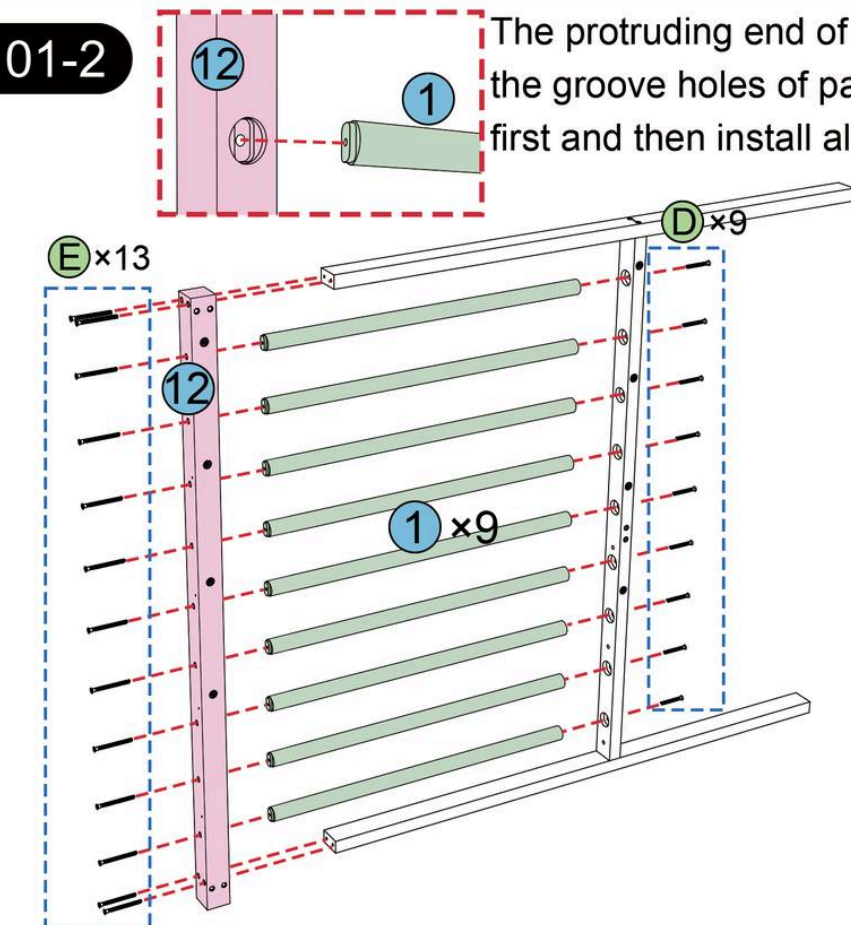

D M7x50 9 **E** M7x70 13

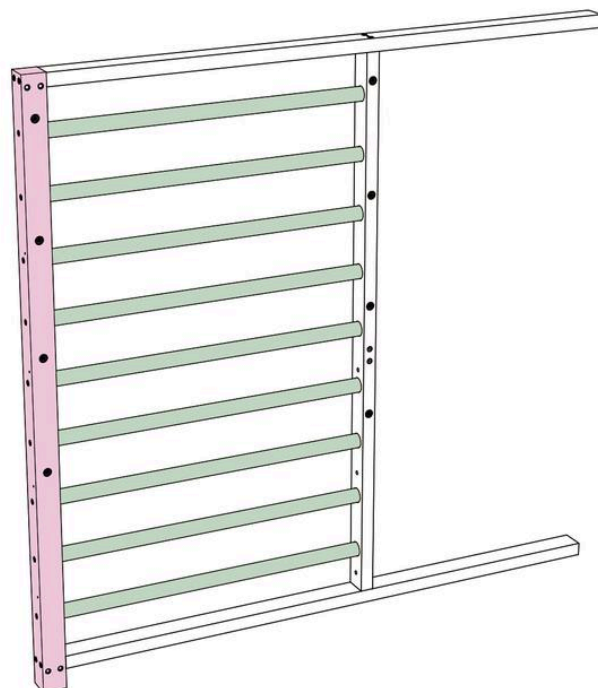


01-3

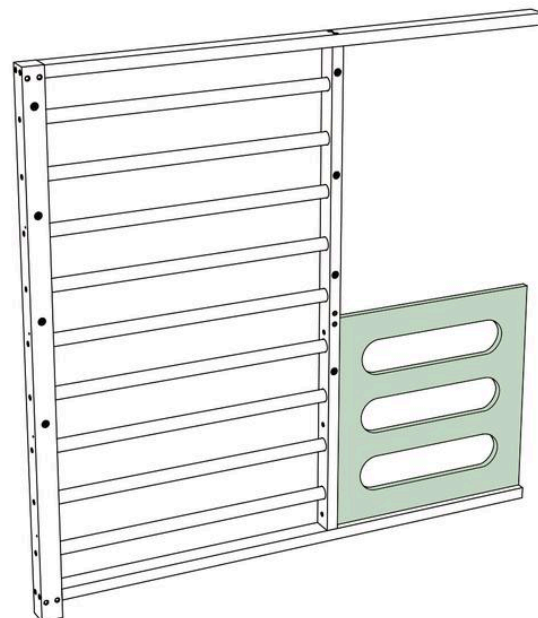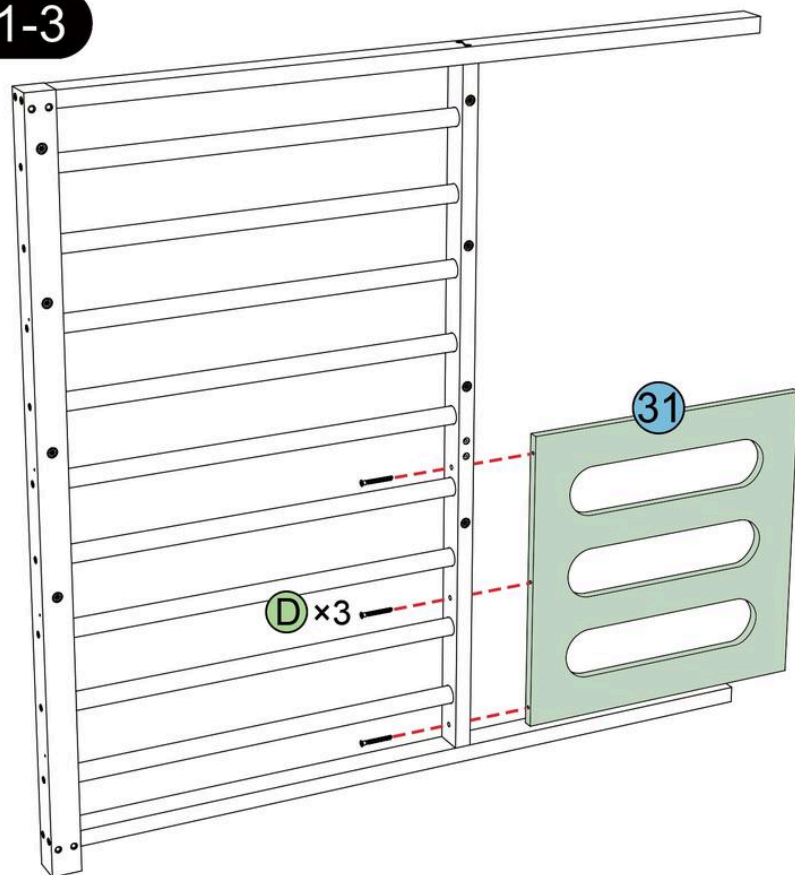



(D)  M7×50 3

02-1

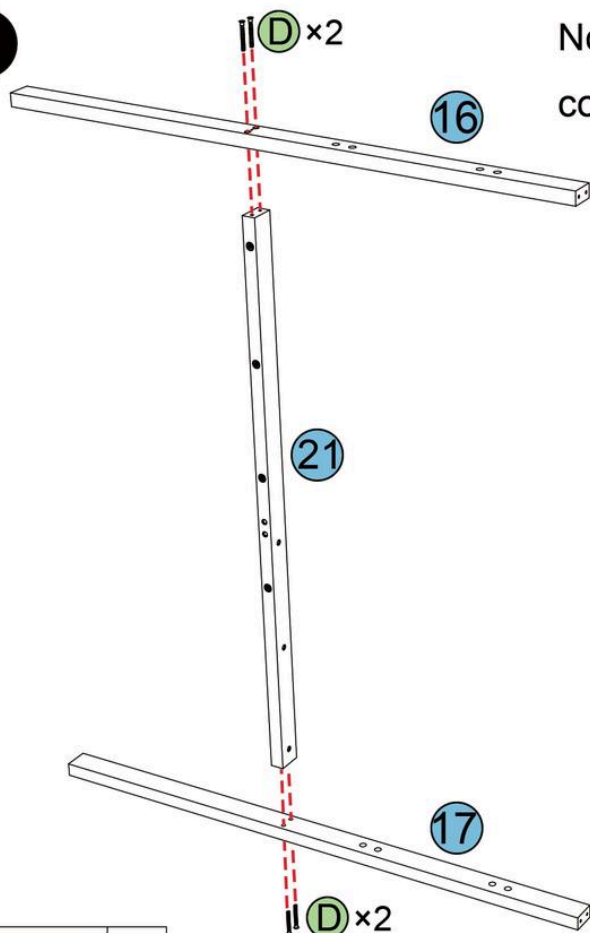


Note: When assembling part 16 & 17, the countersinks should face outward.

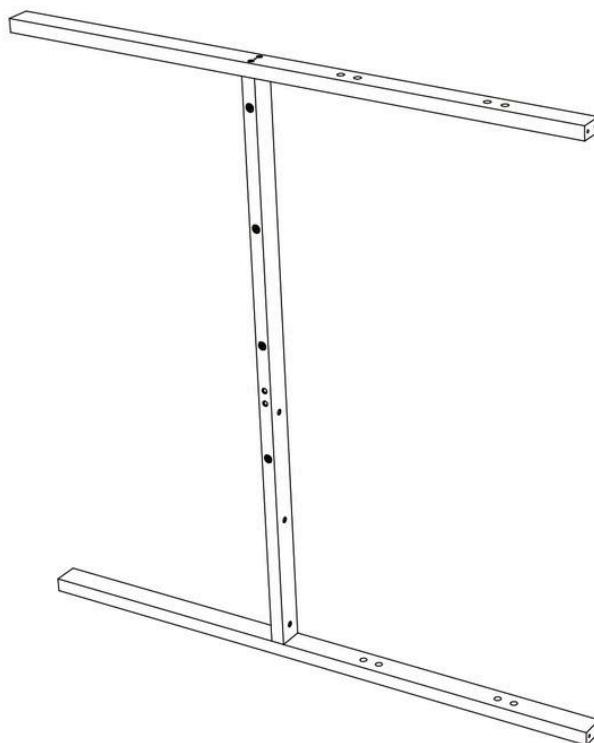


(D)  M7×50 4



02-2

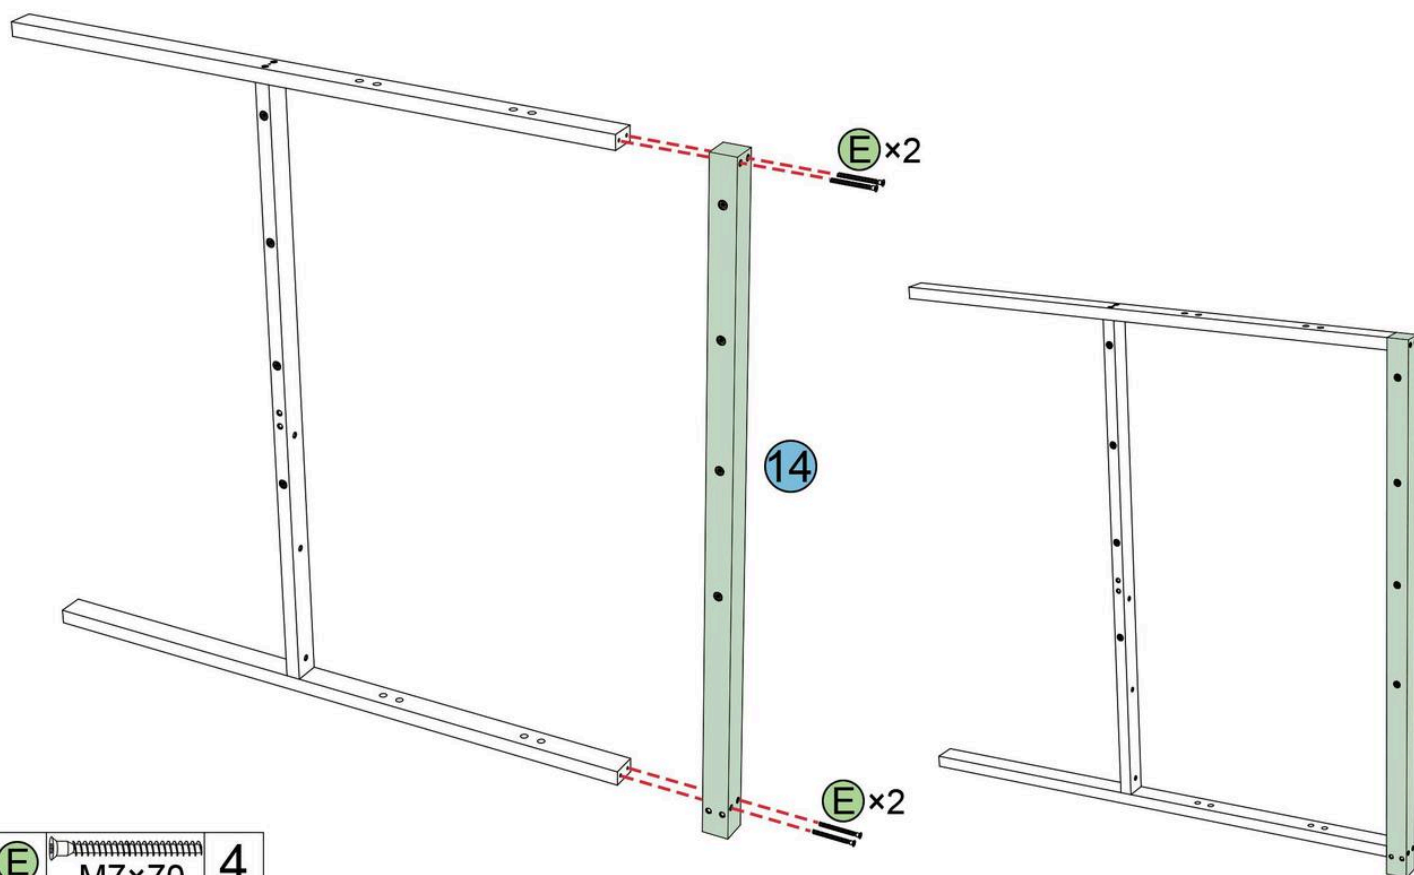



02-3




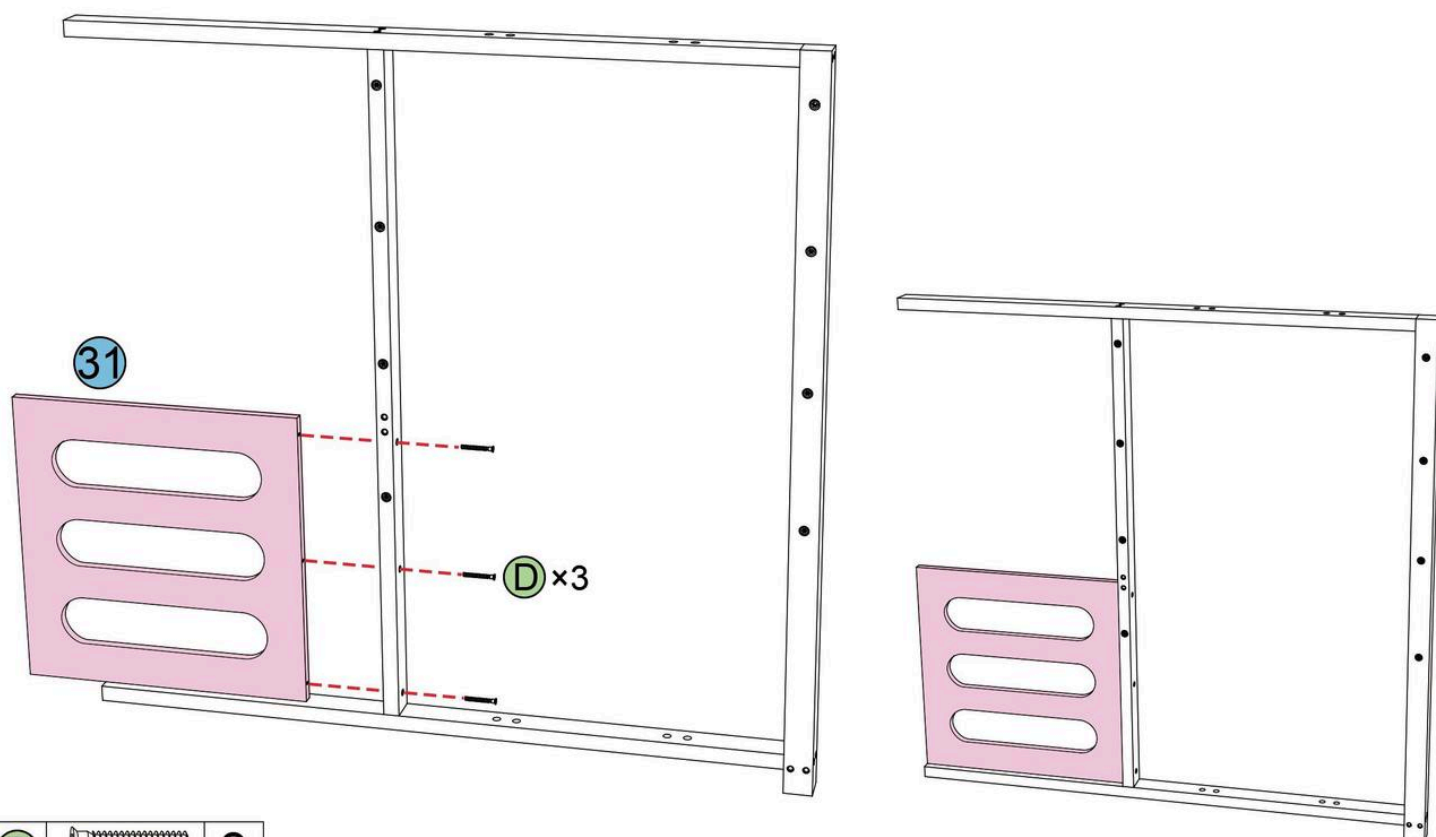



03-1

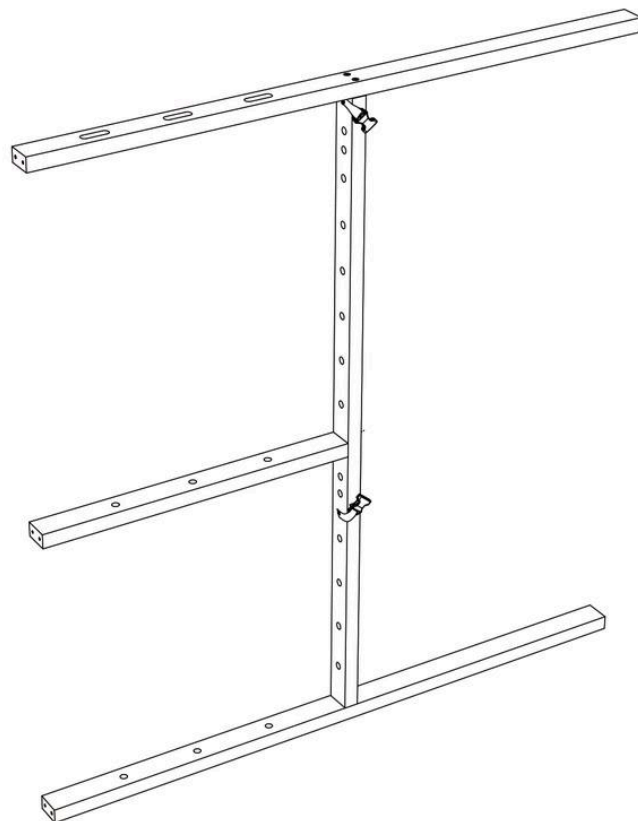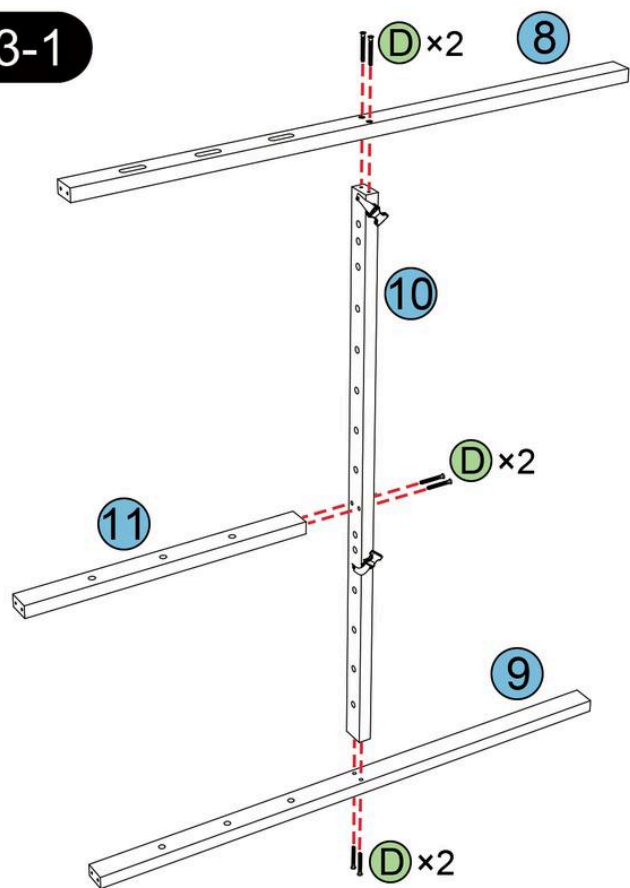

03-2

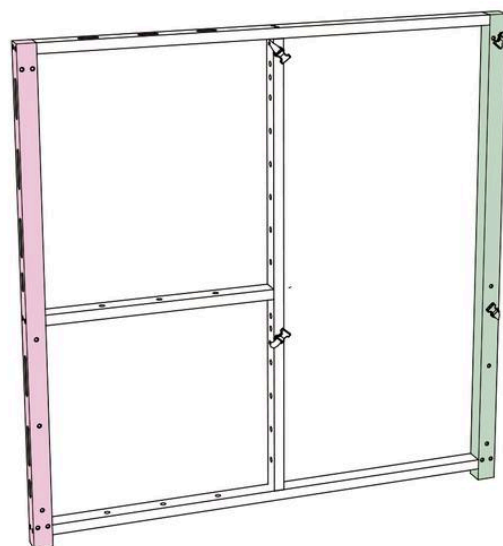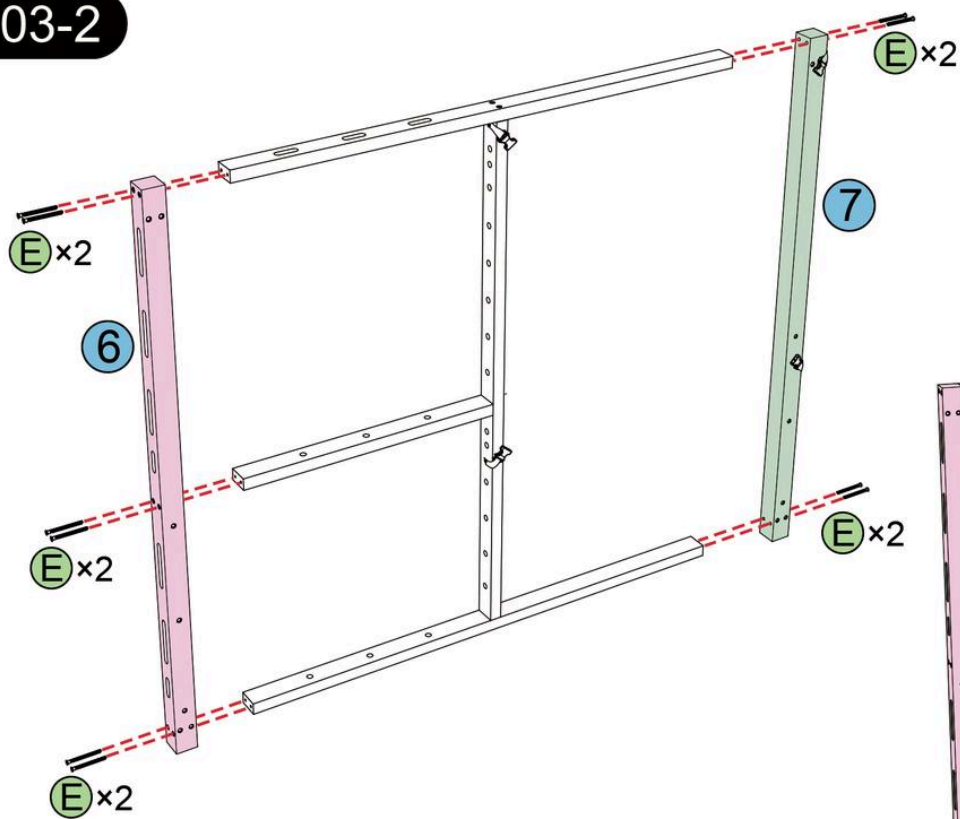

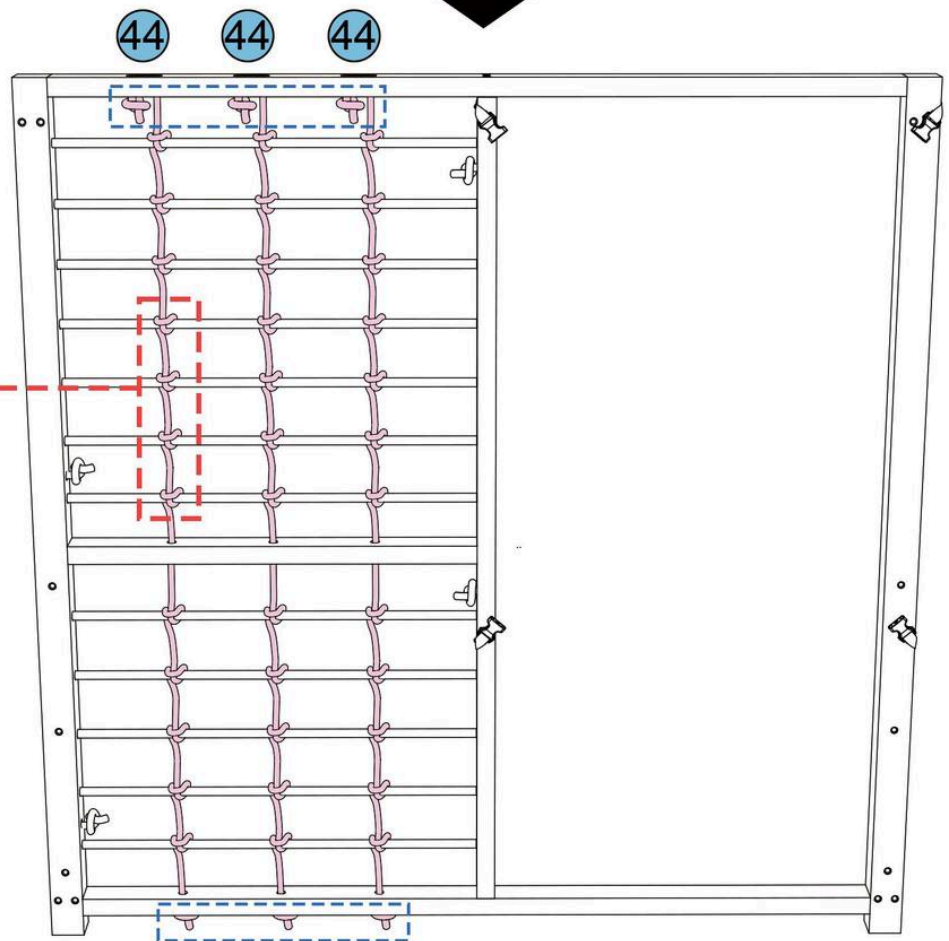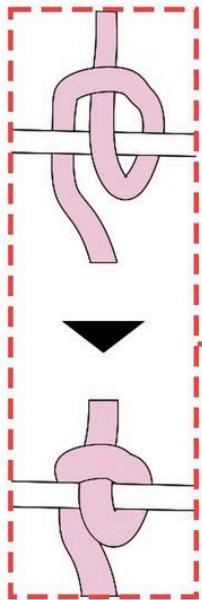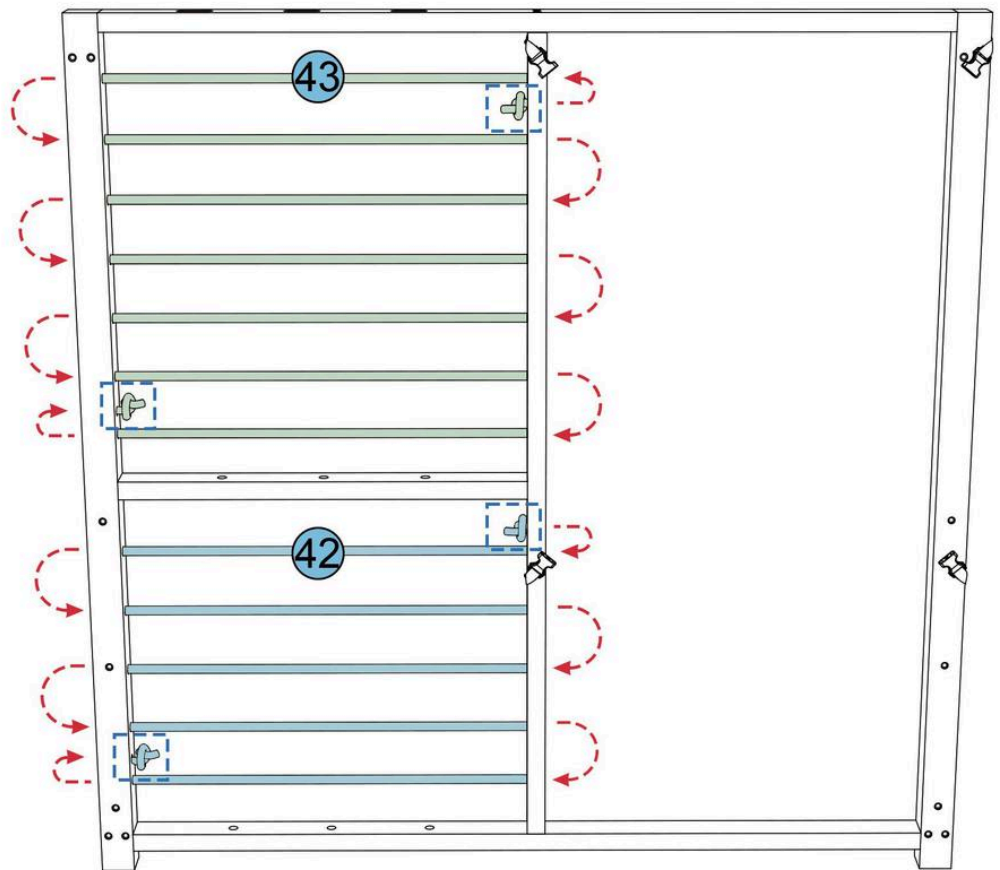
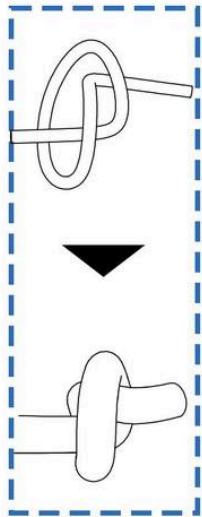


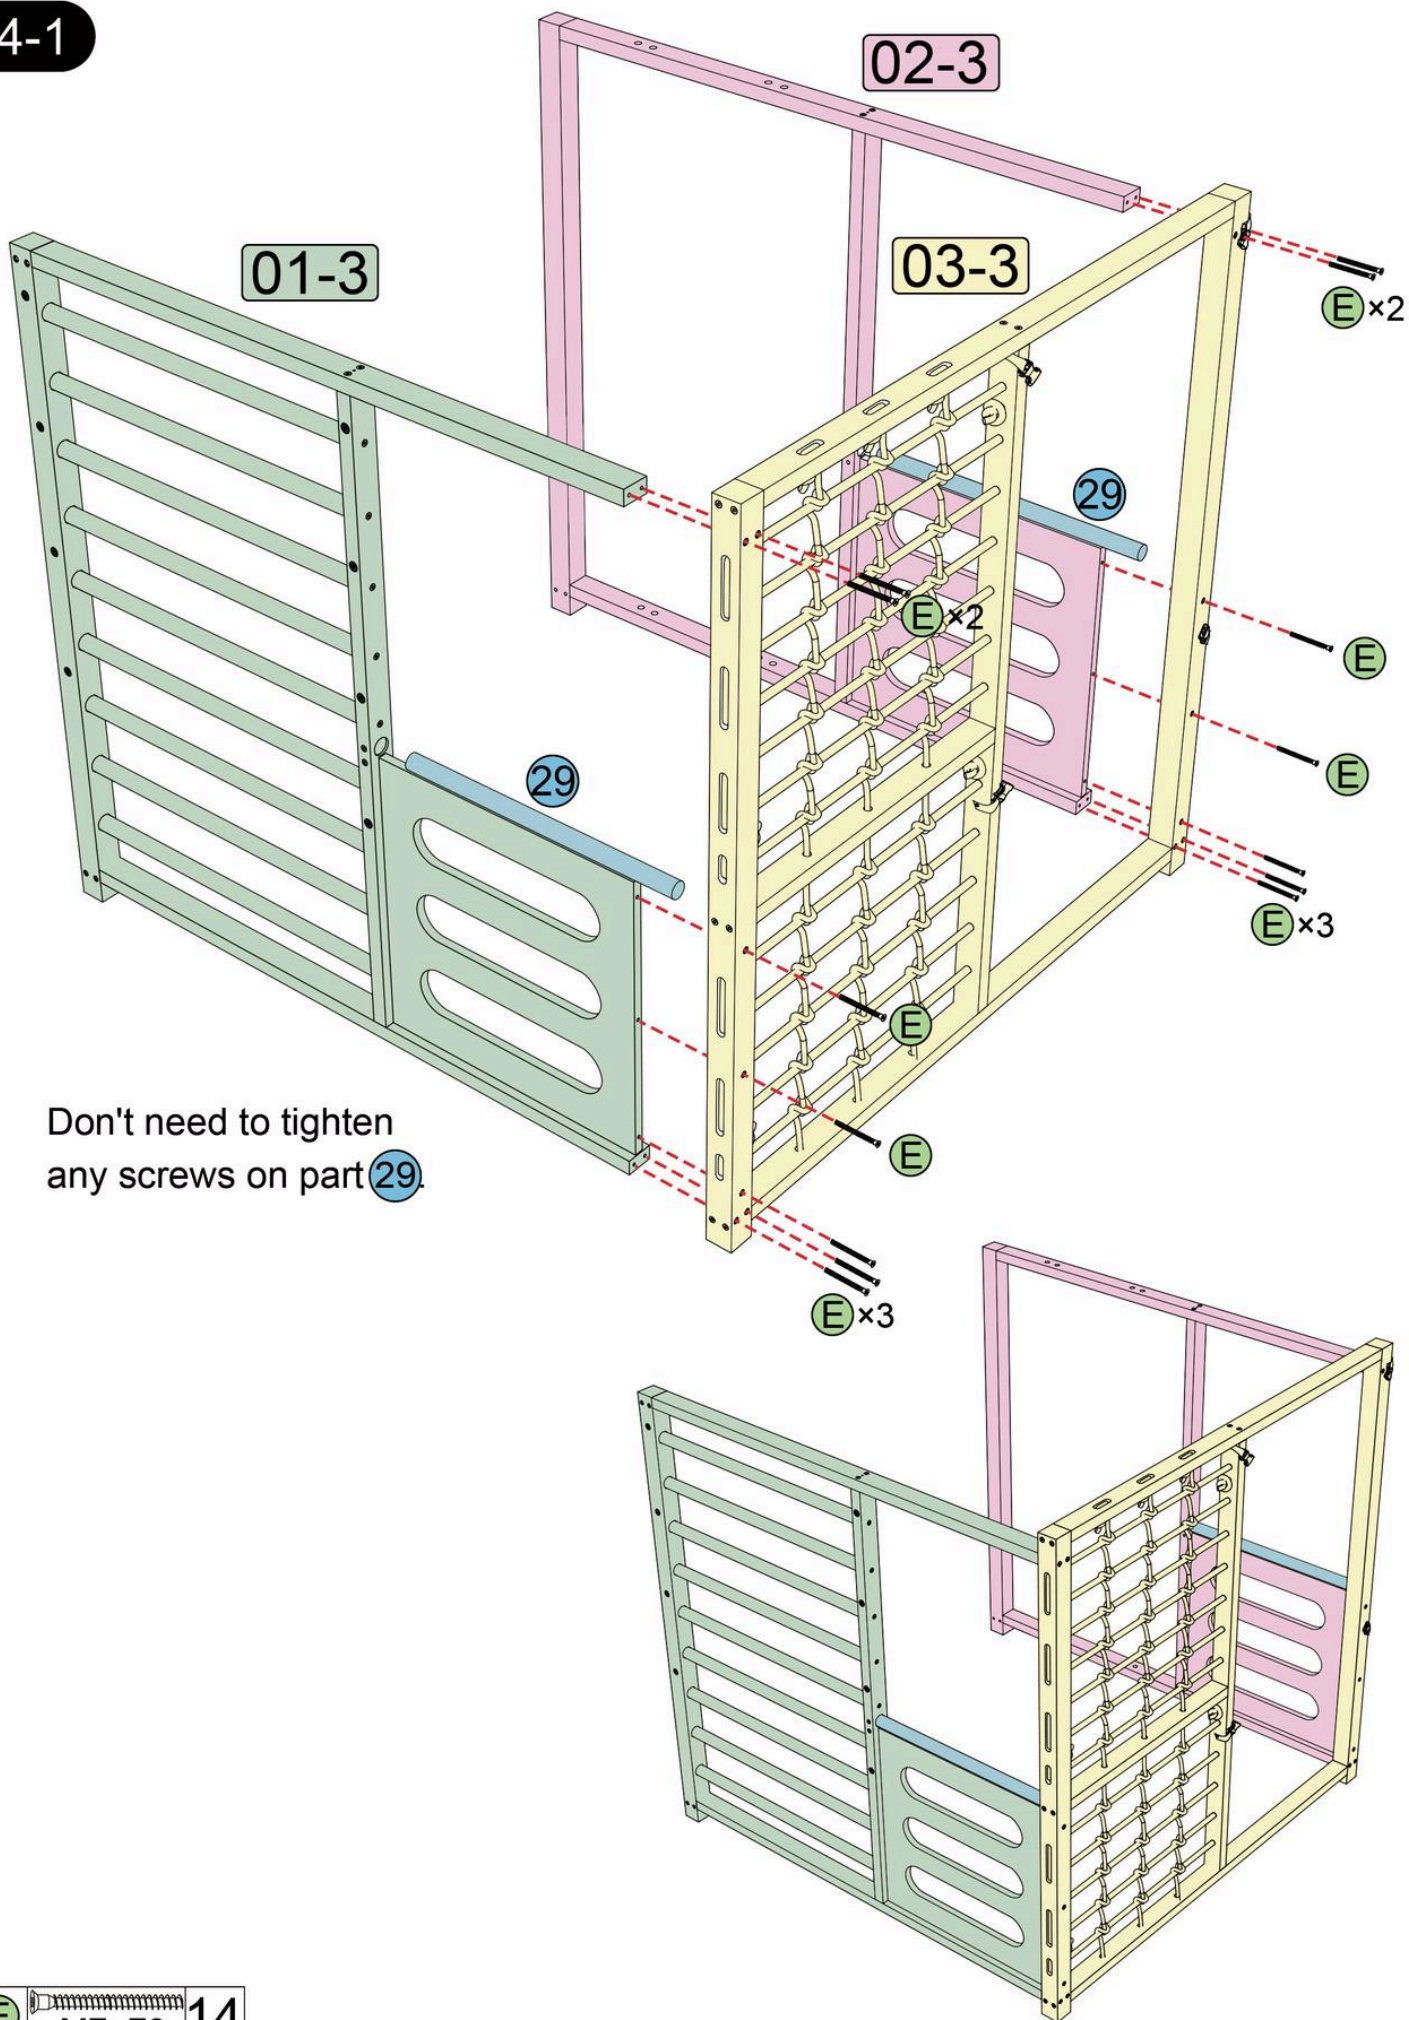



Don't need to tighten
any screws on part 29.





05-1

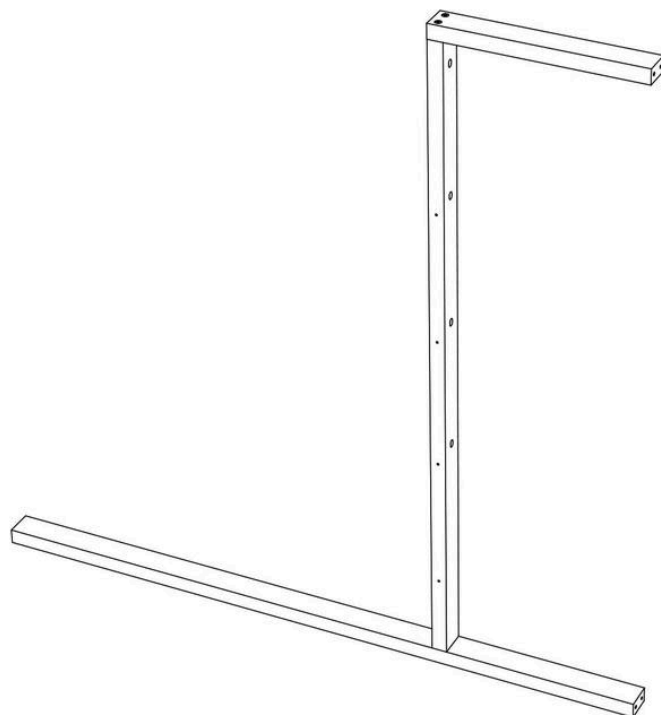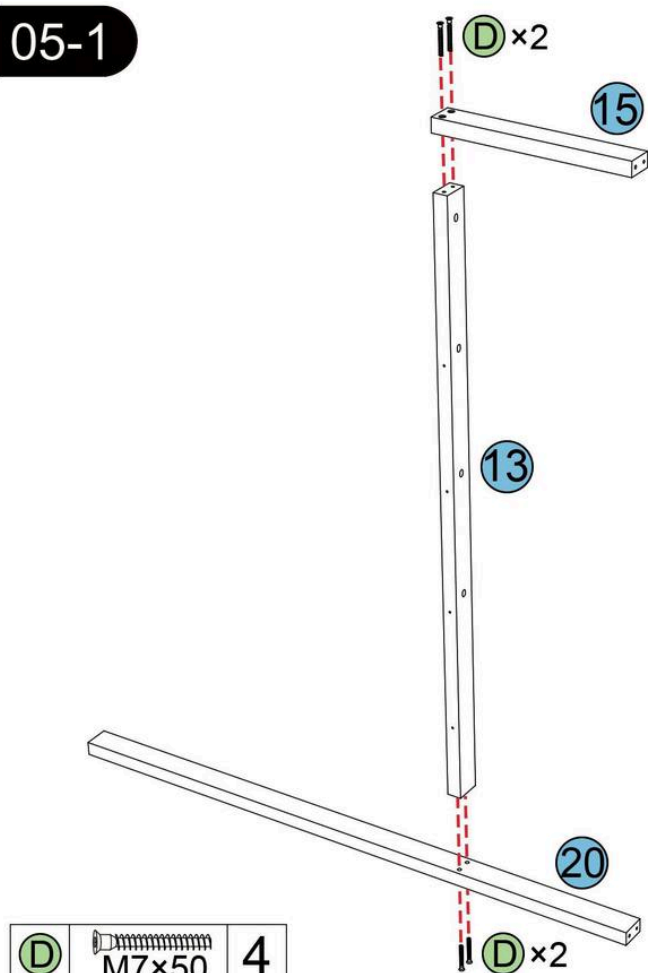



05-2

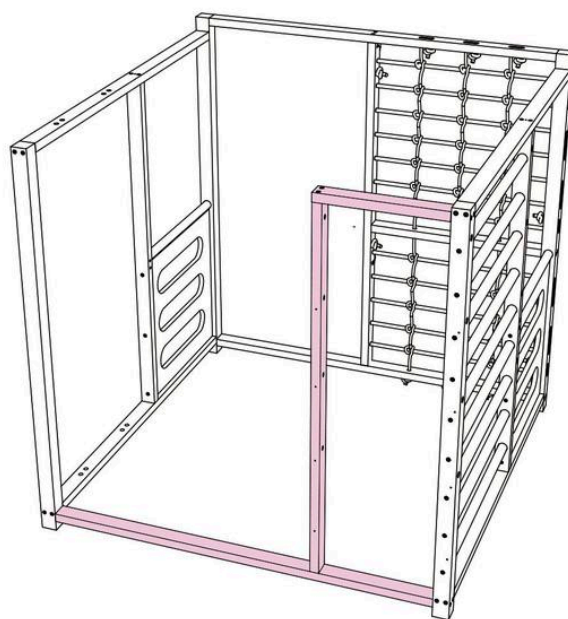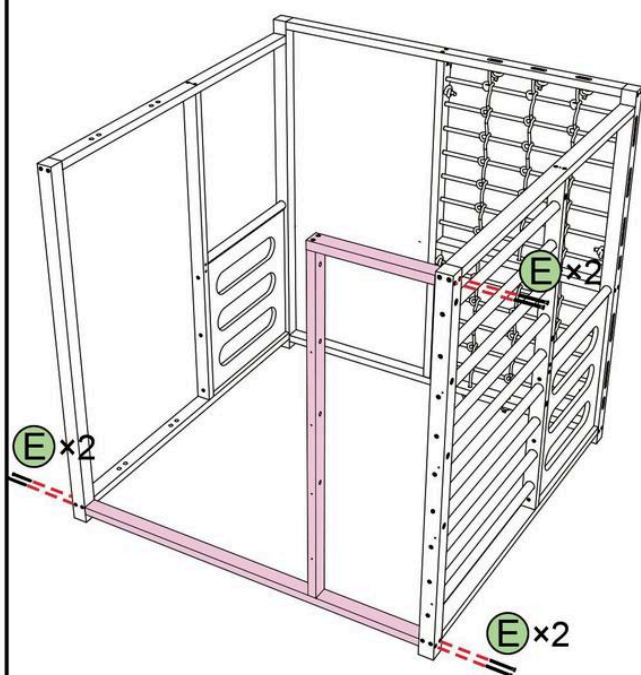

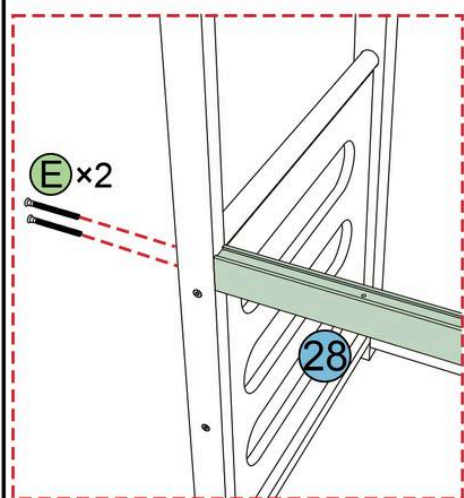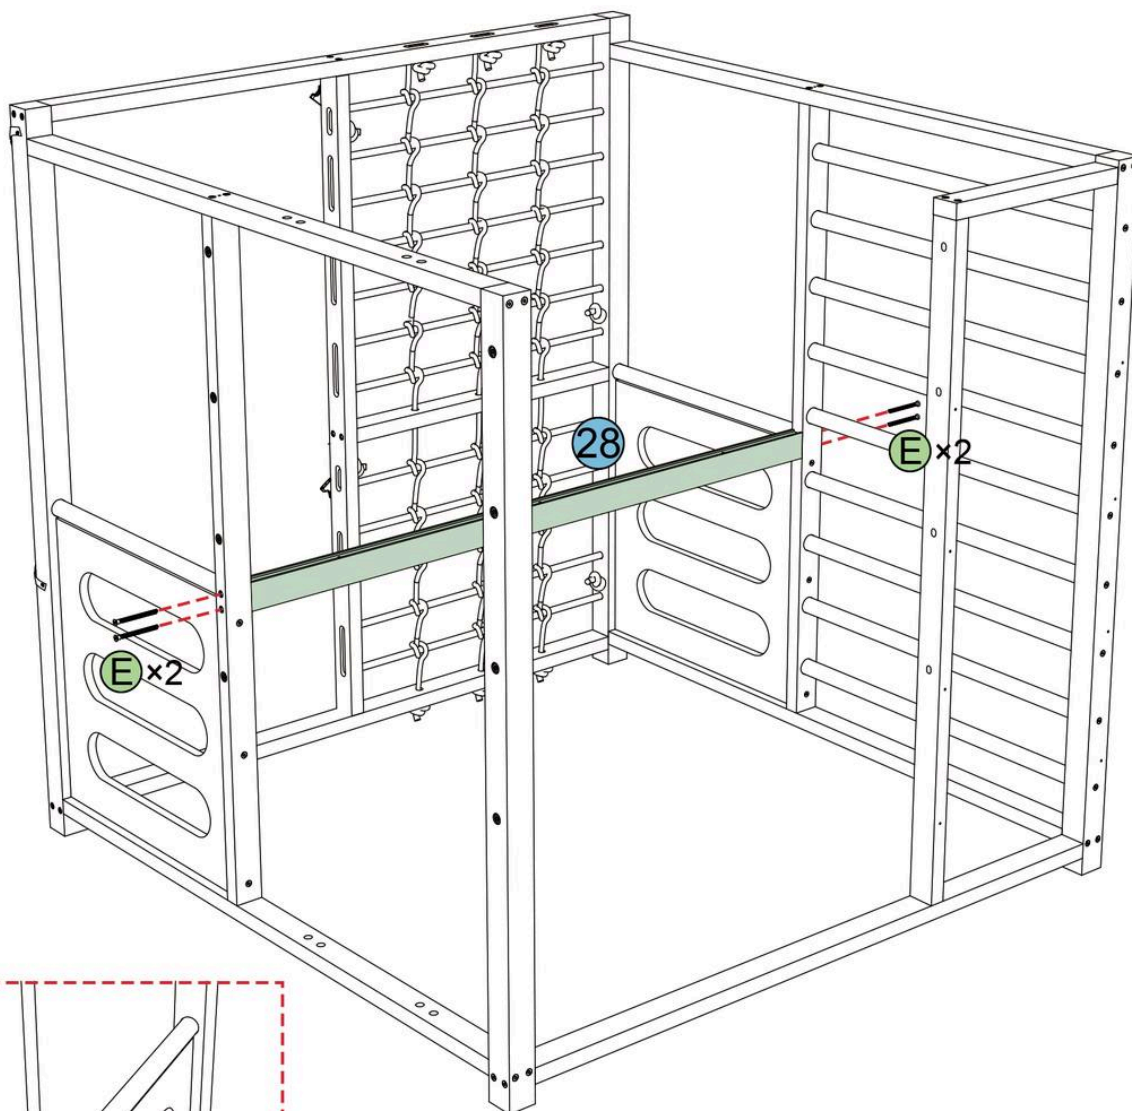


Note: When Assembling part
28 - make sure the side with
the slot / groove is facing
upward as shown

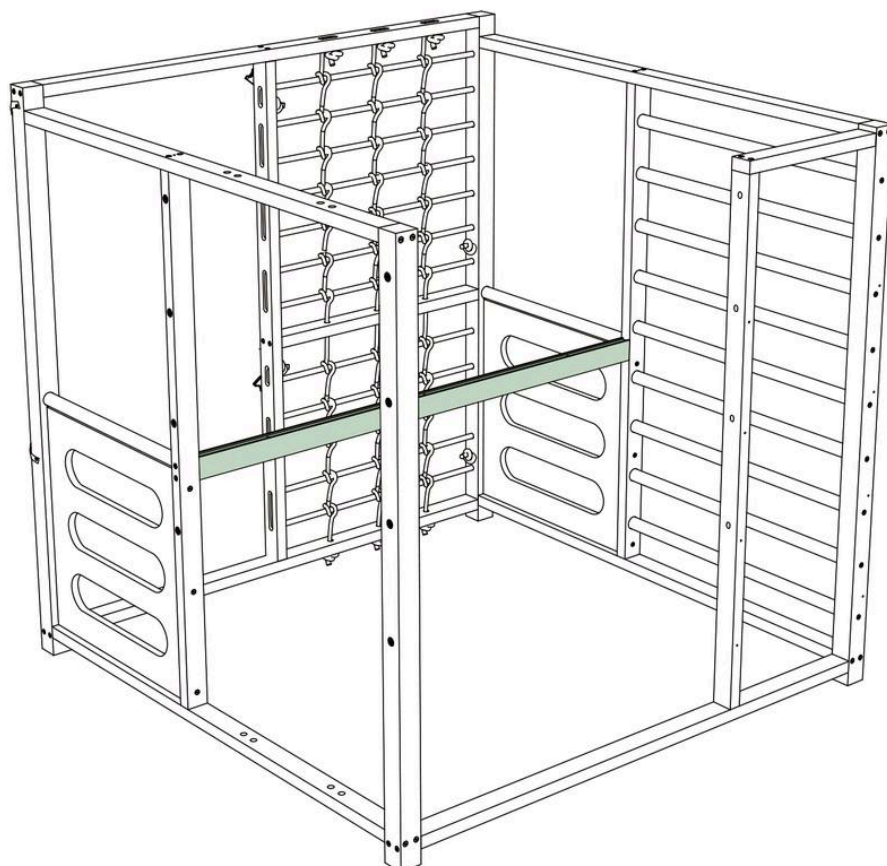


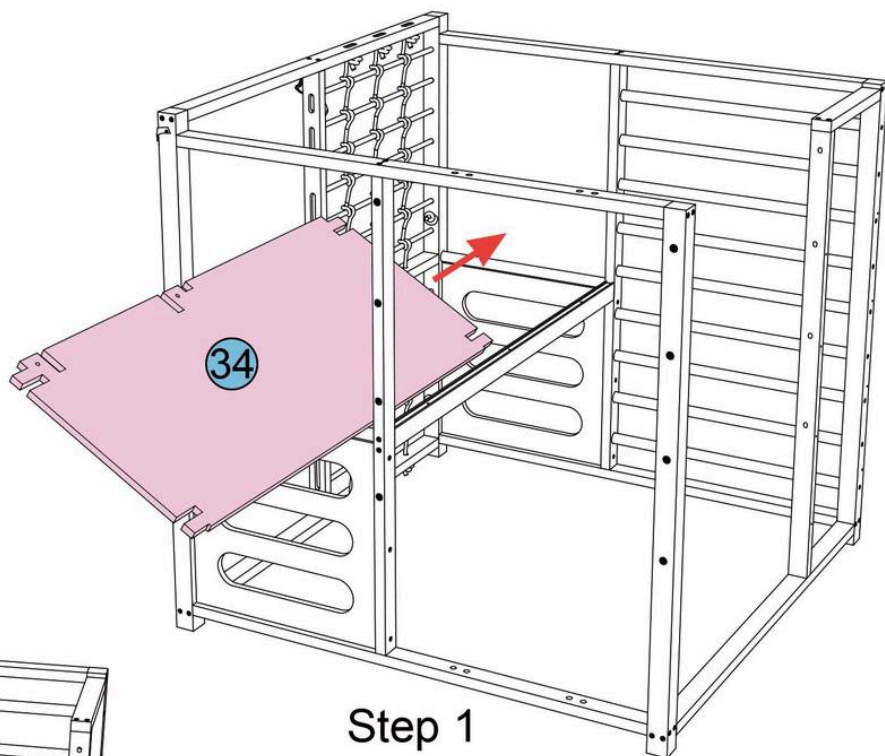


Step 1

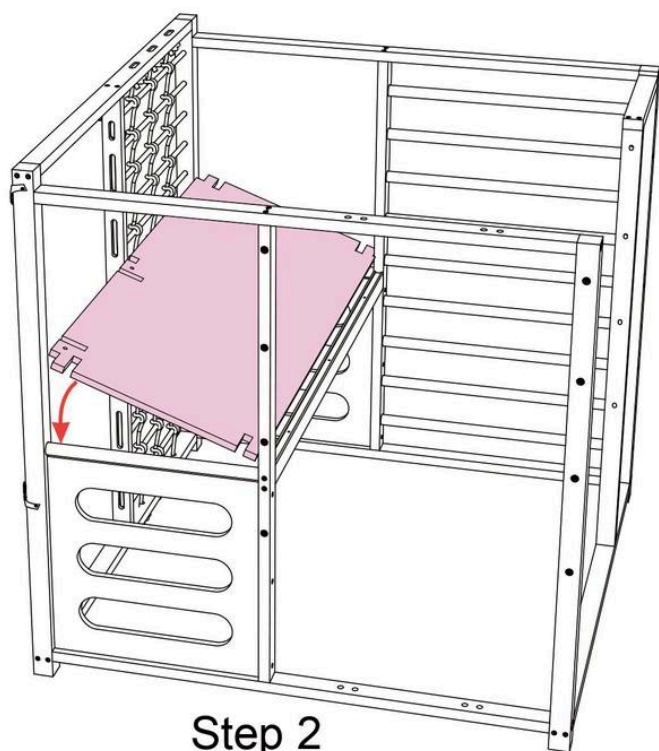




Step 2

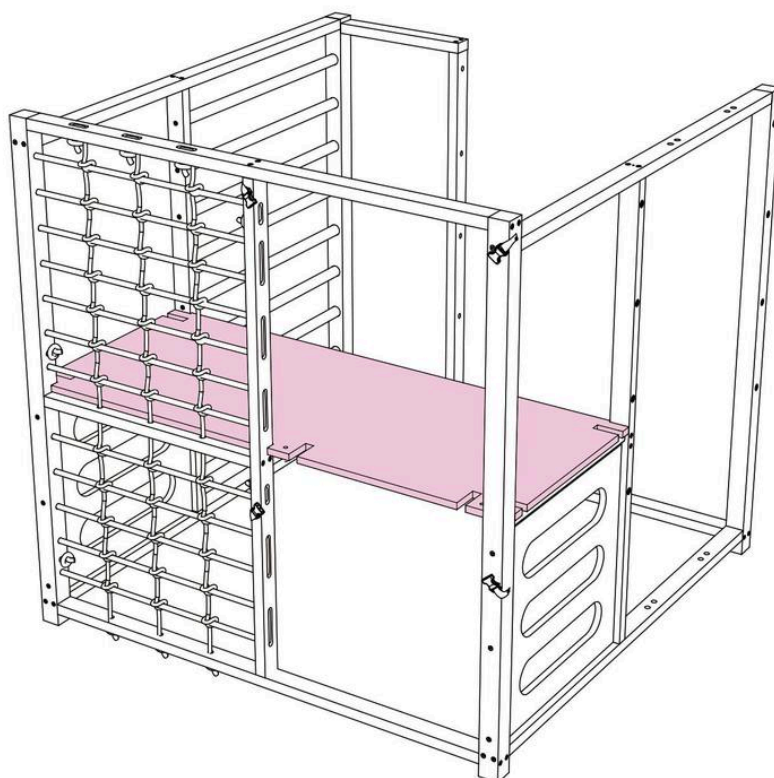


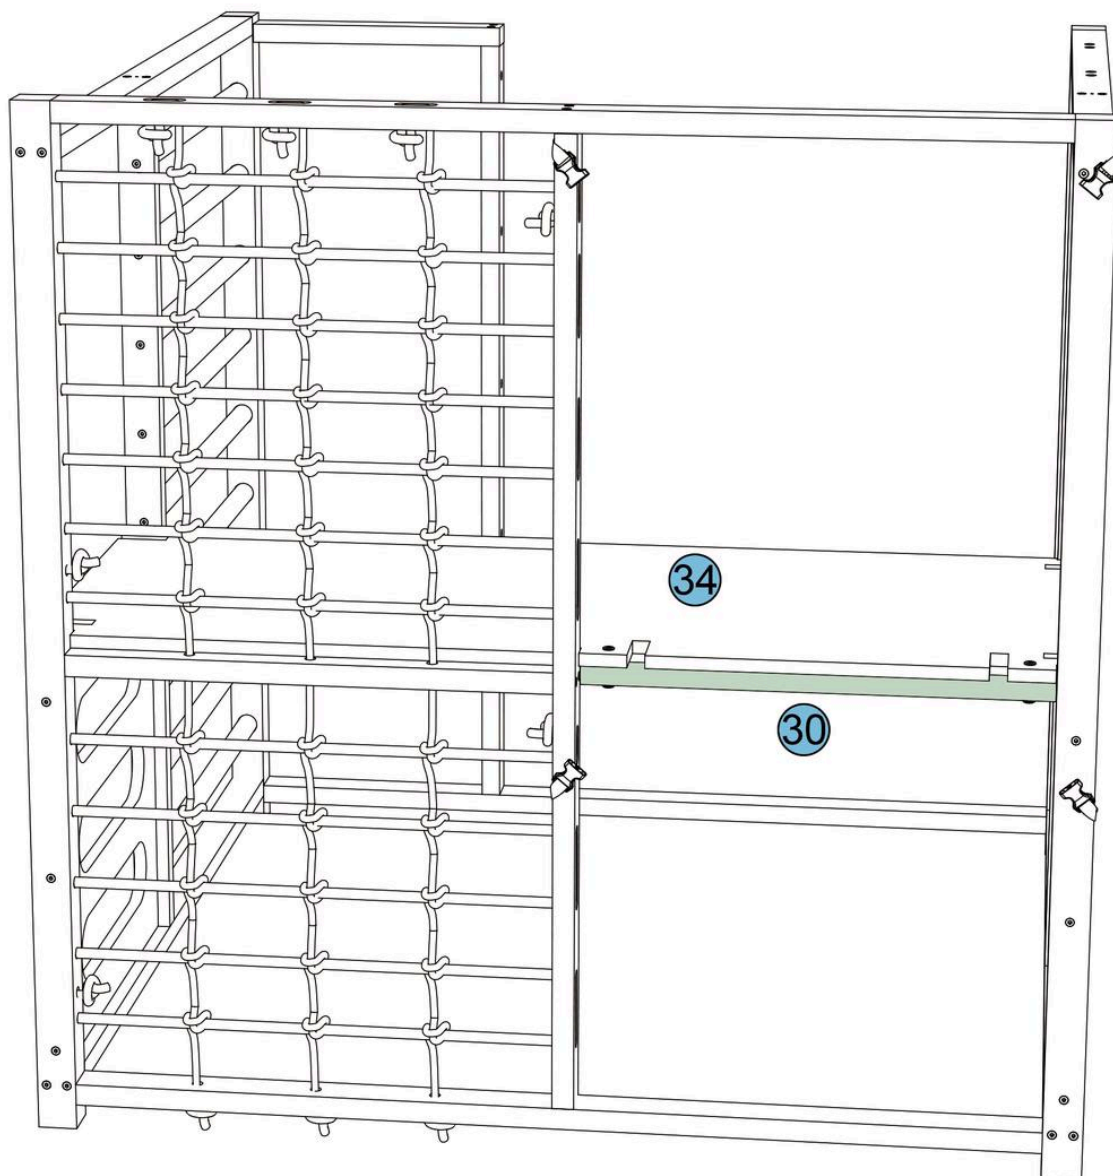


Place part 30 under the large board 34, and screw in place as shown

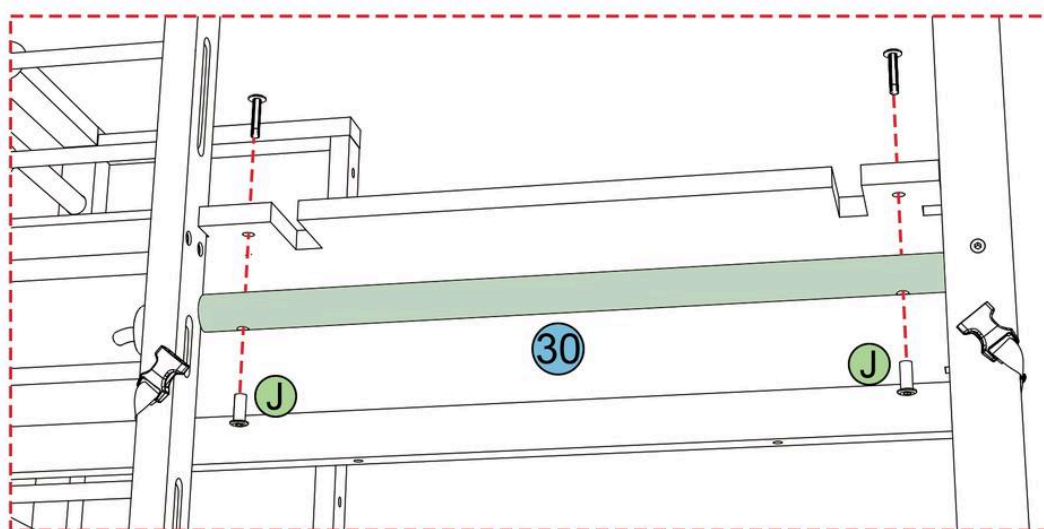


J		2
K	4mm 	2

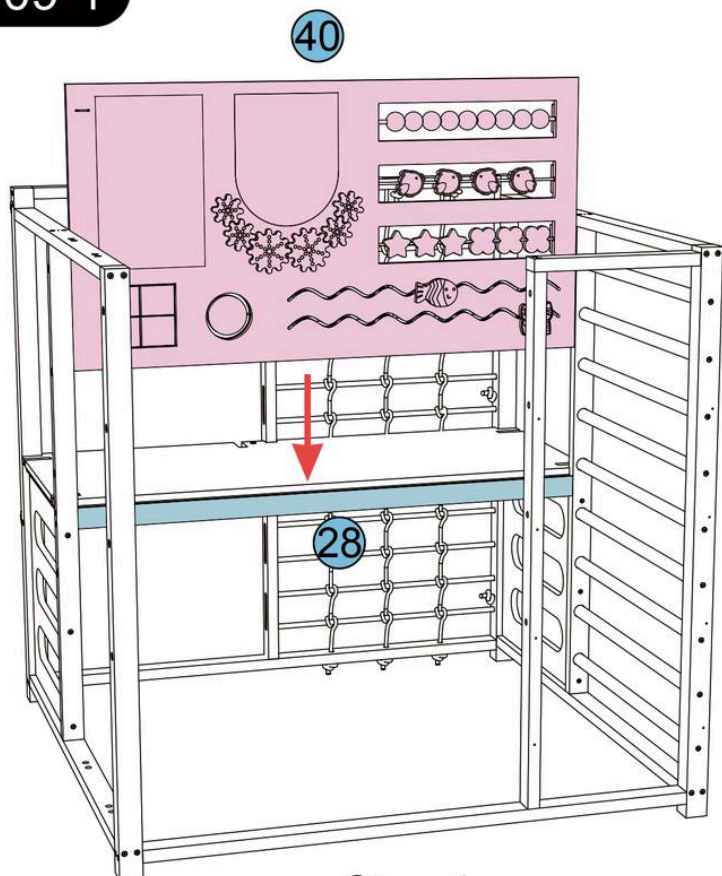


Step 1

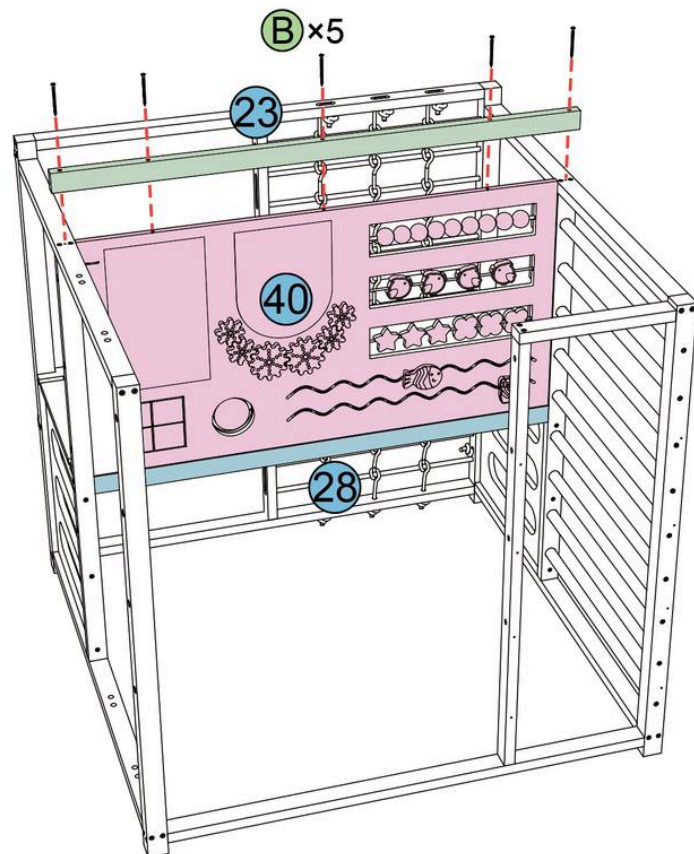


Step 2

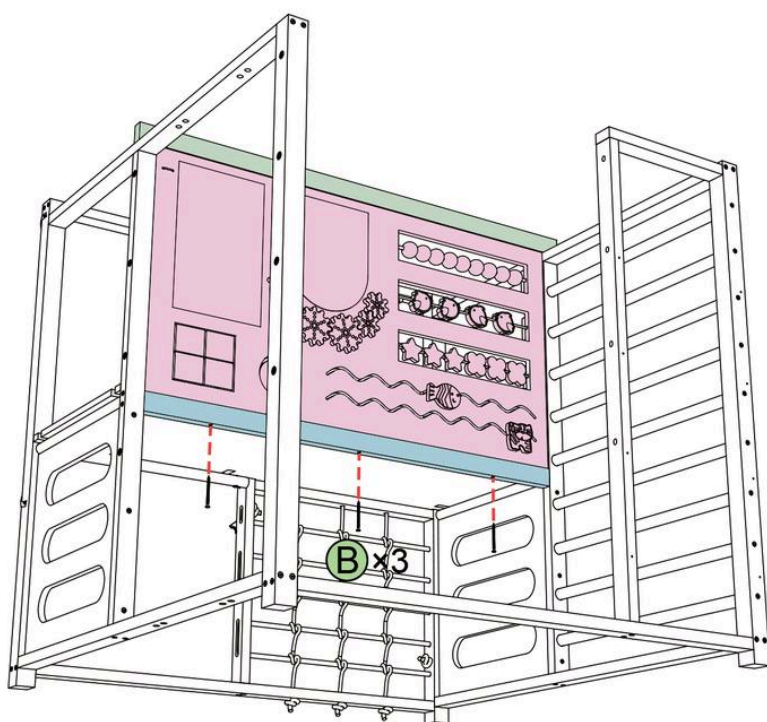



Step 3

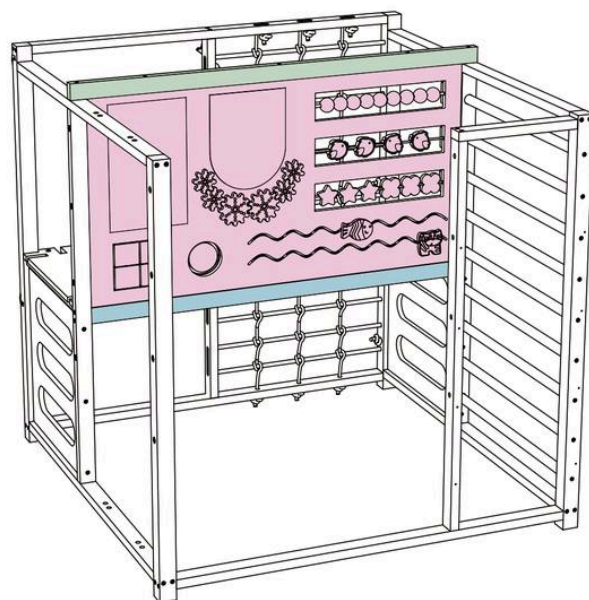

Slide board 40 into the groove of part 28. Insert part 23 on top of board 40 with the groove facing downward. Once board 40 is snug in place, screw part 23 into top of board 40, and part 28 into bottom of board 40 as shown



10-1

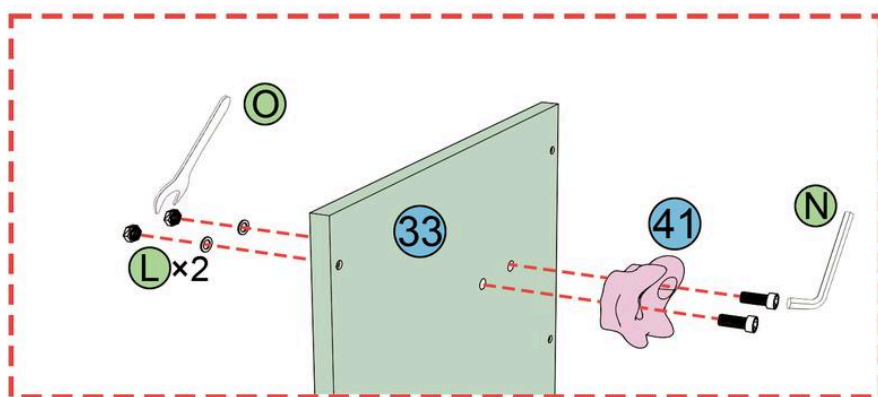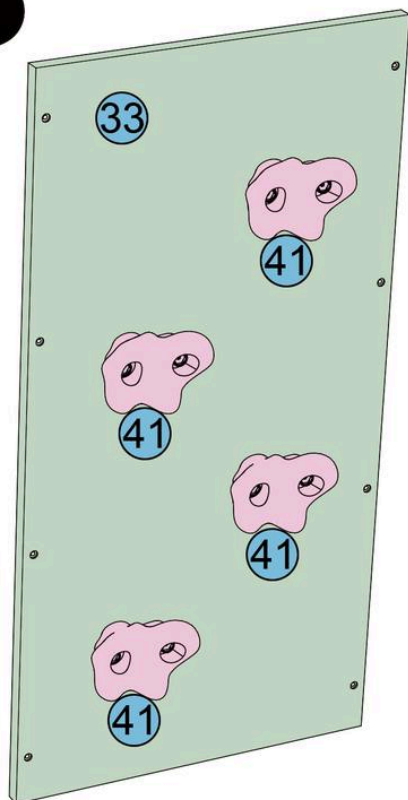



Note: Make sure the blue seal rim on the nut is facing outward towards you. You may need to twist very hard to secure (and if needed spray WD-40) being that it's meant to be very tight and secure for children to climb on!

L	 M10×35	8	N	8mm	1
			O	17mm	1


10-2


Attach Plastic safety caps over the nuts.

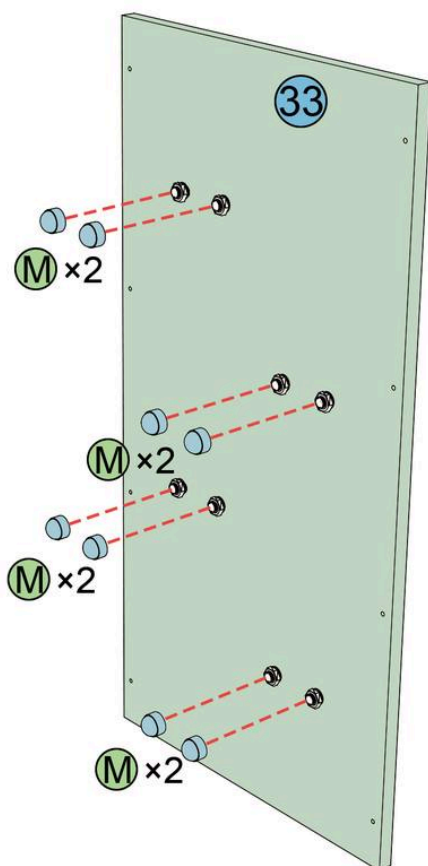



M	 M10×17×20	8
---	--	---

10-3

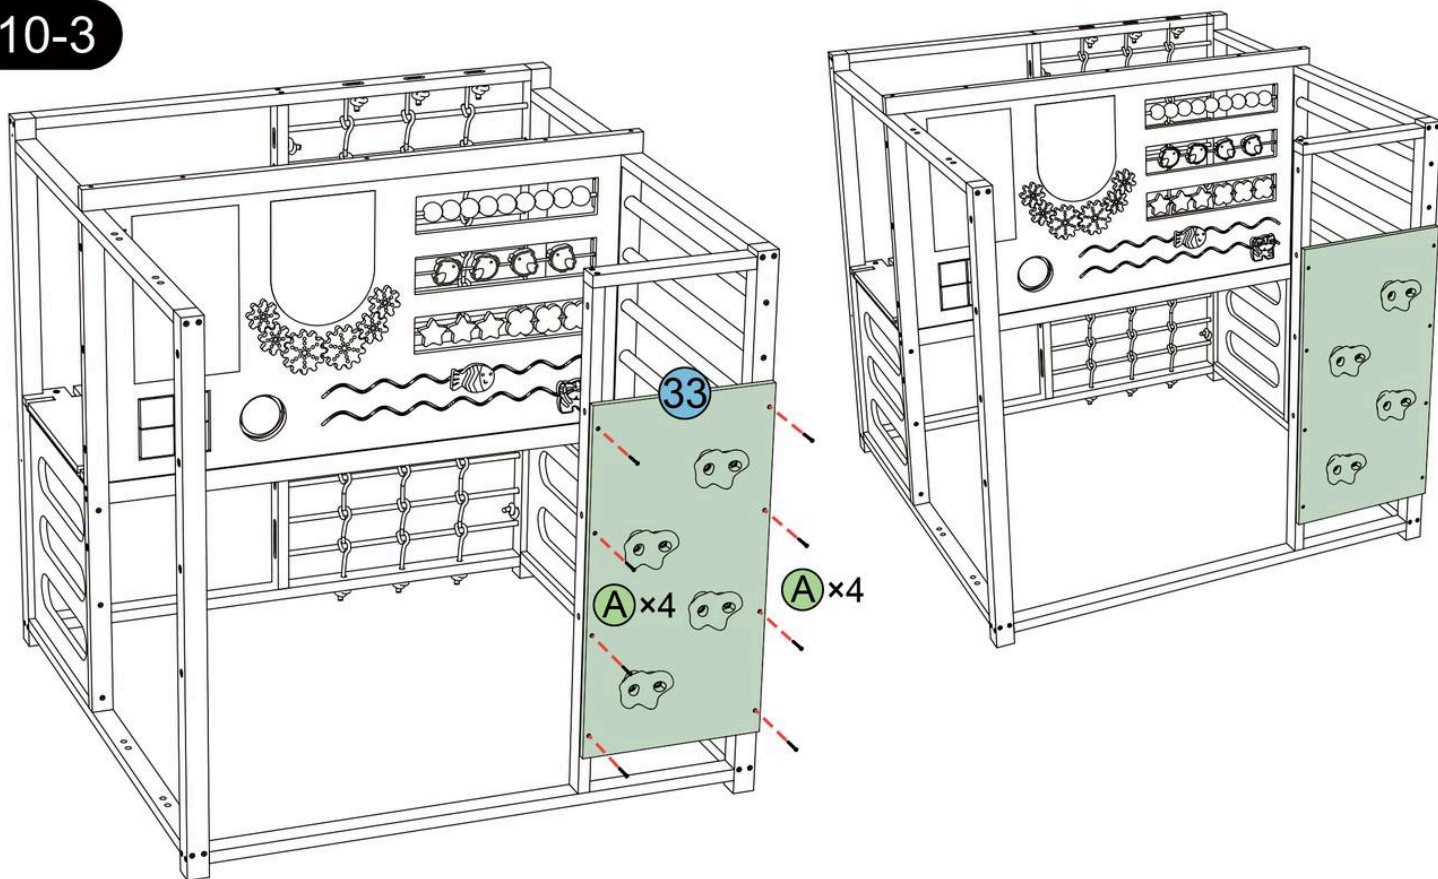

A  **M4x40** **8**


11-1

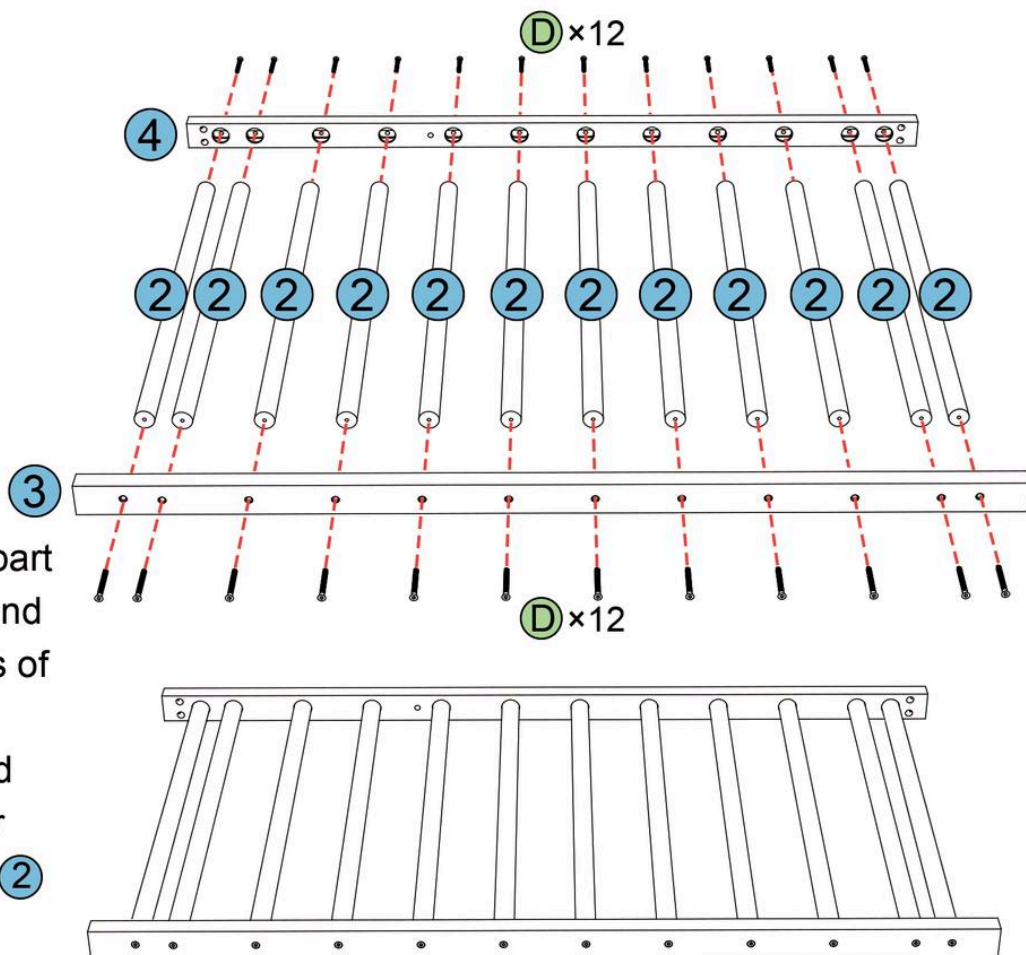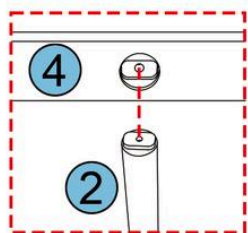

The protruding end of part **2** should correspond and fit into the groove holes of part **4** when installed. Install that side first and then install all the other sides of the rungs part **2**

D  **M7x50** **24**


12-1

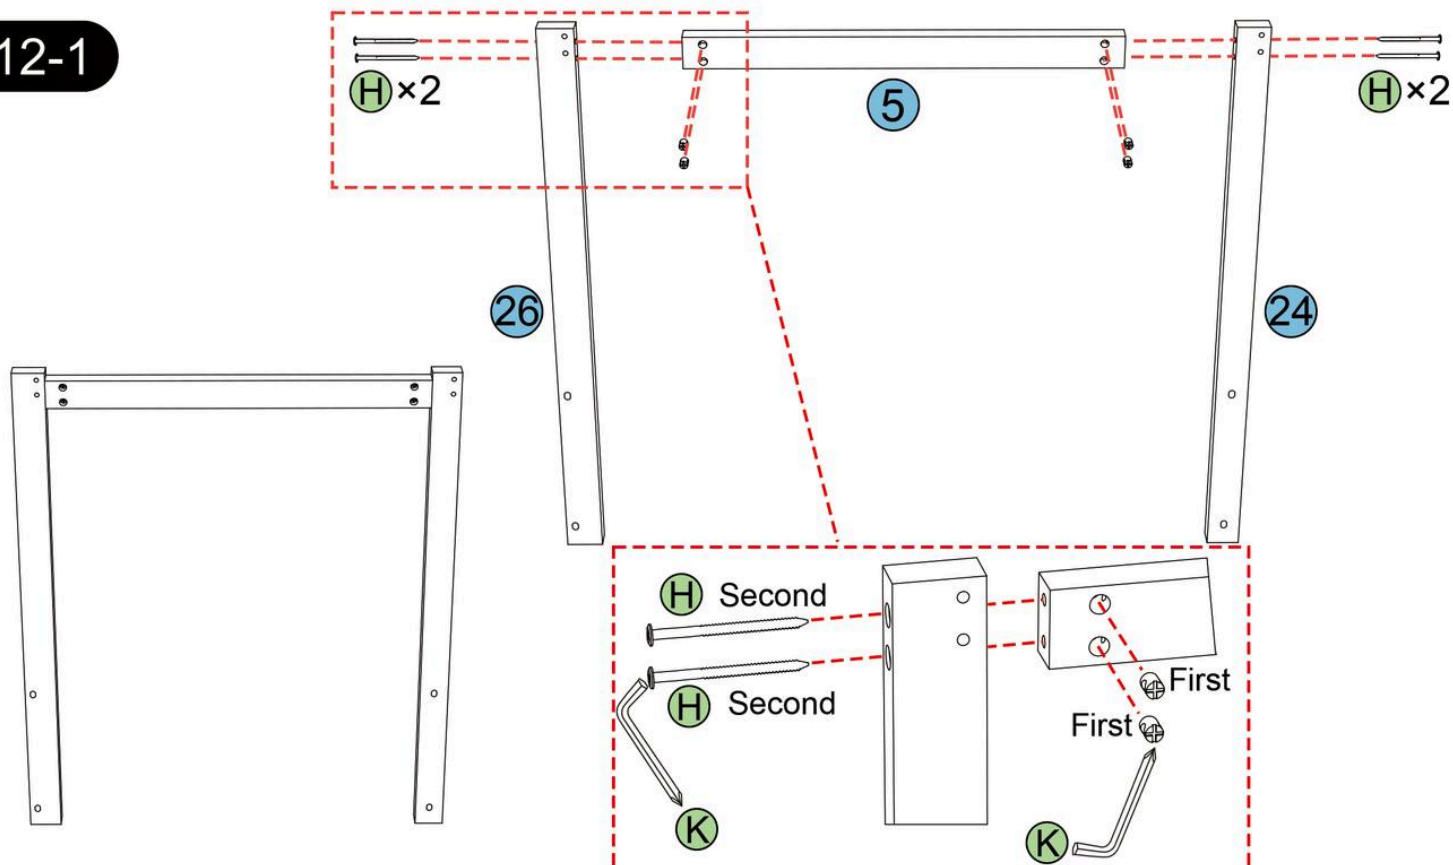

(H)	M6×80 M6×13	4
(K)	4mm	2


First: Put the connector in the hole with the crosshairs facing out. Use the Phillips screwdriver side of one tool part (K) to hold the connector stationary for the threading of the screw to go in, Second: Use the hex side of the other tool part (K) to thread the screw into the hole of the connector Repeat on both sides

13-1

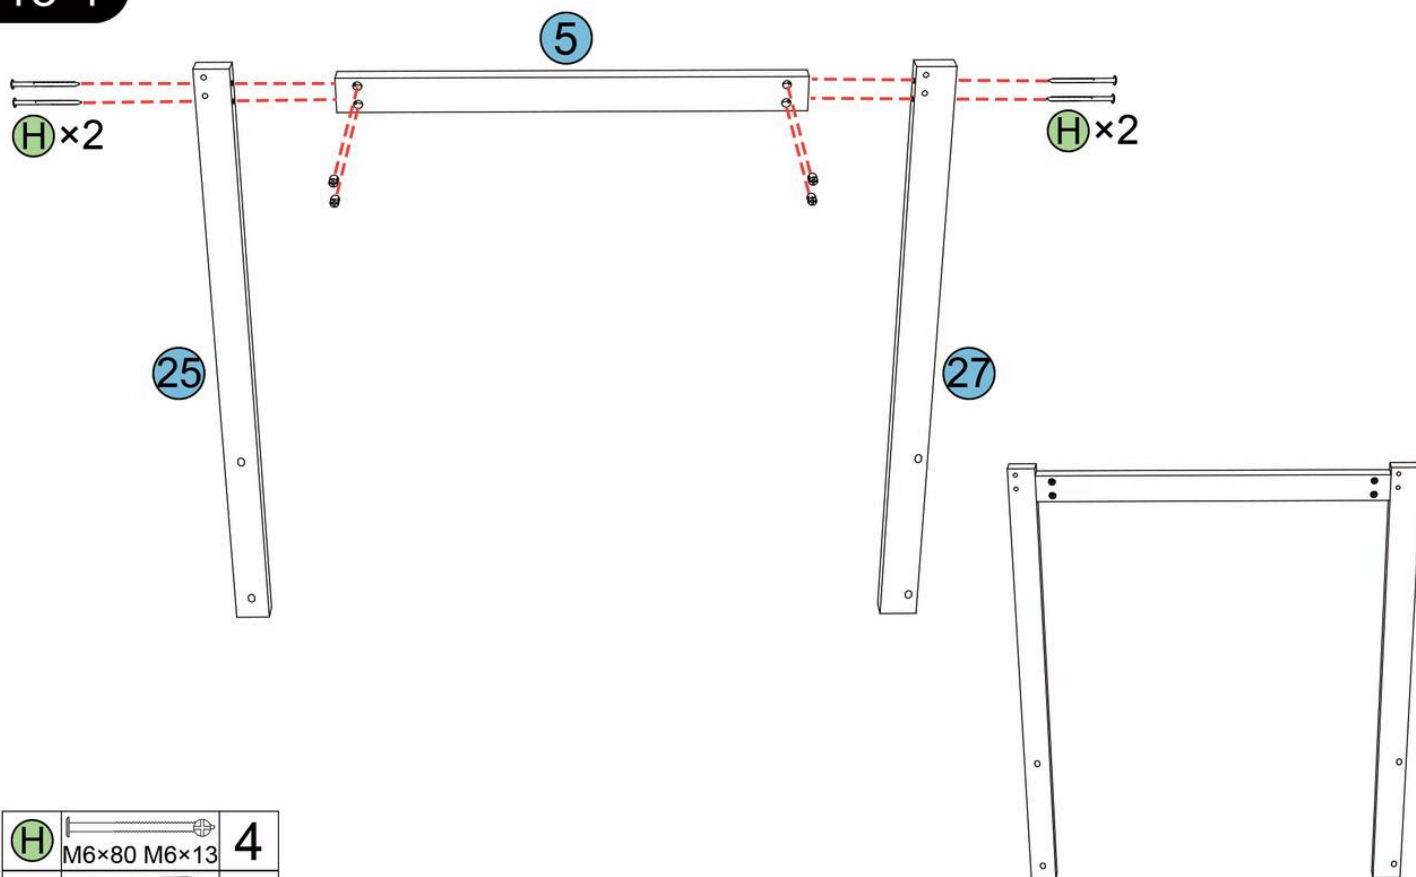

(H)	M6×80 M6×13	4
(K)	4mm	2


14-1

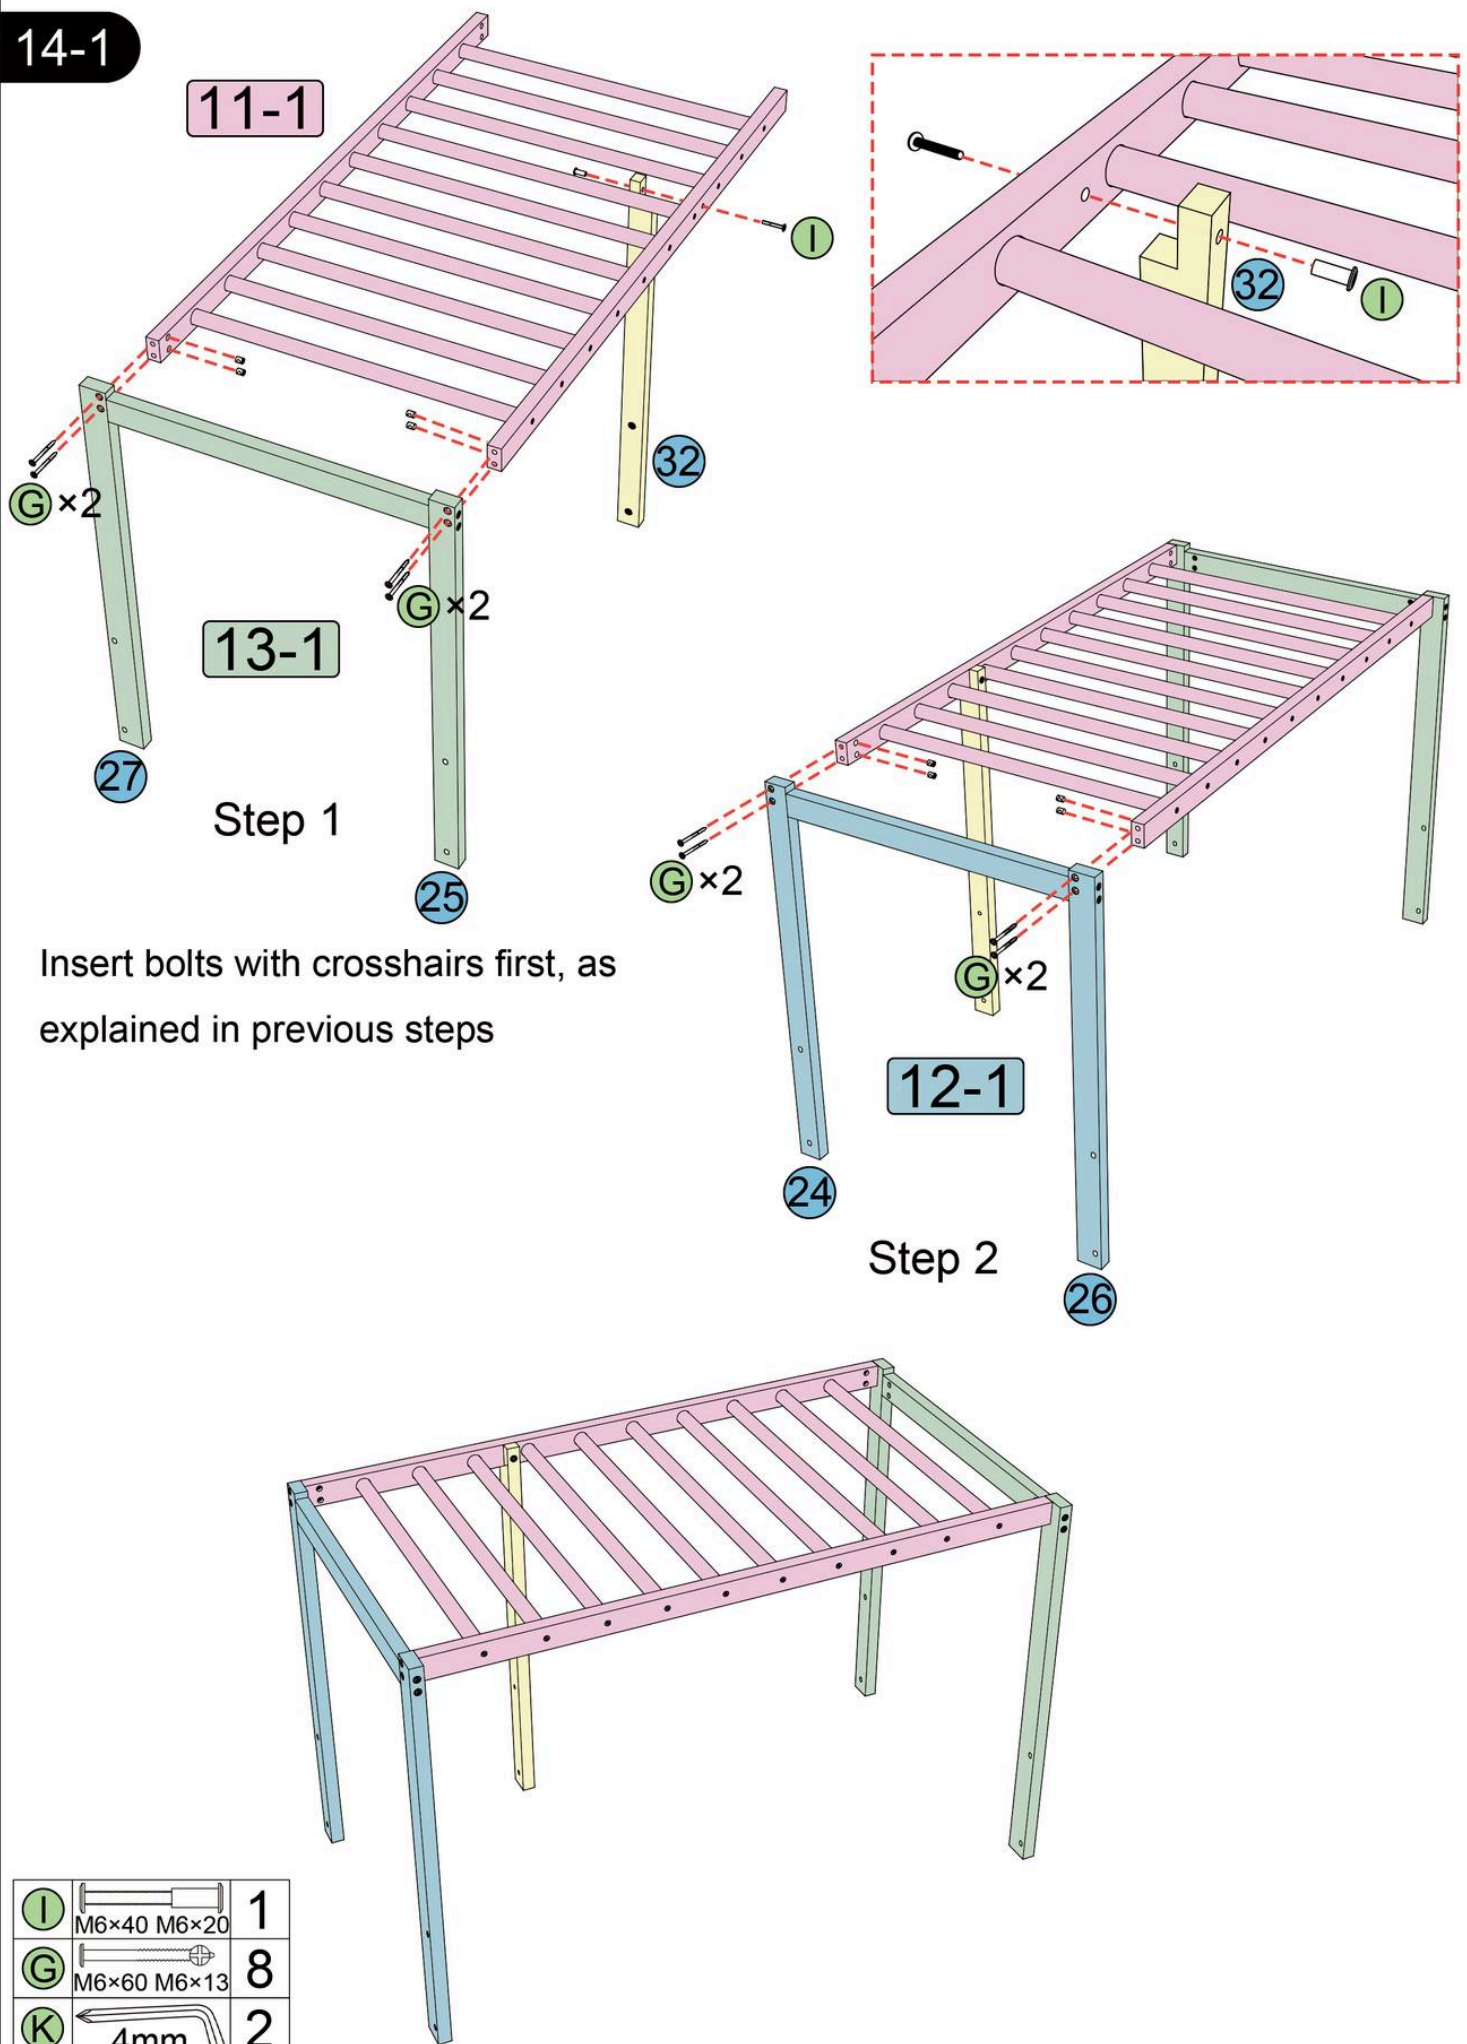


15-1

Adjust the height of Monkey bars to your desired level, remove all 10 (F) screws from the side beams, adjust to your desired height, and rescrew them in


SMALL

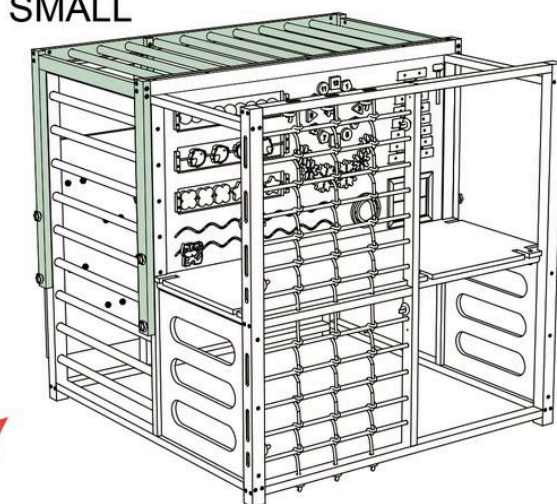




MEDIUM

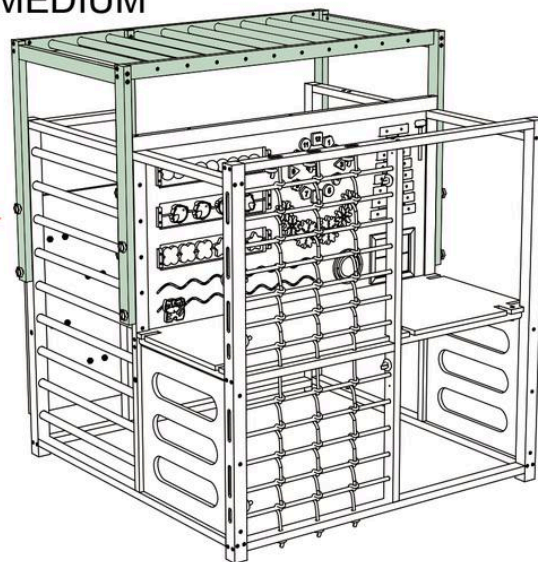


TALL

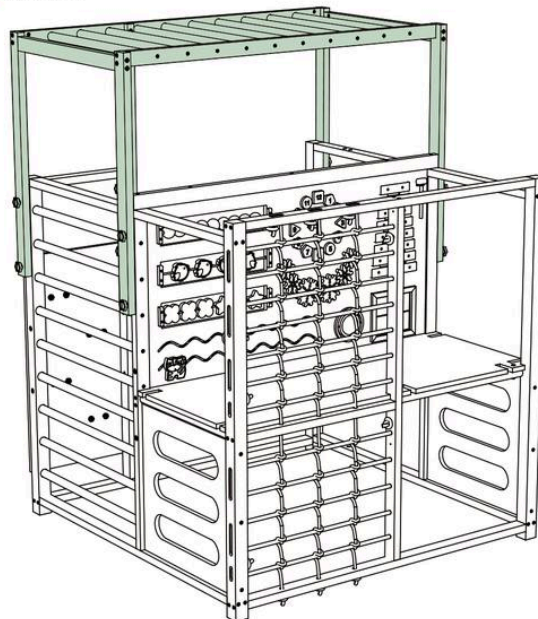


14-1

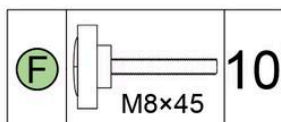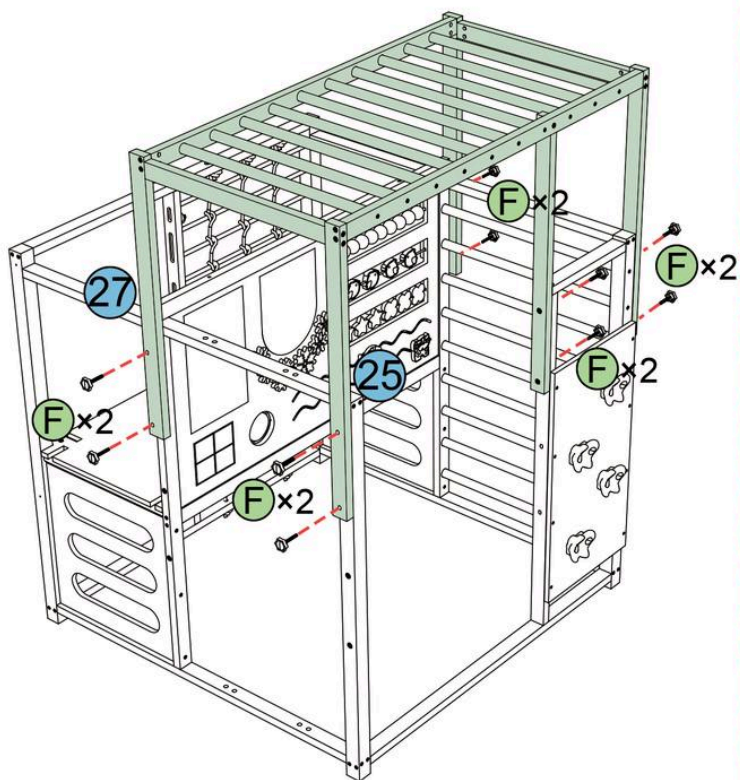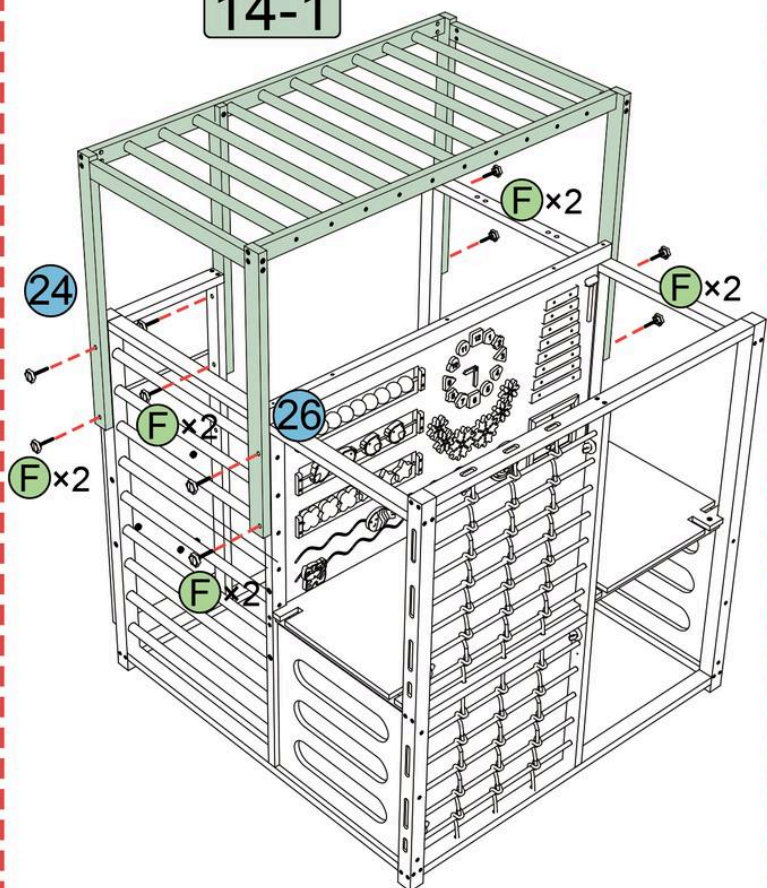


16-1

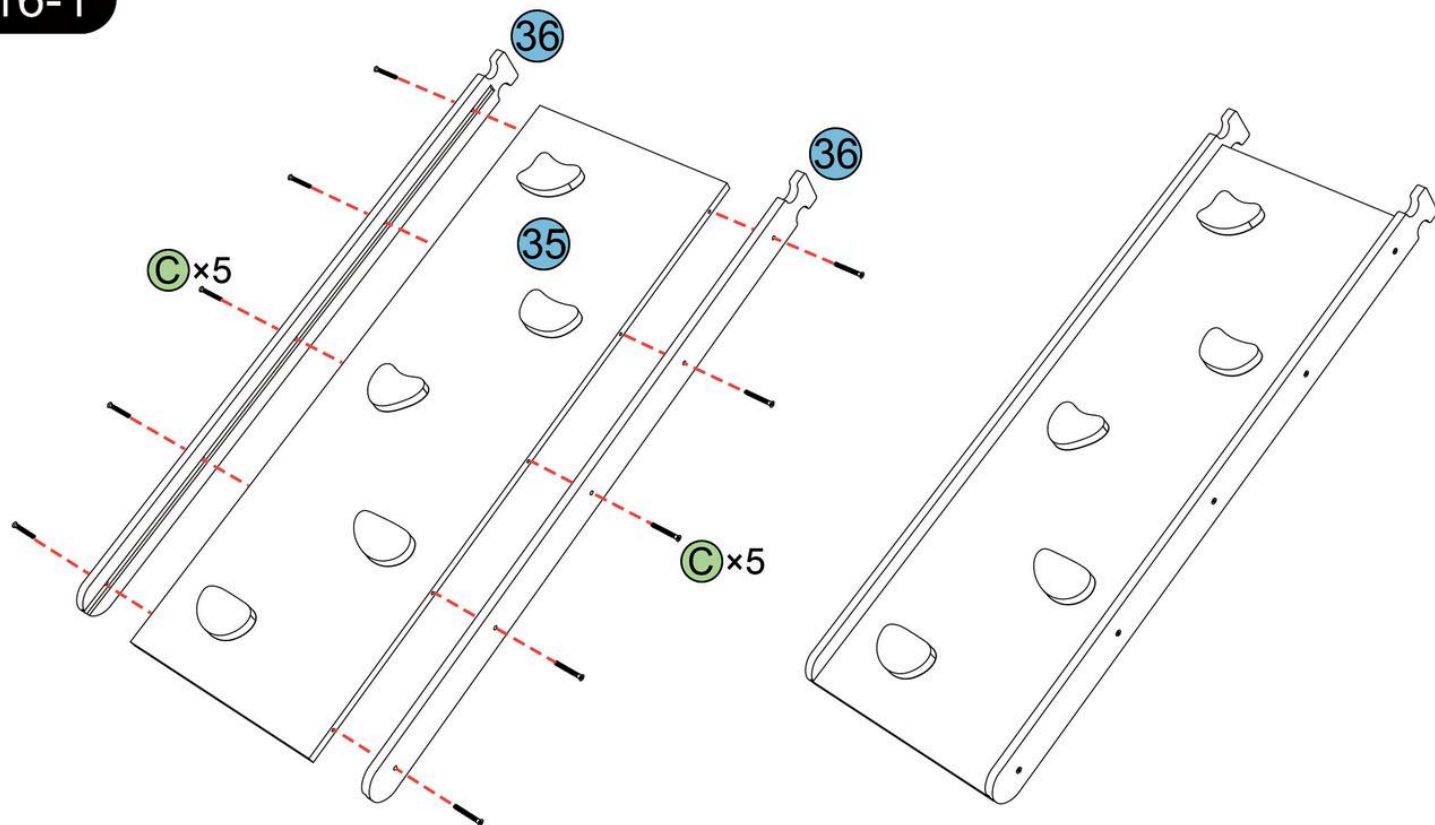


C  M7x40 10

16-2

The slide can be used in 3 positions, based on your preference

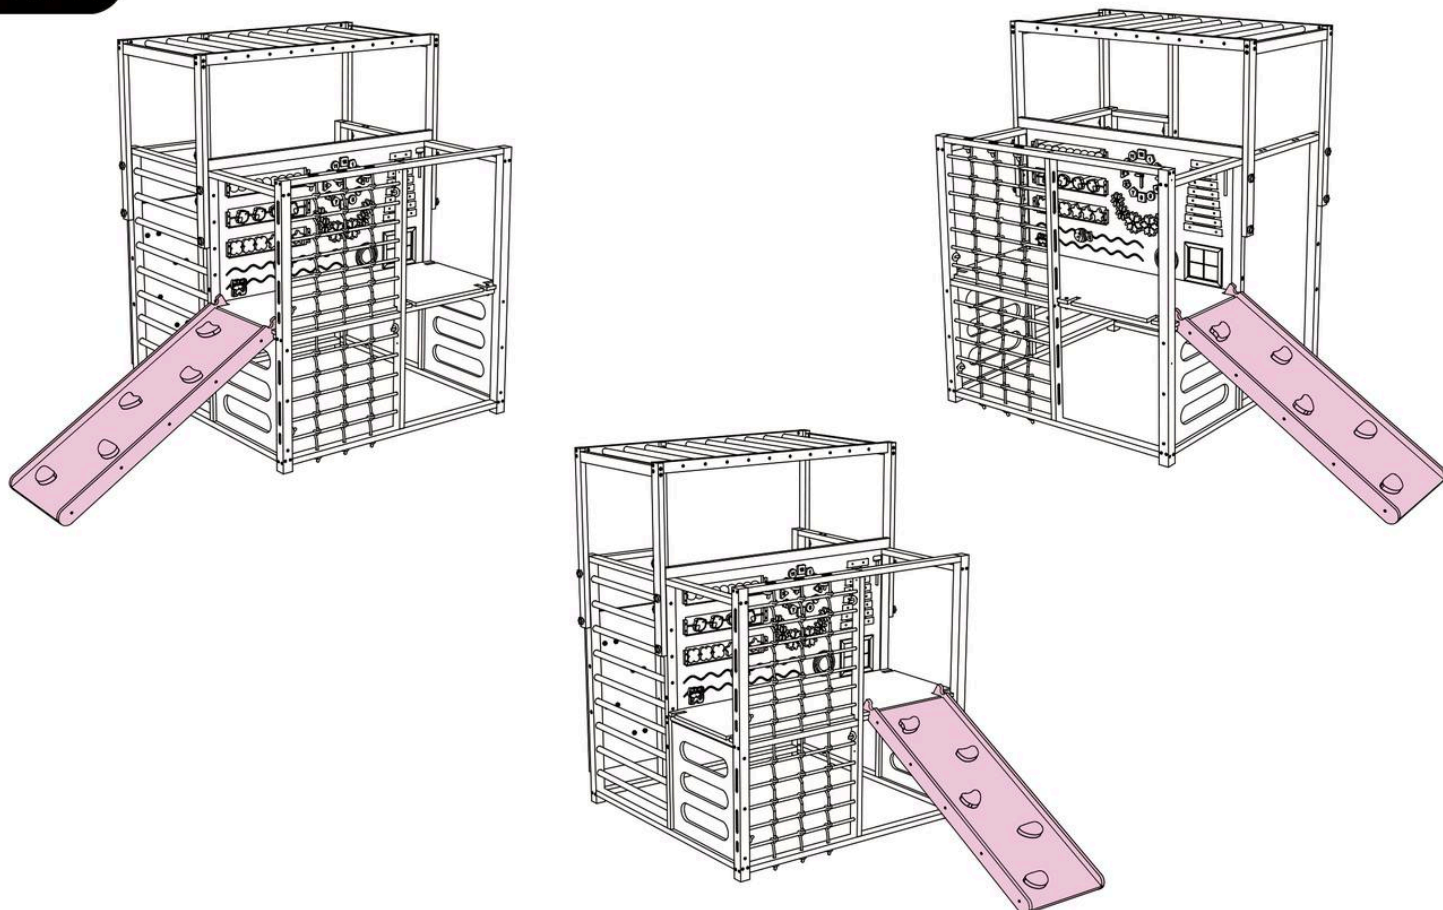

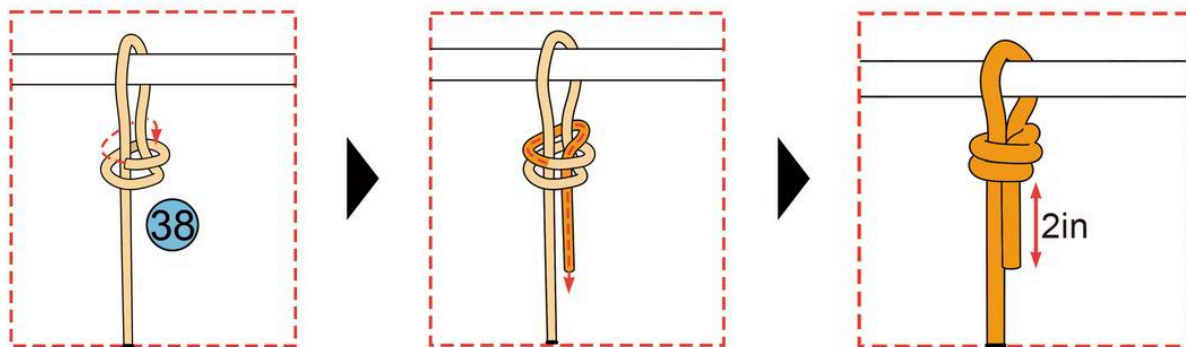

The remaining length of the rope after completing the knot should be at least 2 inches

