

avenlur


Baby Walker by Avenlur



Need Help?

CALL US AT 888.697.3931 / M-F 9AM - 5PM PT (12PM - -8PM ET)
OR EMAIL US AT INFO@AVENLUR.COM


⚠ WARNING Adult assembly required. Small parts – choking hazard.

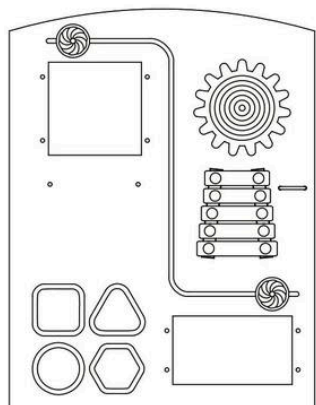


1 ×1 12.5in



2 ×1

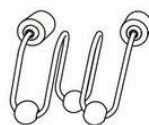


4 ×1

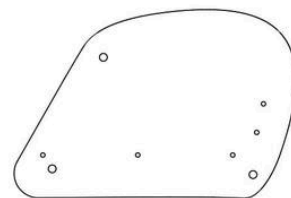

6 ×2 11.5in



3 ×1




5 ×1



7 ×1 11.5in




8 ×1 11.5in

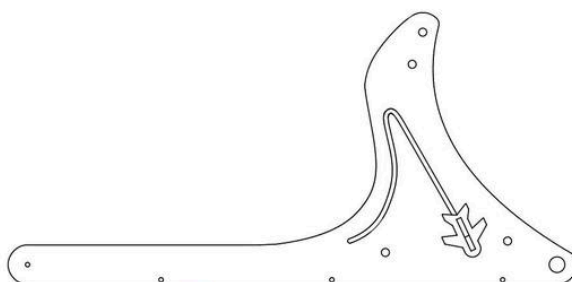

9 ×1 23in



10 ×1 12.6in

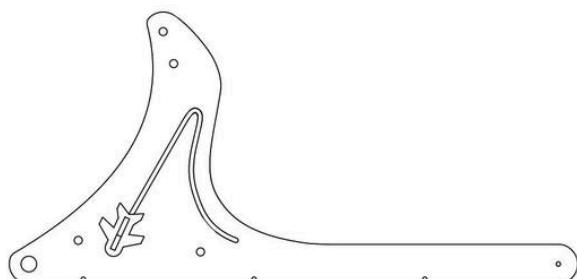

11 ×1 23in




12 ×2 3.5in



13 ×1 13.7in



14 ×2 3.5in

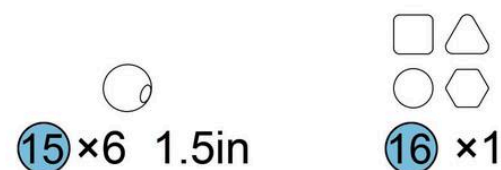

15 ×6 1.5in

16 ×1



M4×30

A ×8



M4×16

B ×8



M4×18

C ×2



M4×30

D ×10



M4×30

E ×2




M4×6.2×1.2

F ×2



M4×10×1

G ×2

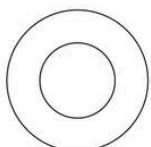


M16×30×2

H ×2




M6×10

I ×2



M8×20×2

J ×2




M6×10 M6×15

K ×6



2.5mm


L ×1




4mm

M ×2


Step 1

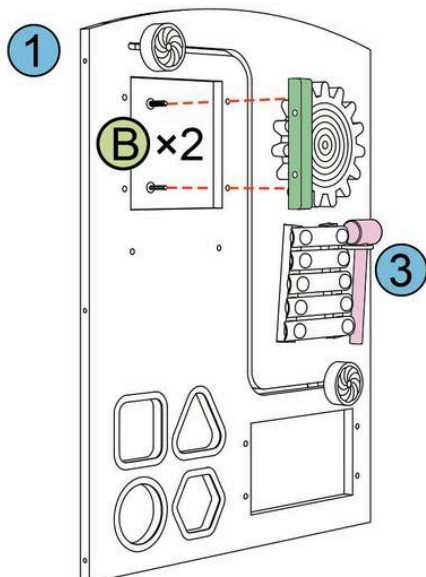

Step 1: Secure the green-marked wooden strip to Board ① using Screw (B).

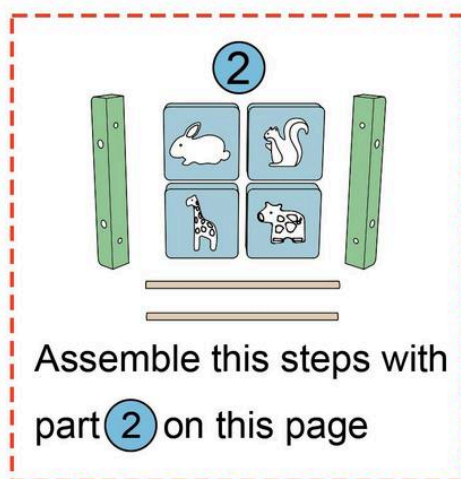


Step 2

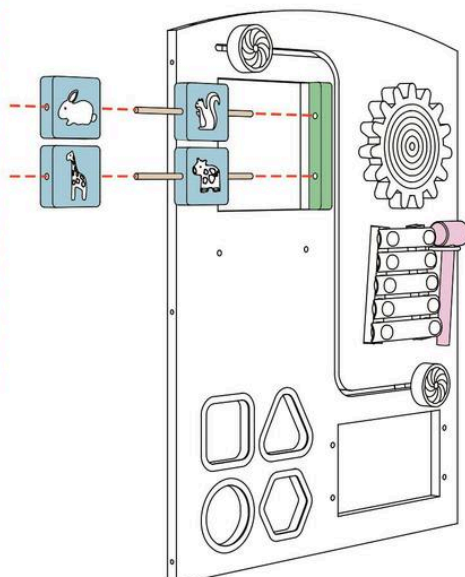


Step 2: Thread the four blue-marked wooden blocks onto two iron rods and insert them into the holes on the green-marked wooden part.


Step 3

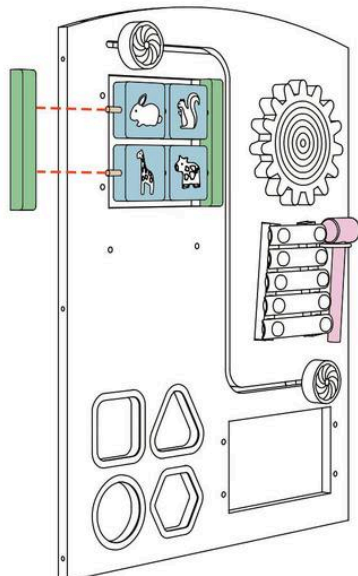

Step 3: Insert the iron rod holes on the green-marked wooden strip onto the corresponding iron rods.

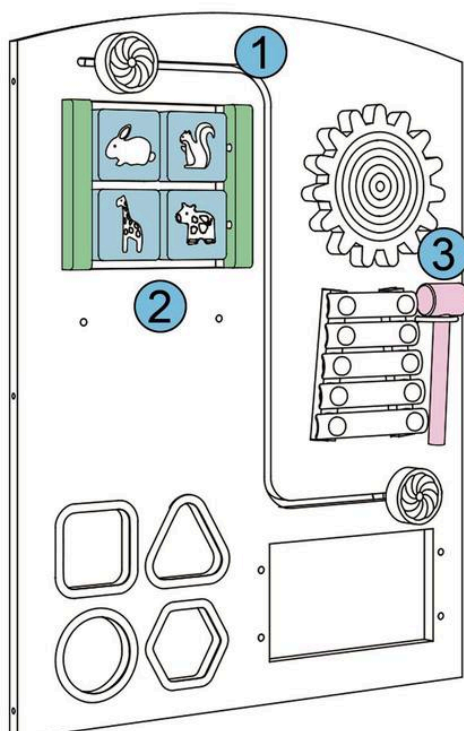


Step 4

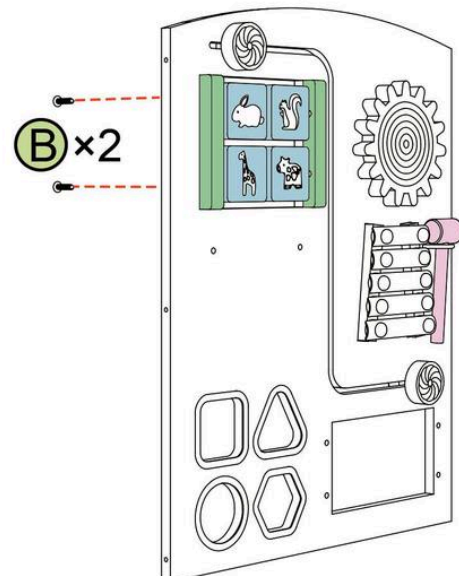

Step 4: Fasten the green-marked wooden strip with Screw B to complete the assembly.


02-1

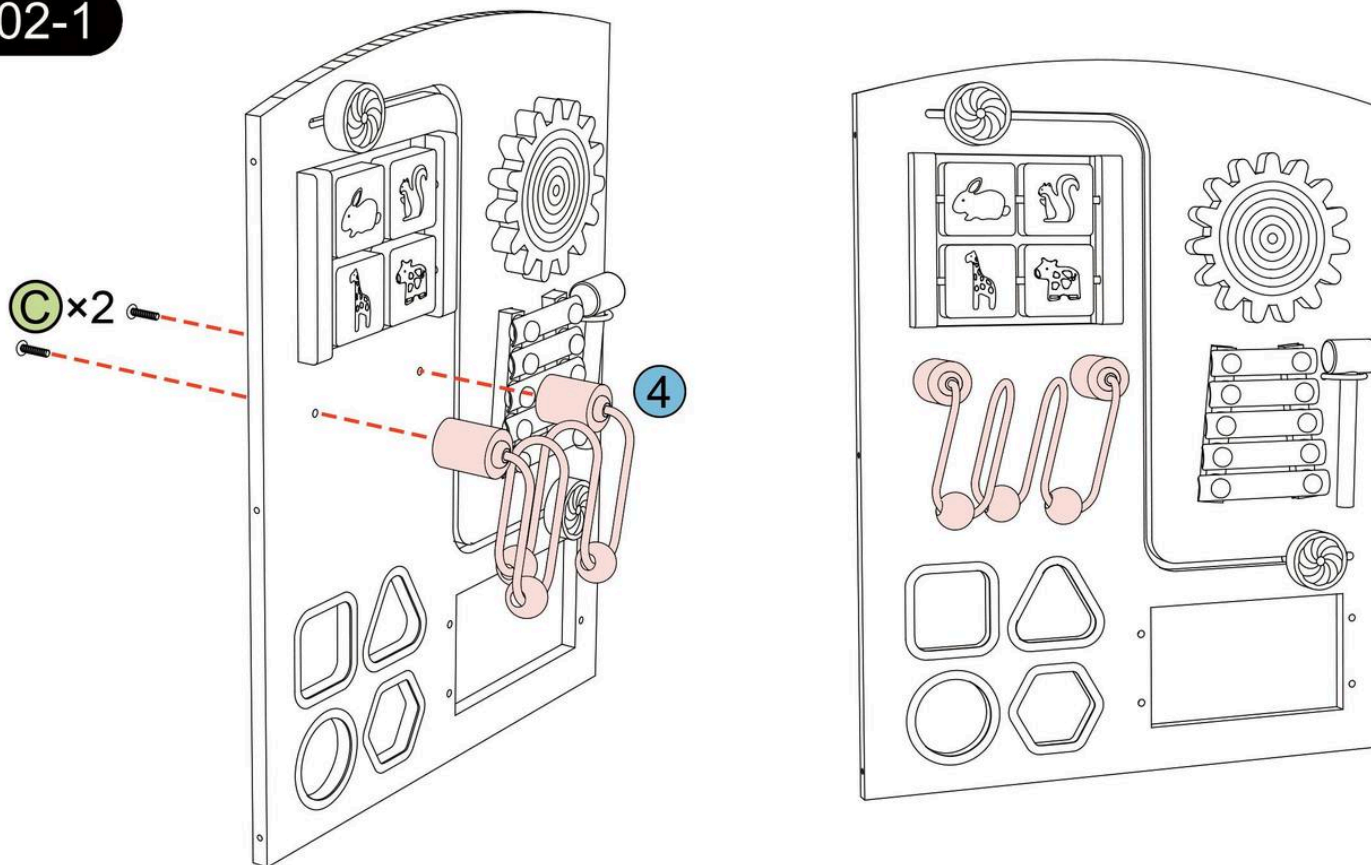

C  M4×18 2


03-1

Step 1

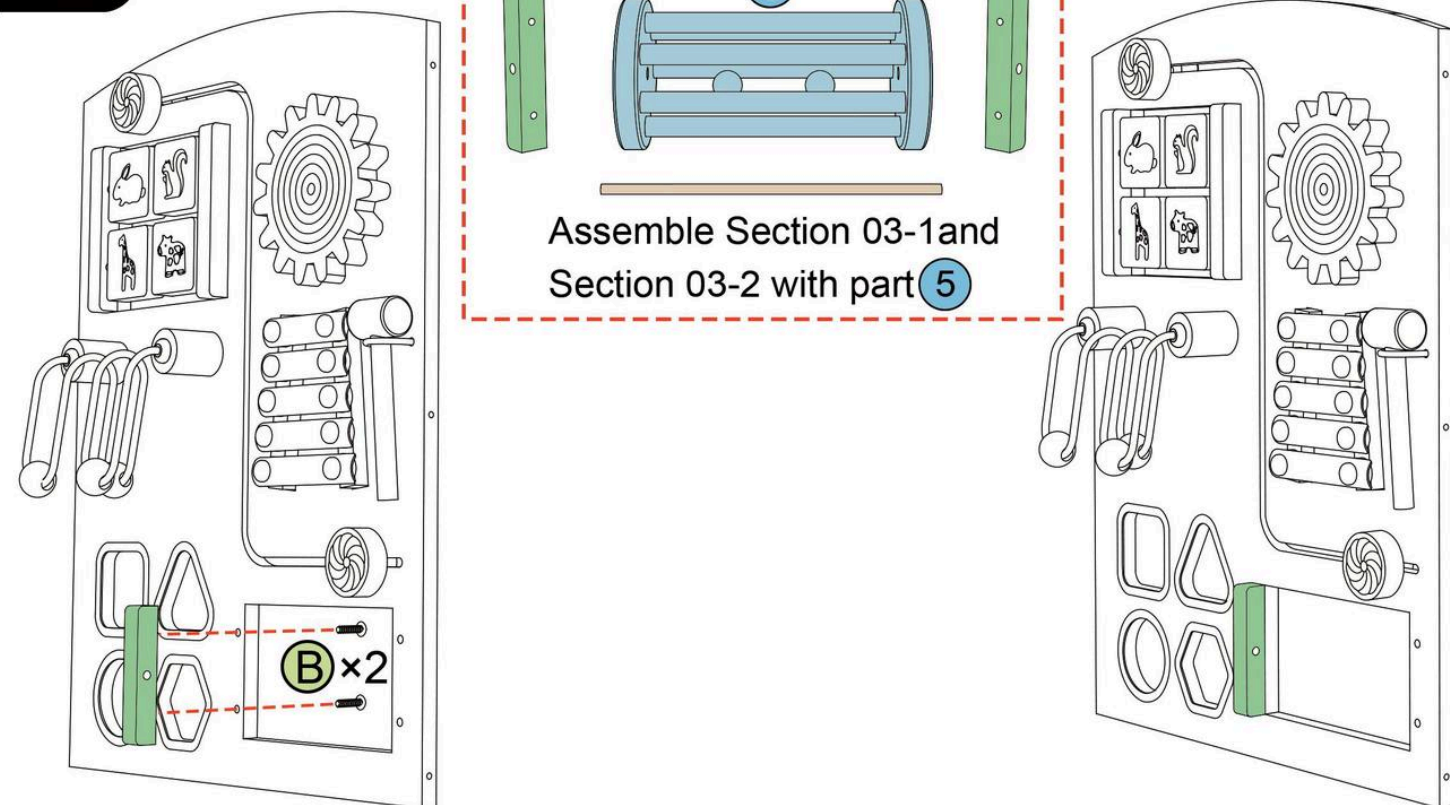


B  M4×16 2



Step 2

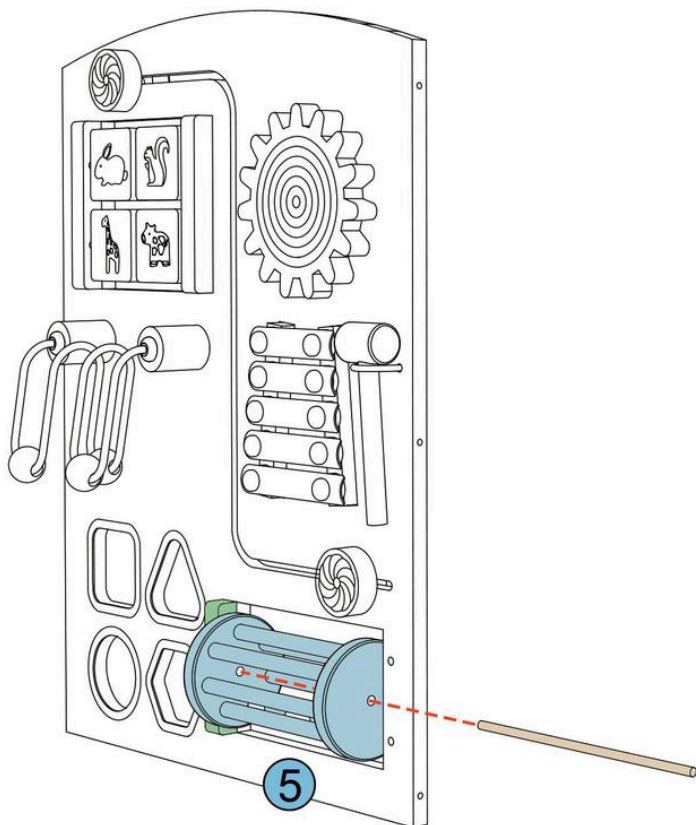

Step 3

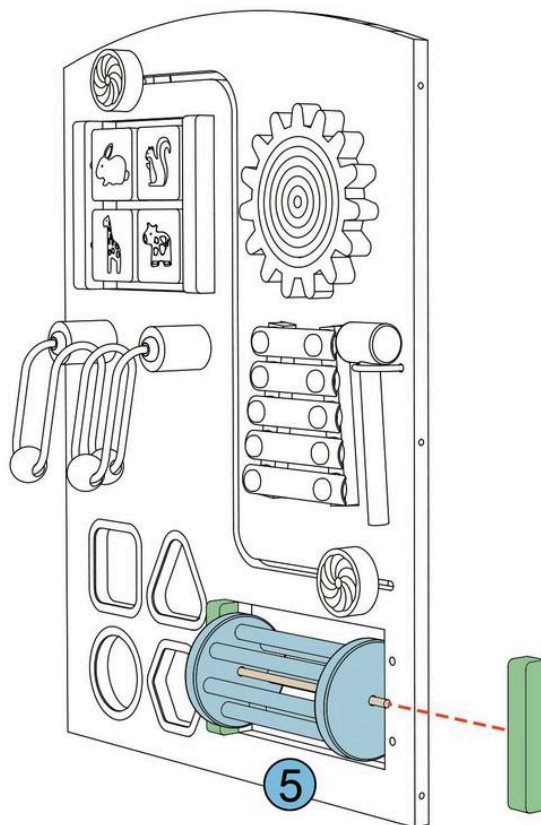


Step 4

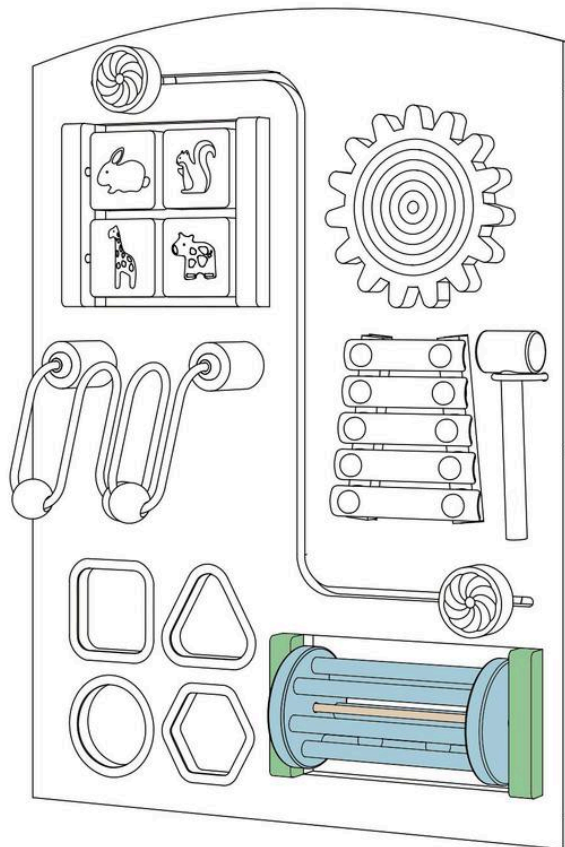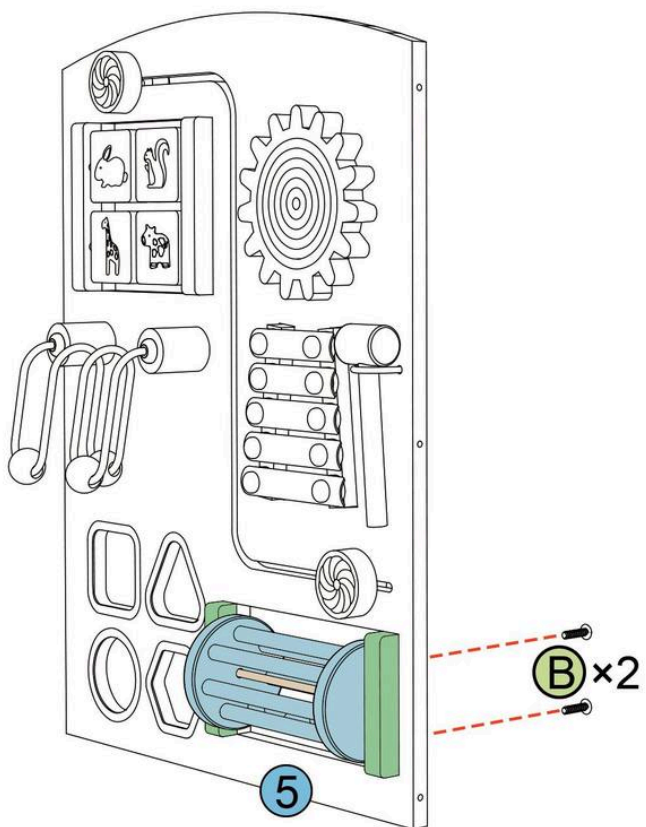


04-1


Step 1

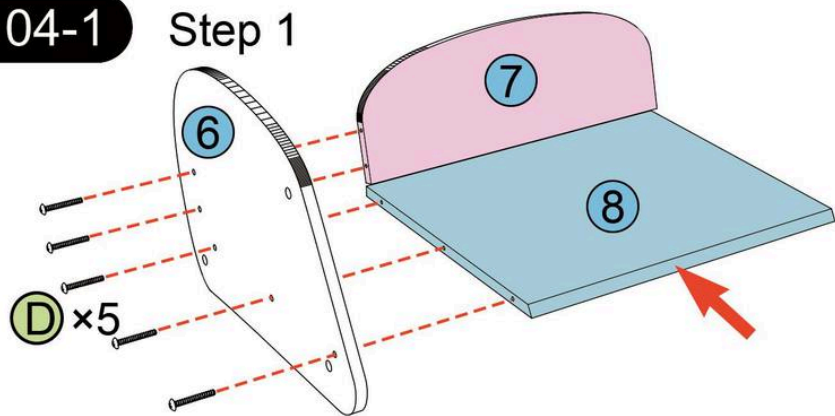


Ensure the angle direction of the bevel marked with the red arrow
Part 8 is the same as shown

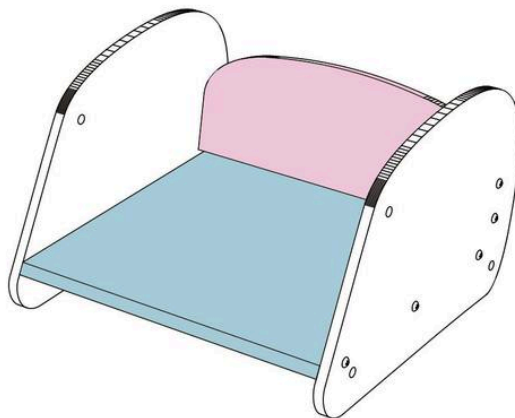


Step 2

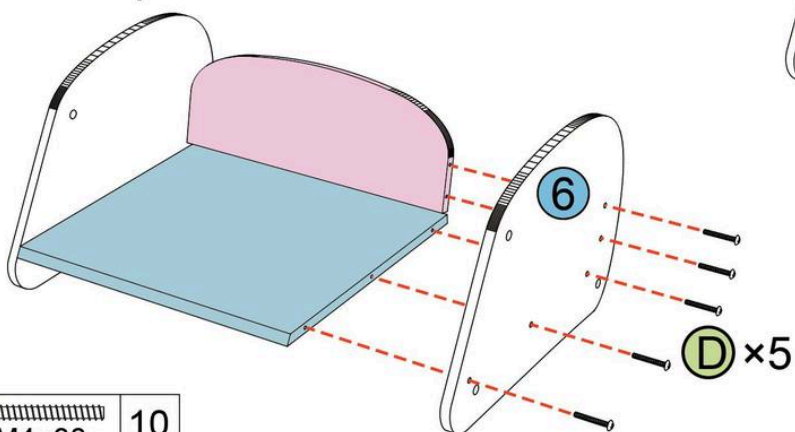

(D)		10
	M4×30	

05-1


9

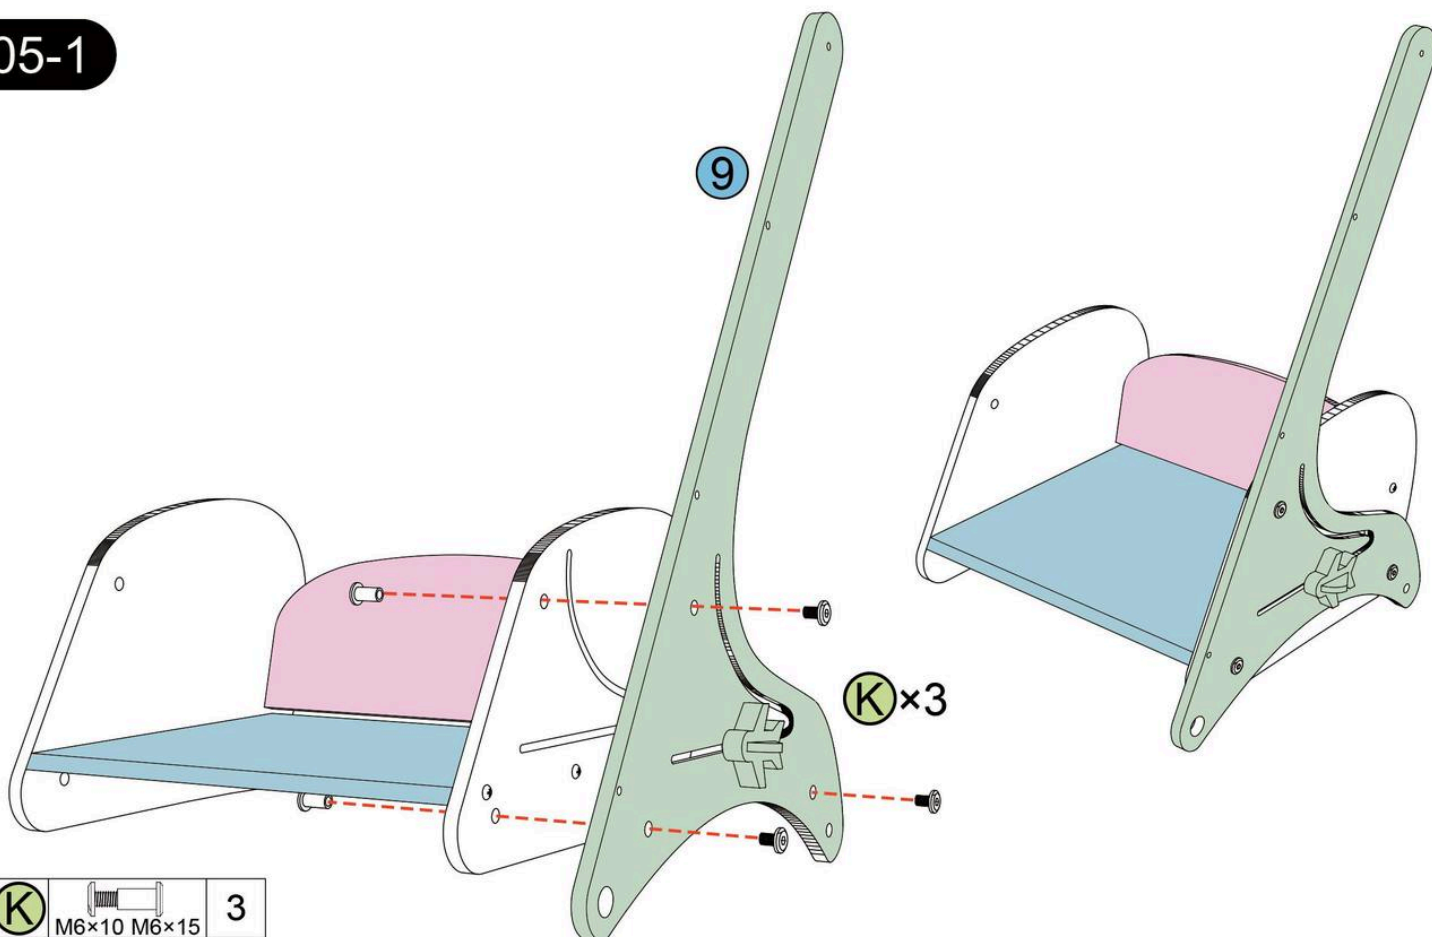


(K) × 3

(K)		3
	M6×10 M6×15	
(M)		2
	4mm	


05-2

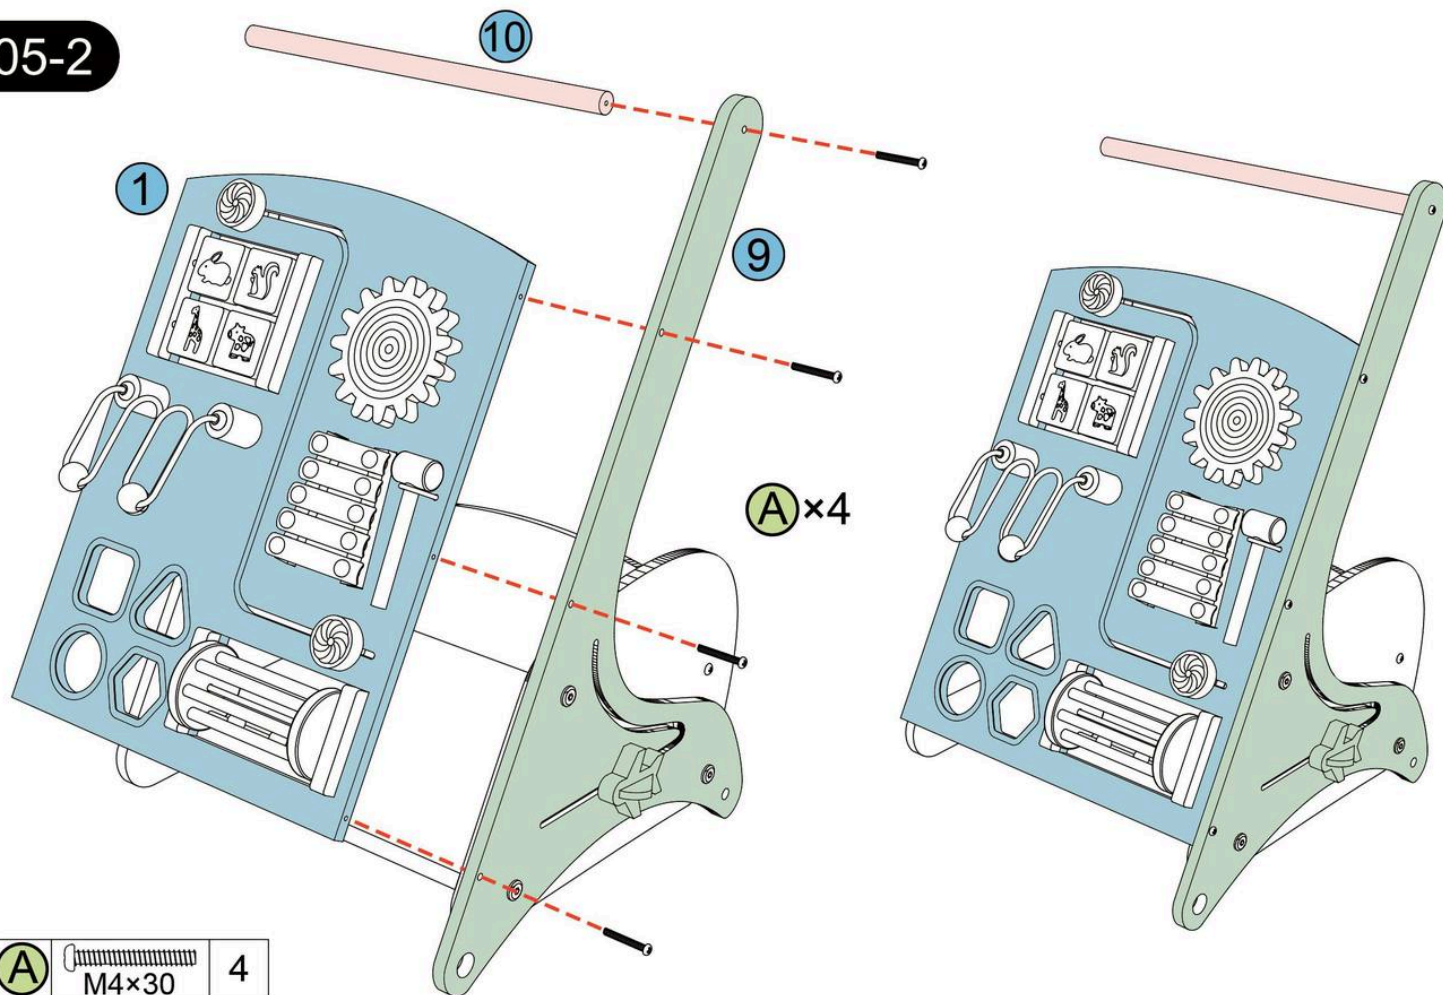


05-3

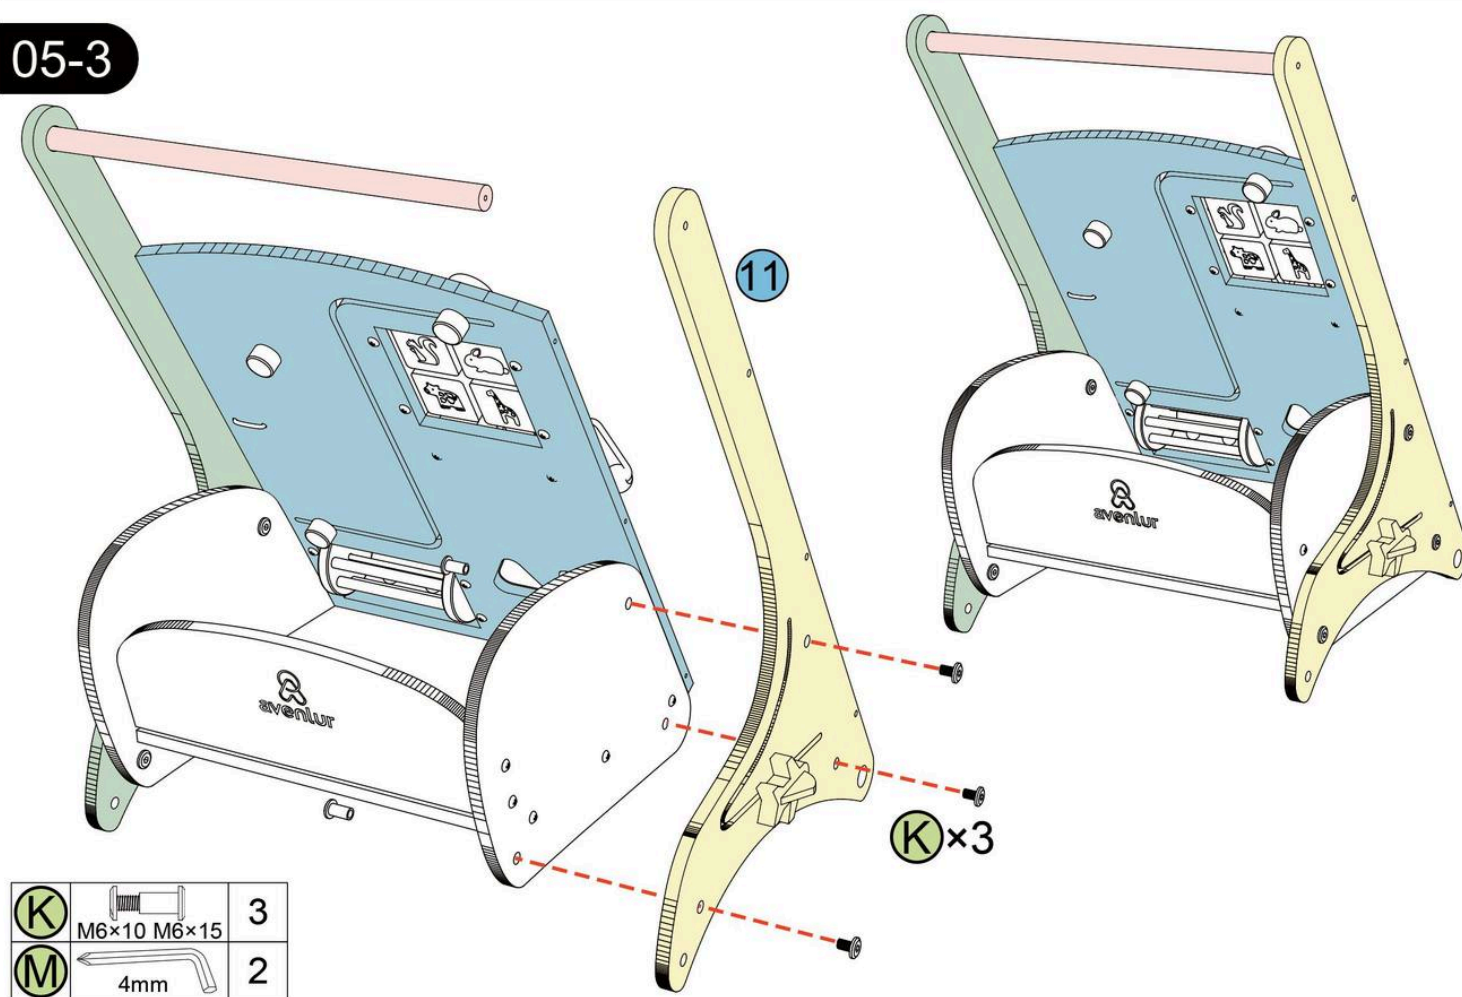


05-4


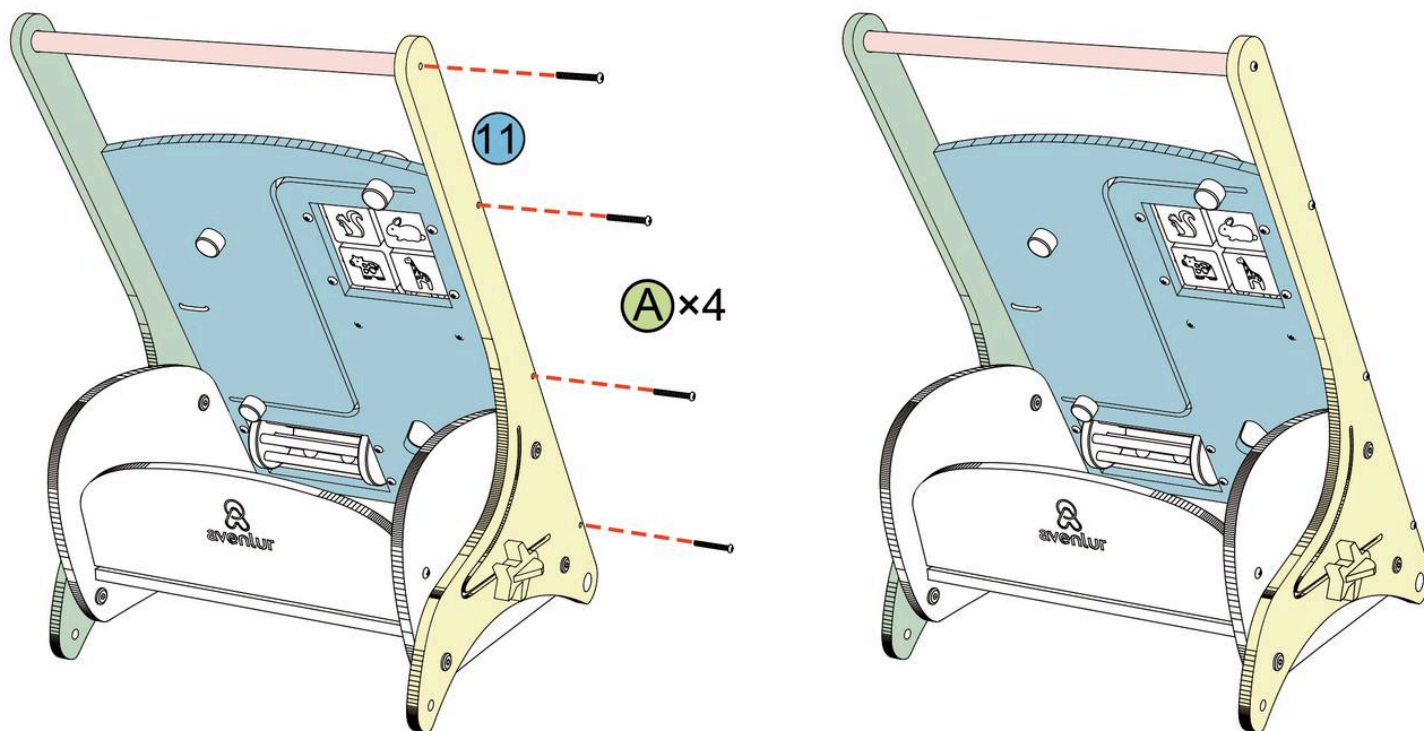


(A)		4
	M4×30	



06-1

Please tighten screws

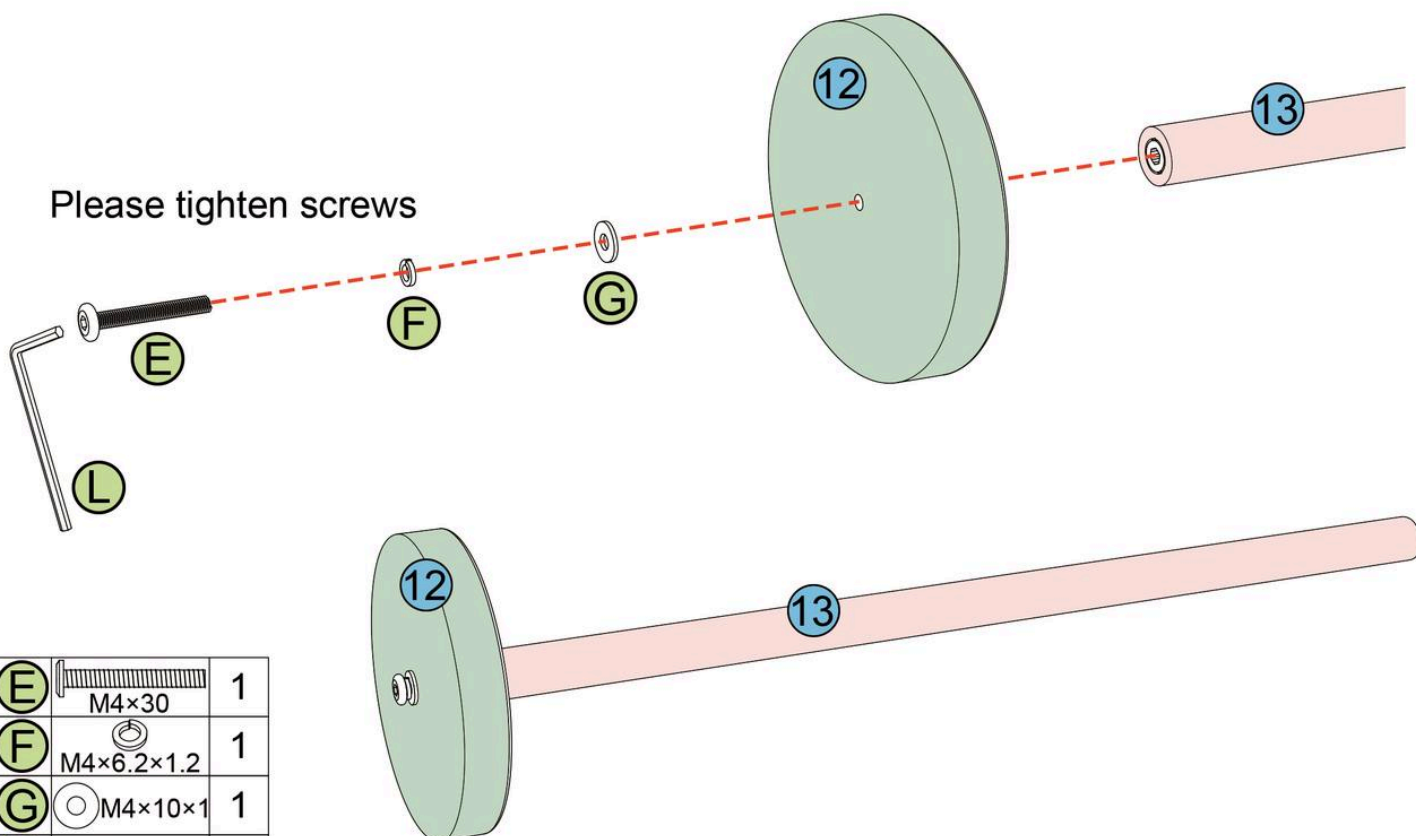




(E)		1
	M4×30	
(F)		1
	M4×6.2×1.2	
(G)		1
	M4×10×1	
(L)		1
	2.5mm	

06-2

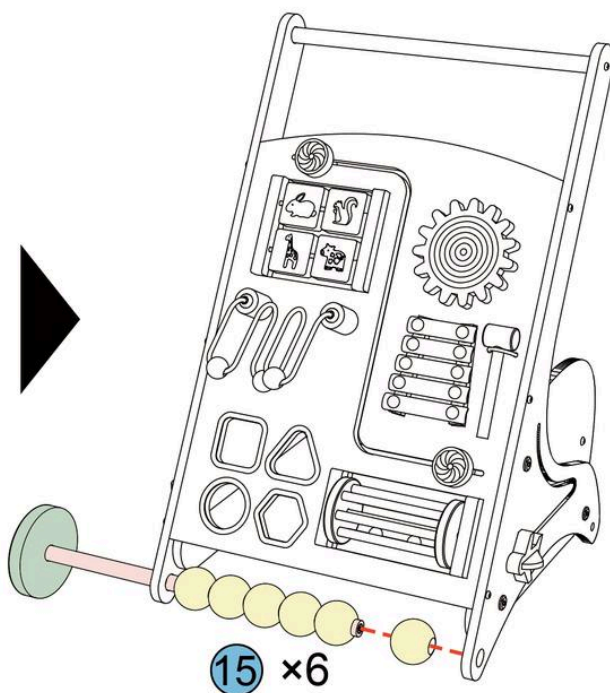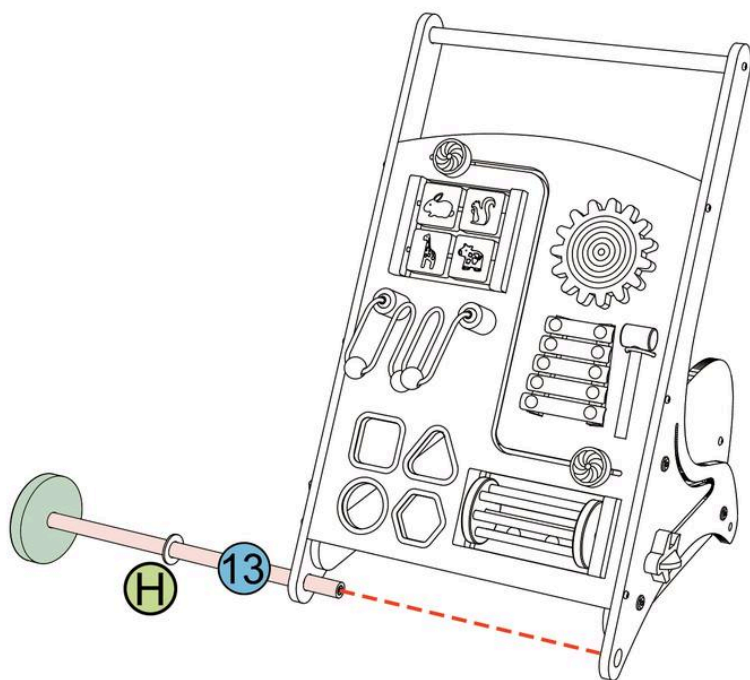


(H)		1
M16×30×2		

06-3

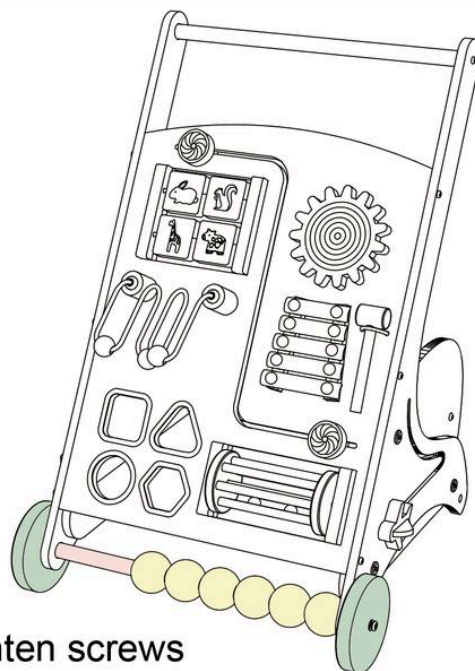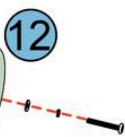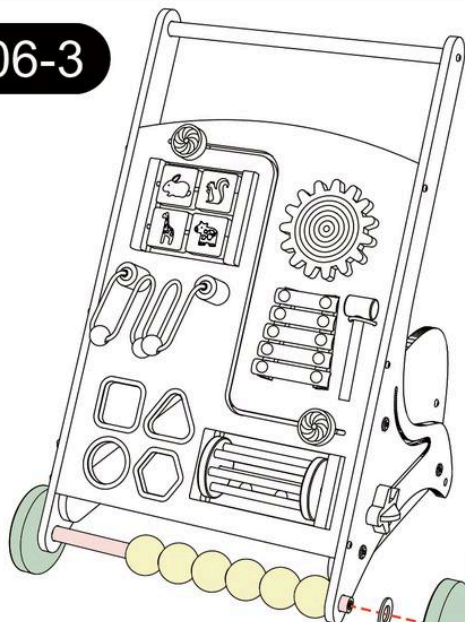


Please tighten screws

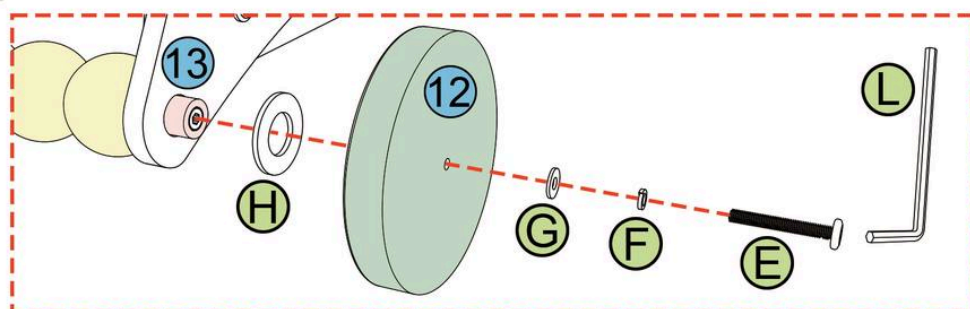

(H)		1
M16×30×2		
(E)		1
M4×30		
(F)		1
M4×6.2×1.2		
(G)		1
M4×10×1		
(L)		1
2.5mm		



07-1

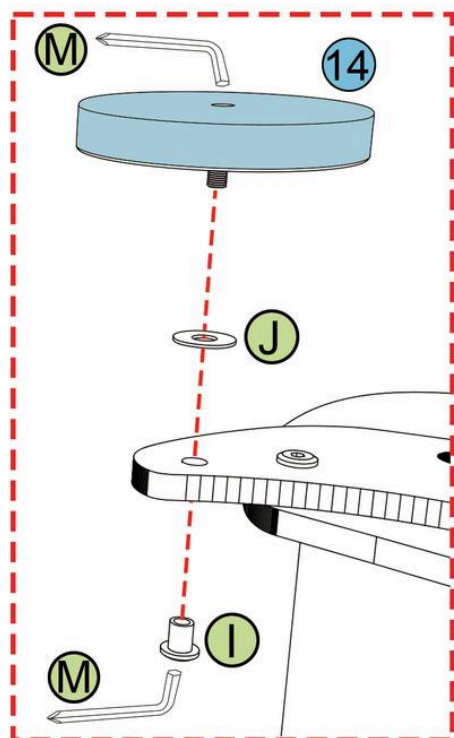

First, pass the Screw **I** through the mounting hole of the wooden board.

Then slide the washer **J** onto the Screw **I**, and finally use two **M** wrenches to tighten Part **14** and Screw **I** securely.

Assemble both Parts **14** following this same step.

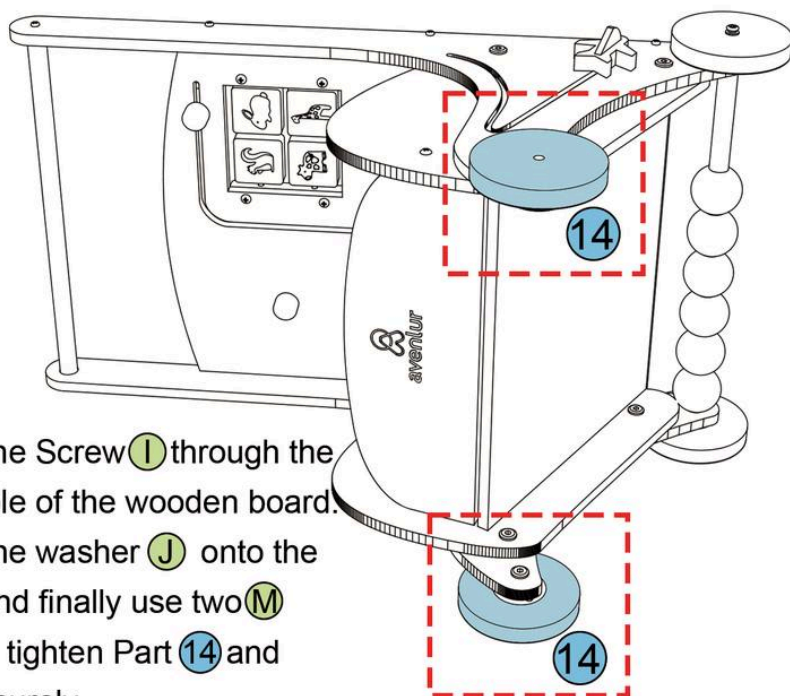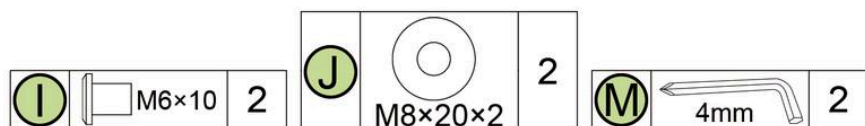

08-1

